

EL-O-Matic F-Series

Rack and Pinion Pneumatic Actuators



This page intentionally left blank

Table of Contents

Section 1: Before You Start

| | | |
|-----|--|---|
| 1.1 | Installation, Operation and Maintenance Reference Documents..... | 1 |
| 1.2 | Warehouse Storage..... | 2 |
| 1.3 | On-Site Storage..... | 2 |

Section 2: Introduction

| | | |
|-----|---------------------|---|
| 2.1 | Identification..... | 3 |
| 2.2 | Intended Use..... | 5 |
| 2.3 | Specifications..... | 5 |

Section 3: Configuration Code

Section 4: Installation

| | | |
|-------|---|----|
| 4.1 | Before You Start..... | 9 |
| 4.2 | Actuator Rotation Direction..... | 9 |
| 4.2.1 | Valve Rotation..... | 9 |
| 4.2.2 | Position After Failure..... | 10 |
| 4.3 | Principles of Operation..... | 10 |
| 4.3.1 | Solenoid Valve..... | 10 |
| 4.3.2 | Ingress Protection (IP) rating..... | 11 |
| 4.3.3 | Double-Acting Actuators..... | 12 |
| 4.3.4 | Spring-Return Actuators..... | 13 |
| 4.4 | Actuator Assembly Codes..... | 14 |
| 4.5 | Actuator to Valve Installation..... | 15 |
| 4.6 | Mounting of control and feedback accessories..... | 18 |
| 4.7 | Recommended Tubing Sizes..... | 18 |

Section 5: Mechanical Stroke Adjustment

| | | |
|-------|------------------------------|----|
| 5.1 | Travel Stop Adjustment..... | 20 |
| 5.1.1 | Double-Acting Actuators..... | 20 |
| 5.1.2 | Spring-Return Actuators..... | 20 |
| 5.1.3 | Angular Displacement..... | 21 |

Section 6: Maintenance

| | | |
|-------|-----------------------------|----|
| 6.1 | Normal Maintenance..... | 22 |
| 6.2 | Inspection and Repair..... | 23 |
| 6.2.1 | Service Kits..... | 23 |
| 6.2.2 | Spring-Return Actuator..... | 23 |

Section 7: Decommission (Out of Service)

| | | |
|-----|---|----|
| 7.1 | Before You Start..... | 24 |
| 7.2 | Removing the actuator from the valve..... | 25 |

Section 8: Disassembly

| | | |
|-----|---|----|
| 8.1 | Removing End Caps (Sizes 25 to 600) | 27 |
| 8.2 | Removing End Caps (Sizes 950 to 4000) | 29 |
| 8.3 | Removing Spring Cartridges or Springs | 30 |
| 8.4 | Removing of Limit Stop screws | 31 |
| 8.5 | Removing Pistons | 31 |
| 8.6 | Removing pinion | 32 |
| 8.7 | Cleaning the Components | 33 |

Section 9: Reassembly

| | | |
|-------|--|----|
| 9.1 | Grease Instructions | 35 |
| 9.2 | Reassembly of the pinion | 36 |
| 9.3 | Reassembly of the pistons | 37 |
| 9.4 | Reassembly and settings of the limit stops | 39 |
| 9.5 | Reassembly of the end caps | 40 |
| 9.5.1 | Double-Acting actuators | 40 |
| 9.5.2 | Spring-Return actuators (Size 25 to 600) | 41 |
| 9.5.3 | Spring-Return actuators (Size 950 to 4000) | 43 |
| 9.6 | Basic function and Air Leak Test | 45 |

Section 10: Troubleshooting

| | | |
|------|---------------------------|----|
| 10.1 | Mechanical Problems | 46 |
| 10.2 | Pneumatic Problems | 47 |
| 10.3 | Electrical Problems | 48 |

Section 11: Parts List and Spare Parts Recommendations

| | | |
|------|------------------------------------|----|
| 11.1 | Actuator size F12 | 49 |
| 11.2 | Actuator sizes F25 to F600 | 50 |
| 11.3 | Actuator sizes F950 to F2500 | 51 |
| 11.4 | Actuator sizes F4000 | 52 |

Appendix A: Spring load removal

| | | |
|-----|--------------------------|----|
| A.1 | Spring load relief | 53 |
|-----|--------------------------|----|

Appendix B: Tool & Torque Table

Appendix C: Full Stroke Adjustment Option

| | | |
|-------|---|----|
| C.1 | Full Stroke Adjustment Option | 57 |
| C.2 | Convert a standard actuator into a Full Stroke Adjustment version | 58 |
| C.2.1 | Procedure | 59 |
| C.3 | Full Stroke Adjustment Setting | 60 |
| C.3.1 | Factory Setting Procedure | 60 |
| C.3.2 | Setting the Full Stroke Adjustment screw to the required angle. | 61 |

Section 1: Before You Start

This section explains:

- Base safety procedures
- Where to find detailed information relating safety
- Storage guidelines

Installation, adjustment, putting into service, use, assembly, disassembly and maintenance of the pneumatic actuator must be performed by qualified personnel.

NOTICE

Failure to follow the above guidelines will void warranty.

WARNING

Actuator must be isolated both pneumatically and electrically before any (dis)assembly starts. Before mounting or (dis)assembly, the actuator consult the relevant Sections of this manual.

1.1 Installation, Operation and Maintenance Reference Documents

Before you start, read the following documents:

- All Sections in this manual.
- Safety Guide (Document No. DOC.SG.EF.EN).

For Safety Instrumented Systems application, read the following document:

- SIL Safety Manual EL-O-Matic F-Series (Document No. DOC.SILM.EF.EN).

NOTICE

Failure to read the Safety Guide will void the warranty.

Not following the instructions of the Safety Guide can lead to failure of the product and harm to personnel or equipment.

1.2 Warehouse Storage

- All actuators should be stored in a clean, dry warehouse, free from excessive vibration and rapid temperature changes.
- All actuators should not be stored directly to the floor surface - it must be placed in racks/shelves or use a pallet.

1.3 On-Site Storage

- All actuators should be stored in a clean, dry warehouse, free from excessive vibration and rapid temperature changes.
- Prevent moisture or dirt from entering the actuator. Plug or seal both air connection ports.

NOTICE

Failure to follow the above guidelines (Warehouse and On Site Storages) will void warranty.

Section 2: Introduction

This section explains:

- How to identify the received product.
- The intended use of the product.
- Construction details.
- Actuator specifications.

2.1 Identification


The EL-O-Matic F-Series Rack and Pinion actuators are available as Double-Acting or Spring-Return versions. 13 models are available, ranging from 12 Nm to 4000 Nm (106 to 35000 lbf-in) nominal torque output.

The EL-O-Matic F-Series uses standardized interfaces for solenoid, switchbox or positioner mounting (VDI/VDE3845; NAMUR). The valve interface is equipped with an insert in the pinion bottom that allows both ISO5211 or DIN3337 mounting.

The springs in the Spring-Return version allow a fail action in case of loss of air supply pressure (Fail-to-Close or Fail-to-Open).

As from size FD150 Double-Acting versions have flat end caps to reduce actuator length and internal air volume.

Figure 1 Identification

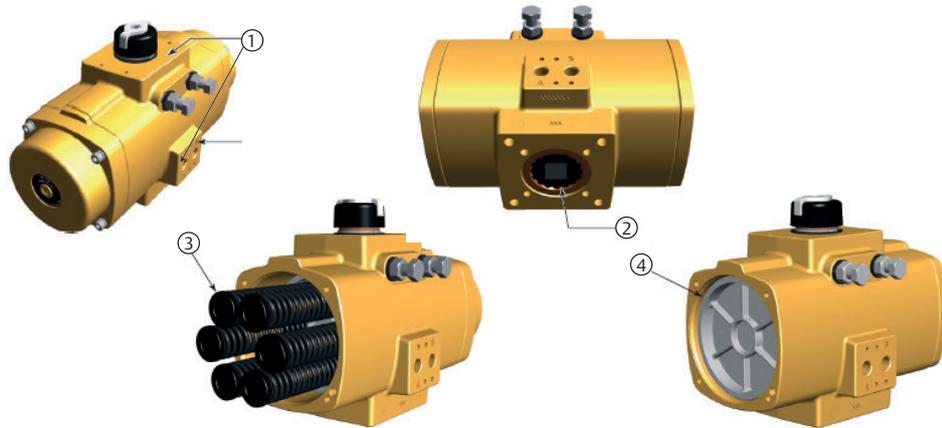

| Size | End cap design ⁵ | | Spring design ⁶ | | Pinion bottom / Insert design ² |
|------------|-----------------------------|--------|---------------------------------------|-----------|--|
| 12 | SR | DA | Left Max. 2 loose springs | Right | or |
| 25 - 100 | SR | DA | Left Max. 12 spring cartridges | Right | |
| 150 - 600 | SR | DA | Left Max. 12 spring cartridges | Right | |
| 950 - 2500 | SR | DA | Left Max. 6 loose springs | Right | |
| 4000 | SR | DA | Left Max. 6 loose springs | Right | |

Notes:

1. Top auxiliaries and Solenoid interface (VDI/VDE 3845; NAMUR) for size 25 to 4000. Size 12 has proprietary interface for top auxiliaries and solenoid mounting.
2. Valve interface available according ISO5211 or DIN 3337. Actuator size 12 is fitted with a parallel or diagonal square. Actuator sizes 25 to 2500 can be fitted with drive inserts with various inner shapes. Actuator size 4000 is fitted with a double square; parallel and diagonal.
3. Spring-Return actuators: - with springs
4. Double-Acting actuators: - no springs
5. Actuator sizes 25 to 100 have high end caps for Double-Acting and Spring-Return models. Actuator sizes 12 and 150 to 4000 have low end caps for Double-Acting models and high end caps for spring-return models.
6. Actuator size 12 is fitted with a maximum of 2 loose springs. Actuator sizes 25 to 600 are fitted with a maximum of 12 spring cartridges. Actuator sizes 950 to 4000 are fitted with a maximum of 6 loose springs.

2.2 Intended Use

The EL-O-Matic F-Series Rack and Pinion actuators are intended for the automation and operation of quarter-turn valves like Butterfly, Ball and Plug valves.

Rack and Pinion actuators can also be used to operate dampers or any other quarter-turn applications.

2.3 Specifications

Table 1. Pressure Range

| Actuator Type | Pressure |
|---------------|---|
| Double-Acting | 0.2 to 8.3 barg (2.9 to 120 psig) |
| Spring-Return | 6 to 8.3 barg (87 to 120 psig), with maximum spring set |
| | 3 to 8.3 barg (43.5 to 120 psig), reduced spring quantity |

Table 2. Operating Media

| Actuator Type | Operating Media |
|---------------------------------|--|
| Double-Acting and Single Acting | Air, dry or lubricated and inert gases |
| | Dew point at least 10K below ambient temperature |
| | For sub-zero applications, take appropriate measures |
| | Mentioned pressure levels are "gauge pressures". Gauge pressure is equal to absolute pressure minus atmospheric pressure. |

1. Recommended air quality according ISO 8573-1 for normal operation: 7-5-4.

NOTE:

Use of filters, pressure regulators, lubricator and an oil/water separator mounted in the air supply line, will allow a smooth and durable operation of the actuator.

For lubricated supply air, it is recommended to use a non-detergent oil without aggressive additives, VG32, group 2 (ISO 3448).

Table 3. Temperature Range

| Actuator Type | Temperature |
|--------------------------|---------------------------------------|
| Standard | -20 °C to +80 °C (-4 °F to +176 °F) |
| Option: Low Temperature | -40 °C to +80 °C (-40 °F to +176 °F) |
| Option: High Temperature | -10 °C to +120 °C (+14 °F to +250 °F) |

Table 4. Air Volumes and Consumption

| Actuator volumes: | | | |
|-------------------|------------------------------|------------------------------|-------------------------------|
| Actuator model | Maximum volume (in liters) | | |
| | Central ¹ chamber | End cap ² chamber | Displaced ³ volume |
| F 0012 | 0.05 | 0.06 | 0.04 |
| F 0025 | 0.14 | 0.20 | 0.08 |
| F 0040 | 0.26 | 0.37 | 0.15 |
| F 0065 | 0.40 | 0.56 | 0.22 |
| F 0100 | 0.6 | 0.9 | 0.3 |
| F 0150 | 1.0 | 0.8 | 0.5 |
| F 0200 | 1.3 | 1.0 | 0.7 |
| F 0350 | 2.1 | 1.9 | 1.2 |
| F 0600 | 3.6 | 3.3 | 2.1 |
| F 0950 | 4.9 | 4.6 | 3.2 |
| F 1600 | 7.9 | 7.3 | 5.4 |
| F 2500 | 12.6 | 11.9 | 8.3 |
| F 4000 | 21.7 | 19.0 | 13.5 |

| Consumption per stroke (nL/stroke, pressure in barg) | | | | | |
|---|------|------|--------------------|------|------|
| Outward Stroke | | | Inward Stroke | | |
| Double-Acting and Spring-Return | | | Double-Acting only | | |
| 2 | 4 | 8 | 2 | 4 | 8 |
| 0.15 | 0.25 | 0.35 | 0.18 | 0.30 | 0.53 |
| 0.42 | 0.69 | 1.25 | 0.59 | 0.99 | 1.78 |
| 0.77 | 1.29 | 2.31 | 1.10 | 1.83 | 3.29 |
| 1.2 | 2.0 | 3.6 | 1.7 | 2.7 | 4.9 |
| 1.8 | 3.0 | 5.3 | 2.7 | 4.5 | 8.0 |
| 3.0 | 4.9 | 8.9 | 2.4 | 4.0 | 7.1 |
| 3.9 | 6.4 | 11.6 | 3.0 | 4.9 | 8.9 |
| 6.2 | 10.4 | 18.7 | 5.7 | 9.4 | 17 |
| 11 | 18 | 32 | 9.8 | 16 | 29 |
| 15 | 24 | 44 | 14 | 23 | 41 |
| 23 | 39 | 70 | 22 | 36 | 65 |
| 37 | 62 | 112 | 35 | 59 | 106 |
| 65 | 107 | 193 | 57 | 94 | 169 |


| Actuator volumes: | | | |
|-------------------|------------------------------|------------------------------|-------------------------------|
| Actuator model | Maximum volume (cu in.) | | |
| | Central ¹ chamber | End cap ² chamber | Displaced ³ volume |
| F 0012 | 3.10 | 3.70 | 2.50 |
| F 0025 | 8.5 | 12.2 | 4.7 |
| F 0040 | 15.9 | 23 | 8.9 |
| F 0065 | 24 | 34 | 13.5 |
| F 0100 | 36 | 53 | 19.9 |
| F 0150 | 58 | 47 | 32 |
| F 0200 | 76 | 64 | 44 |
| F 0350 | 131 | 115 | 76 |
| F 0600 | 222 | 201 | 129 |
| F 0950 | 301 | 279 | 196 |
| F 1600 | 484 | 447 | 328 |
| F 2500 | 769 | 728 | 508 |
| F 4000 | 1324 | 1159 | 825 |

| Consumption per stroke (Standard cu.in./stroke, pressure in psig) | | | | | |
|--|------|-------|--------------------|------|-------|
| Outward Stroke | | | Inward Stroke | | |
| Double-Acting and Spring-Return | | | Double-Acting only | | |
| 40 | 80 | 120 | 40 | 80 | 120 |
| 12 | 20 | 28 | 14 | 24 | 34 |
| 32 | 55 | 78 | 45 | 79 | 112 |
| 59 | 102 | 146 | 86 | 148 | 211 |
| 89 | 155 | 220 | 127 | 219 | 312 |
| 134 | 232 | 330 | 197 | 342 | 486 |
| 216 | 374 | 532 | 175 | 303 | 431 |
| 283 | 490 | 697 | 238 | 412 | 587 |
| 488 | 844 | 1201 | 428 | 741 | 1054 |
| 826 | 1431 | 2035 | 748 | 1295 | 1842 |
| 1120 | 1940 | 2759 | 1038 | 1798 | 2557 |
| 1801 | 3119 | 4436 | 1664 | 2880 | 4097 |
| 2862 | 4955 | 7048 | 2710 | 4691 | 6673 |
| 4928 | 8531 | 12135 | 4314 | 7468 | 10623 |

Notes:

1. Pistons at 90° outward position.
2. Pistons at 0° inward position.
3. Stroke is 90°.


Figure 2 Actuator air volumes

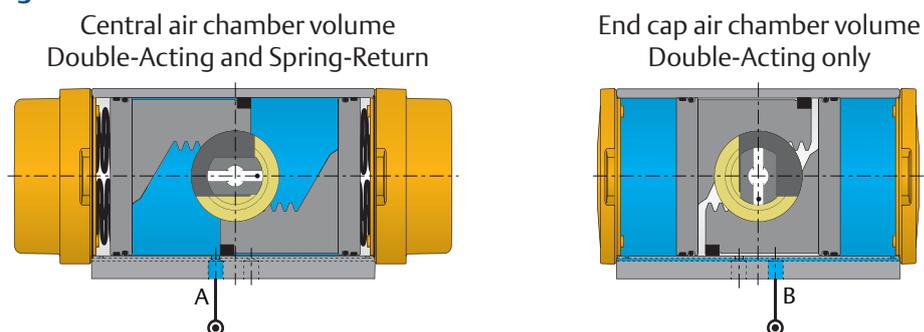

Section 3: Configuration Code

This section explains:

- How to create or read the configuration code for an actuator.

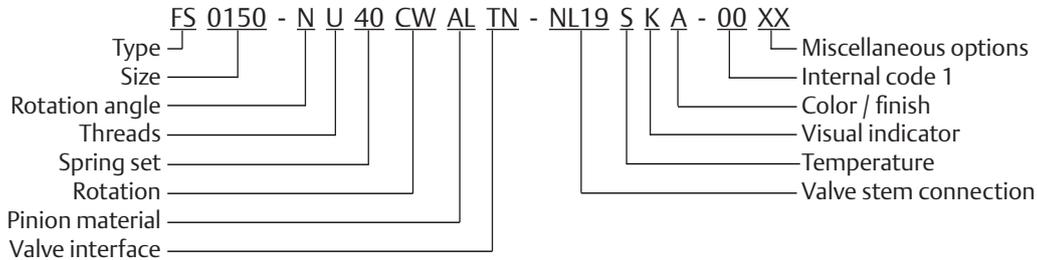

| Type | |
|--------------------------------|--|
| FD | Double-Acting |
| FS | Spring-Return |
| Size | |
| 0012 | Size 0012 0350 Size 0350 |
| 0025 | Size 0025 0600 Size 0600 |
| 0040 | Size 0040 0950 Size 0950 |
| 0065 | Size 0065 1600 Size 1600 |
| 0100 | Size 0100 2500 Size 2500 |
| 0150 | Size 0150 4000 Size 4000 |
| 0200 | Size 0200 |
| Rotation Angle | |
| N | 90° rotation angle |
| Threads | |
| M | Metric ISO 5211 |
| U | UNC/NPT/Imperial |
| Spring Set | |
| 00 | Double-Acting (no springs) |
| 10 | Spring Set 10 40 Spring Set 40 |
| 20 | Spring Set 20 50 Spring Set 50 |
| 30 | Spring Set 30 60 Spring Set 60 |
| Rotation Direction | |
| CW | Spring to Close/Clock Wise |
| CC | Spring to Open/Counter Clock Wise |
| Pinion Material | |
| AL | High Grade Aluminium, Hard anodized ⁽⁷⁾ |
| SS | Stainless steel ASI 316 (+ A4-70 SS fasteners) |
| Valve Interface ⁽²⁾ | |
| TN | Standard ISO 5211 interface |
| SY | Small interface with center plate (DIN3337) |
| LY | Large interface with center plate (DIN3337) |

Notes:
See next page.

| Valve Stem Connection | | | | |
|-------------------------|---|------------------|------------------|--------------------------------|
| Actuator size | Square | Aluminum | | Stainless Steel ⁽⁴⁾ |
| | | Parallel drive ■ | Diagonal drive ◆ | Star drive ⬠ |
| No insert | | 000 | | Not applicable |
| 0012 ⁽³⁾ | 9mm / 0.354" | L09 | D09 | Q09 |
| 0025 | 11mm / 0.433" | L11 | D11 | Q11 |
| 0040 & 0065 | 14mm / 0.551" | L17 | D14 | Q14 |
| 0100 | 17mm / 0.669" | | D17 | Q19 |
| | 19mm / 0.748" | L19 | | |
| 0150 | 17mm / 0.669" | | D17 | Q22 |
| | 19mm / 0.748" | L19 | | |
| 0200 | 22mm / 0.866" | L22 | D22 | Q22 |
| 0350 | 22mm / 0.866" | | D22 | Q27 |
| | 27mm / 1.063" | L27 | | |
| 0600 | 27mm / 1.063" | L27 | D27 | Q27 |
| 0950 | 36mm / 1.417" | L36 | D36 | Q36 |
| 1600 & 2500 | 46mm / 1.811" | L46 | D46 | Q46 |
| 4000 ⁽³⁾ | 55mm / 2.165" | Q55 | Q55 | Q55 |
| Temperature Range | | | | |
| S | Standard: -20 °C to +80 °C (-4 °F to +176 °F) | | | |
| H | High: -10 °C to +120 °C (+14 °F to +250 °F) | | | |
| L | Low: -40 °C to +80 °C (-40 °F to +176 °F) | | | |
| G ⁽⁶⁾ | Standard: -20 °C to +80 °C (-4 °F to +176 °F) PED Group 1 Label | | | |
| Visual Indication Code | | | | |
| K | Standard (Knob) | | | |
| N | No Visual Indication | | | |
| Finish | | | | |
| A | Standard coating (EL-O-Matic Yellow) | | | |
| Internal code 1 | | | | |
| 00 | Standard | | | |
| 10 | Stainless steel AISI316 (A4-70) end cap screws ⁽⁷⁾ | | | |
| Miscellaneous options | | | | |
| XX | Standard | | | |
| H1 | 1/2" High Flow plate | | | |
| P1 | 1/2" Porting according EN 15714-3 (only sizes 950-4000) | | | |
| FS | Full stroke adjustment (only sizes 0025-0600) | | | |
| N1 | NAMUR solenoid adaptation plate for F12 | | | |

Notes:

1. The options, listed here, are all options available. Not all options apply to all configurations.
2. Valve Interface: Size 0012 has no center plate option. Option "S"; Small Interface with Center Plate (DIN3337) is not available for size 0025, 0950 and 4000. Option "L"; Large Interface with Center Plate (DIN3337) is not available for size 1600 and 2500.
3. Size 0012 does not have inserts but has the inner square directly in the bottom of the pinion.
Size 4000 does not have inserts but has two inner squares (diagonally and parallel oriented) directly in the bottom of the pinion.
4. Actuators with stainless steel pinions do not have inserts but have two inner squares (diagonally and parallel oriented aka "Star Drive") directly in the bottom of the pinion.
5. Contact your local EL-O-Matic representative for additional insert options.
6. PED Group 1 Label only available up to size 950.
7. Actuators with the default hard anodized pinions, come with stainless steel grade A2 (AISI304) end cap screws.
Optional, the actuator is available with stainless steel grade A4-70 (AISI316) end cap screws.
Select option 10 in the "Internal code 1" segment in case stainless steel grade A4 (AISI316) end cap screws are required.

Section 4: Installation

This section explains:

- The actuator rotation direction.
- In which position the actuator will end after a failure.
- Principles of operation:
 - Solenoid operation.
 - Double-Acting and Spring-Return operation.
- Assembly codes.
- Actuator to valve assembly.

4.1 Before You Start

SAFETY


In case of an air or electrical failure, it is important to know the behavior of the actuator. Before mounting the actuator on a valve, consult the following Sections below.

4.2 Actuator Rotation Direction

4.2.1 Valve Rotation

For the following paragraphs we assume that valves rotate as indicated in Figure 3.

Figure 3 Normal valve rotation

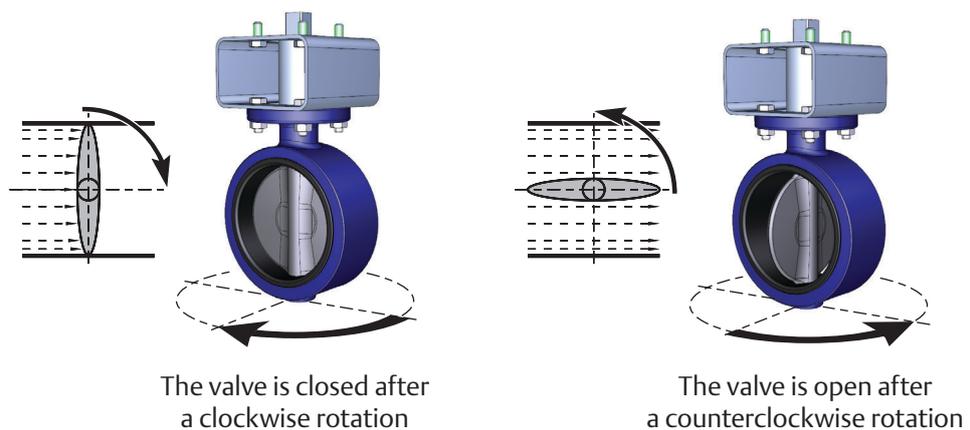

4.2.2 Position After Failure

The position of the actuator after a failure depends on the:

1. Principles of Operation (see Section 4.3).
2. Actuator Assembly Codes (see Section 4.4).
3. Kind of failure. Refer to Table 5.

Table 5. Position After Failure

| Principle of Operation | Assembly Code | Kind of Failure | Position |
|--|--|-----------------|-------------|
| Double-Acting Actuator |  | Pressure | Not defined |
| | | Signal | Closed |
| | | Supply Voltage | Closed |
| |  | Pressure | Not defined |
| | | Signal | Open |
| | | Supply Voltage | Open |
| Single-Acting (Spring-Return) Actuator |  | Pressure | Closed |
| | | Signal | Closed |
| | | Supply Voltage | Closed |
| |  | Pressure | Open |
| | | Signal | Open |
| | | Supply Voltage | Open |

4.3 Principles of Operation

4.3.1 Solenoid Valve

All actuators can be either piped with solid or flexible tubing with the solenoid valve mounted remotely from the actuator or by mounting a VDI/VDE 3845 (NAMUR) designed solenoid valve DIRECTLY onto the NAMUR mounting pad on the side of the actuator.

Figure 4 Typical solenoid operation

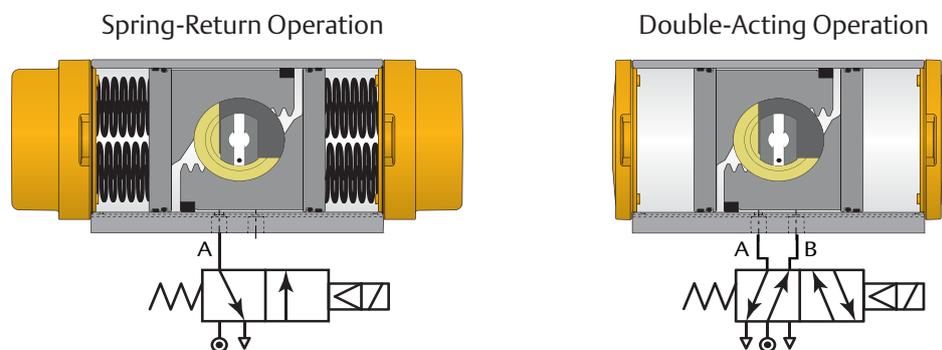


Table 6 represents the cycle time (operating time) per different Actuator sizes:

Table 6. Operating Speed

| Actuator size | Cycle time in seconds | | | |
|---------------|-----------------------|---------------|--------------------|--------------------|
| | Spring-Return | | Double-Acting | |
| | A-port pressurized | Spring stroke | A-port pressurized | B-port pressurized |
| F 12 | 0.4 | 0.4 | 0.4 | 0.4 |
| F 25 | 0.5 | 0.4 | 0.5 | 0.4 |
| F 40 | 0.6 | 0.5 | 0.6 | 0.5 |
| F 65 | 0.7 | 0.5 | 0.6 | 0.6 |
| F 100 | 0.8 | 0.6 | 0.8 | 0.7 |
| F 150 | 1.0 | 0.8 | 0.9 | 0.8 |
| F 200 | 1.3 | 0.9 | 1.0 | 1.0 |
| F 350 | 1.9 | 1.3 | 1.4 | 1.5 |
| F 600 | 3.2 | 1.9 | 2.2 | 2.2 |
| F 950 | 6.6 | 2.2 | 2.4 | 2.0 |
| F 1600 | 10.6 | 3.5 | 3.6 | 3.3 |
| F 2500 | 16.9 | 5.7 | 5.8 | 5.2 |
| F 4000 | 29.1 | 9.2 | 9.2 | 9.0 |

Operating time is average with actuator under load and solenoid valve fitted.

Test conditions:

- 1. Solenoid with flow capacity: 0.6 m³/hr
- 2. Pipe diameter: 6mm
- 3. Medium: clean air
- 4. Supply pressure: 5.5 bar (80psi)
- 5. Load: with average load
- 6. Stroke: 90°
- 7. Temperature: Room temperature

4.3.2 Ingress Protection (IP) rating

EL-O-Matic F actuators are IP66/IP67 rated. In case of IP66 or IP67 requirements, take precautions that comply with the IP66/IP67 requirements to prevent moisture or dust from entering the actuator through the open air exhaust port(s), either directly on the actuator or at the exhaust ports of the connected solenoid valve.

We recommend to connect tubing to the exhaust(s) and lead this into a dry and dust free area, or to use check valves in the exhaust.


4.3.3 Double-Acting Actuators

The operating principle, as explained here, is applicable for actuators with assembly code CW (direct acting).


- Applying supply pressure to port A will move the pistons outward to the "Open" position of the valve.
- Applying supply pressure to port B will move the pistons inward to the "Close" position of the valve.
- For assembly codes CC, the operating principle is reversed (reverse acting).

Figure 5 Double-Acting Operation

Outward Stroke

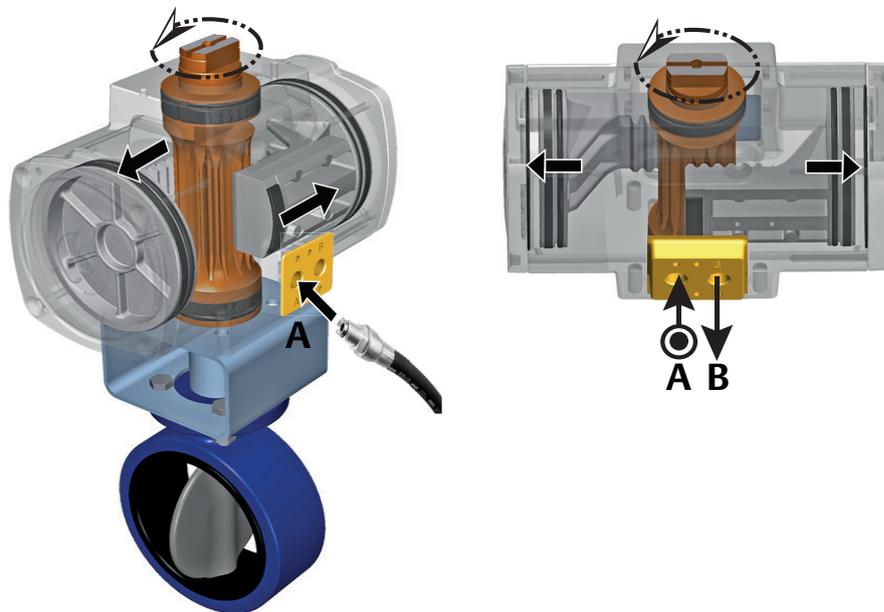

Inward Stroke

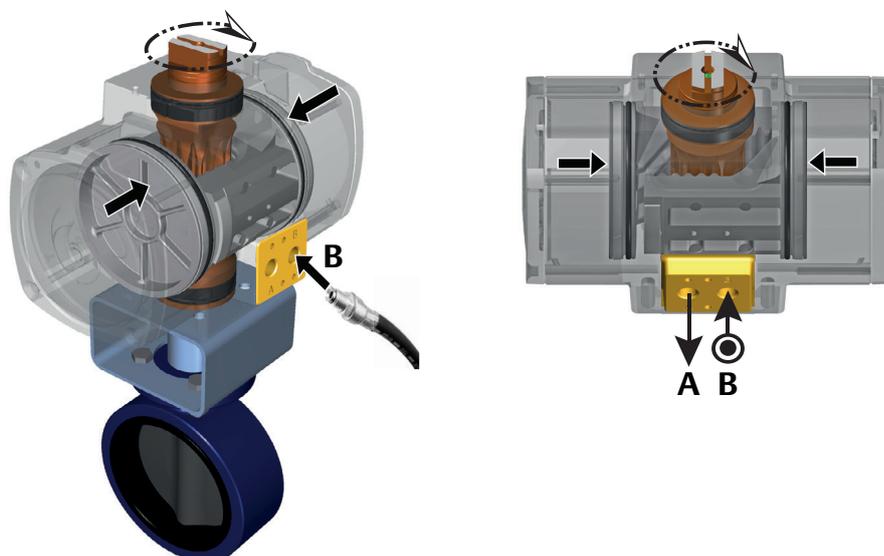


4.3.4 Spring-Return Actuators

The operating principle, as explained here, is applicable for actuators with assembly code CW (direct acting).


- Applying supply pressure to port A will move the pistons outwards to the "Open" position of the valve.
- Venting the supply pressure from port A will cause the springs to move the pistons inwards to the "Close" position of the valve.
- For assembly codes CC, the operating principle is reversed (reverse acting).

Figure 6 Stroke Movements

Outward Stroke

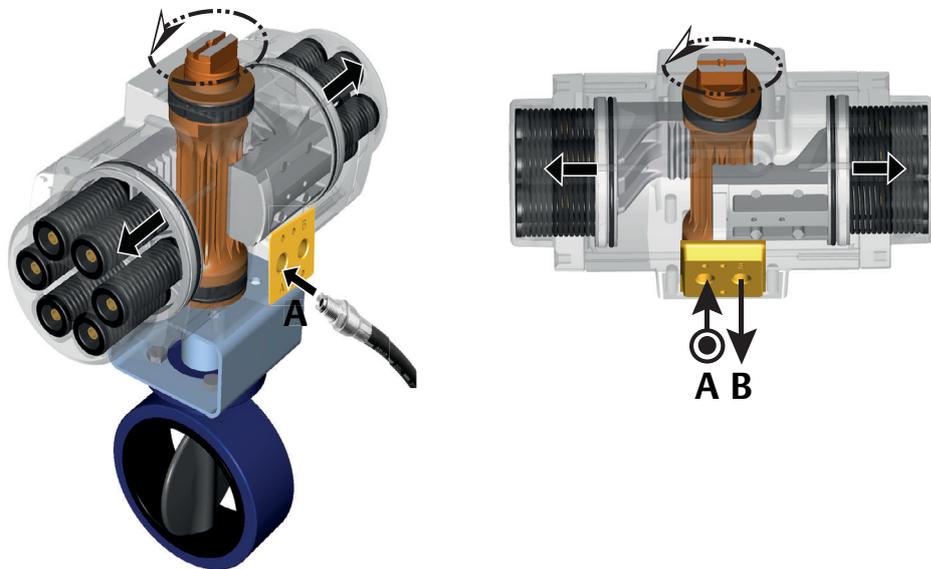

Inward Stroke

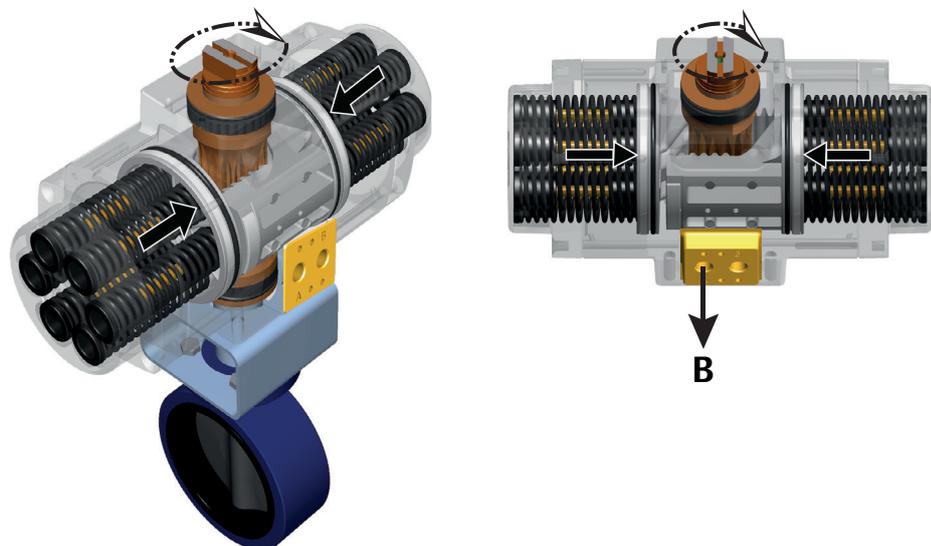


4.4 Actuator Assembly Codes

Figure 7 Assembly Code - Double-Acting


Assembly code: CW

= Standard, Clockwise-to-Close rotation
= Fail-to-Close

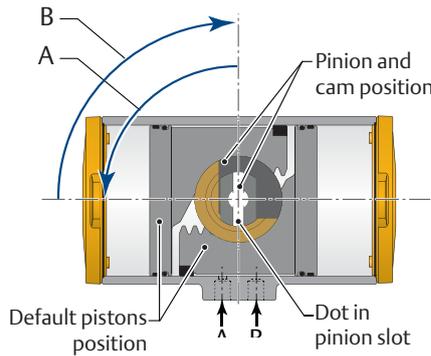

Assembly code: CC

= Reverse, Counterclockwise-to-Open
= Fail-to-Open


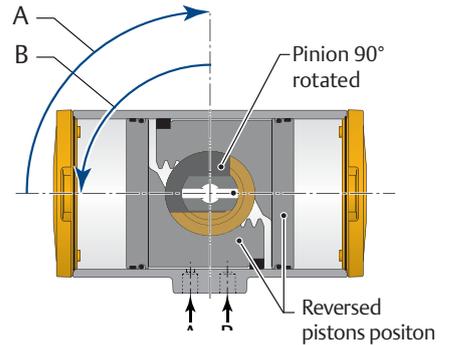


A = Rotation when central air chamber is pressurized.
B = Rotation when end cap air chambers are pressurized.
All views are from above. Pistons are shown in inward position.

Figure 8 Assembly Code - Spring-Return

Assembly code: CW Assembly code: CC

= Standard, Clockwise-to-Close rotation = Reverse, Counterclockwise-to-Open
= Fail-to-Close = Fail-to-Open

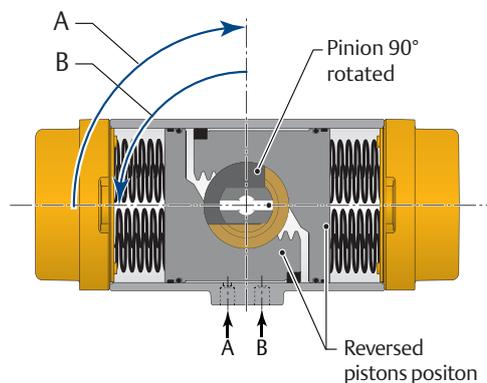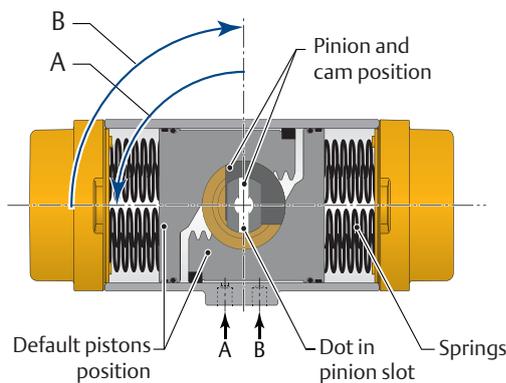

4.5 Actuator to Valve Installation

⚠ WARNING

Actuator must be isolated pneumatically and electrically before any (dis)assembly starts. Stay away from moving parts to prevent serious injuries. When test cycling the actuator and valve assembly by applying pressure to the A or B port, be aware that there are moving parts like pinion top, actuator to valve coupling and the valve- blade, ball, plug, etc.

NOTICE

The actuator is designed to be installed, commissioned and maintained using generic tools like wrenches, Allen keys and screwdrivers. For the removal of inserts, a special extractor tool can be supplied on request.

During assembly to the valve, do not hit with hammer on pinion top. This can damage the pinion top washer and cause premature failure.

Before mounting the actuator on the valve or valve bracket, be sure that both the actuator and the valve are in the same closed or open position.


Refer to Appendix B, Tool and Torque Table, for using the right size tool.

Table 7. Tool Table


| Symbol | Tool | Symbol | Tool |
|---|---|--|-----------|
|  | Wrench – All types and sizes. Metric and Imperial |  | Allen key |
|  | Circlip Pliers | | |

1. Remove handle nut, handle, lock washer, and etc. from the valve if required.
2. Visually check to make sure the valve is CLOSED.


Figure 9 Valve handle removal

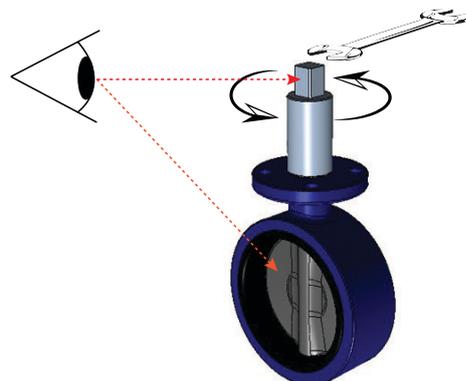

- When required, check if the insert drive (23) is mounted. If not, use a plastic mallet and tap slightly until the reducer square is in the required position. Be sure that the insert is mounted at 90° or 45° . It is possible to mount the insert turned 22.5° . This way the valve will not open or close the right way.

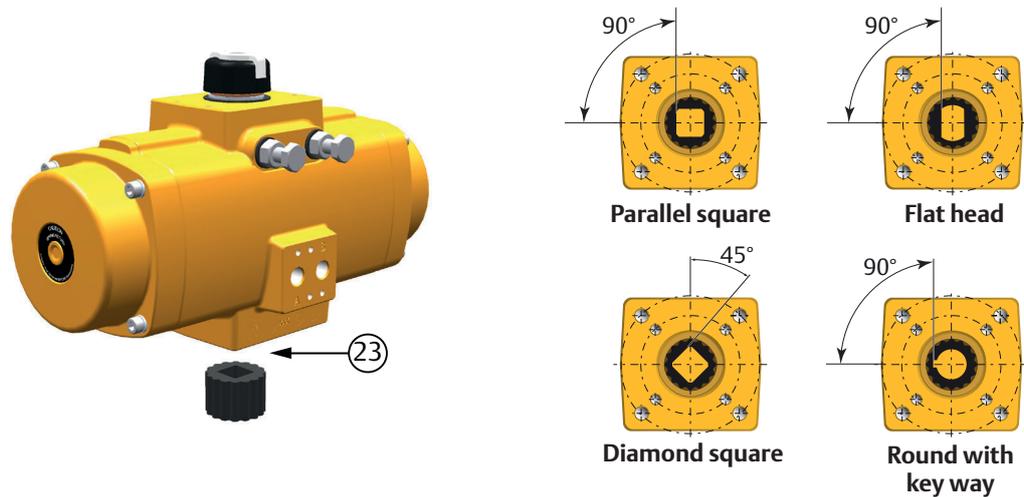Figure 10 Insert drive Installation

- Install the bracket to the valve flange. Tighten all bolts and nuts and apply the correct torque.

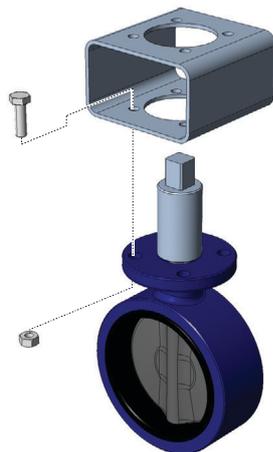Figure 11 Bracket Installation


5. Install the actuator to the bracket. Tighten all bolts and apply the correct torque (refer to Table 8).

Table 8. Bottom flange torque values

| Actuator size | ISO Pattern | Torque (Nm) | | | Torque (lbf-ft) | | |
|---------------|--------------------|-------------|-------|-------|-----------------|-------|-------|
| | | Thread | Min. | Max. | Thread | Min. | Max. |
| 12 | F04 | M6 | 4.5 | 5 | 10-24UNC | 3.3 | 3.7 |
| 25 | F03 inner pattern | M5 | 2.0 | 3.0 | 10-24UNC | 1.5 | 2.2 |
| | F05 outer pattern | M6 | 4.5 | 5.0 | 1/4"-20 | 3.3 | 3.7 |
| 40, 65, 100 | F05 inner pattern | M6 | 4.5 | 5.0 | 1/4"-20 | 3.3 | 3.7 |
| | F07 outer pattern | M8 | 10.5 | 12.5 | 5/16"-18 | 7.7 | 9.2 |
| 150, 200, 350 | F07 inner pattern | M8 | 10.5 | 12.5 | 5/16"-18 | 7.7 | 9.2 |
| | F10 outer pattern | M10 | 21.0 | 24.5 | 3/8"-16 | 15.5 | 18.1 |
| 600 | F10 inner pattern | M10 | 21.0 | 24.5 | 3/8"-16 | 15.5 | 18.1 |
| | F12 outer pattern | M12 | 34.5 | 43.0 | 1/2"-13 | 25.4 | 31.7 |
| 950 | F10 inner pattern | M10 | 21.0 | 24.5 | 3/8"-16 | 15.5 | 18.1 |
| | F14 outer pattern | M16 | 90.0 | 104.0 | 5/8"-11 | 66.4 | 76.7 |
| 1600, 2500 | F16 inner pattern | M20 | 170.0 | 204.0 | 3/4"-10 | 125.4 | 150.5 |
| | F25* outer pattern | 4x M16 | 90.0 | 104.0 | 4x 5/8"-11 | 66.4 | 76.7 |
| 4000 | F16 inner pattern | M20 | 170.0 | 204.0 | 3/4"-10 | 125.4 | 150.5 |
| | F25 outer pattern | 8x M16 | 90.0 | 104.0 | 8x 5/8"-11 | 66.4 | 76.7 |

6. When required, mount or adjust the visual indicator (26). The large indicator, for sizes 600 - 4000, is designed with a press fitting onto the pinion top. This way, the indicator will stay on the pinion top without the indicator screw fitted.

Figure 12 Indicator mounting

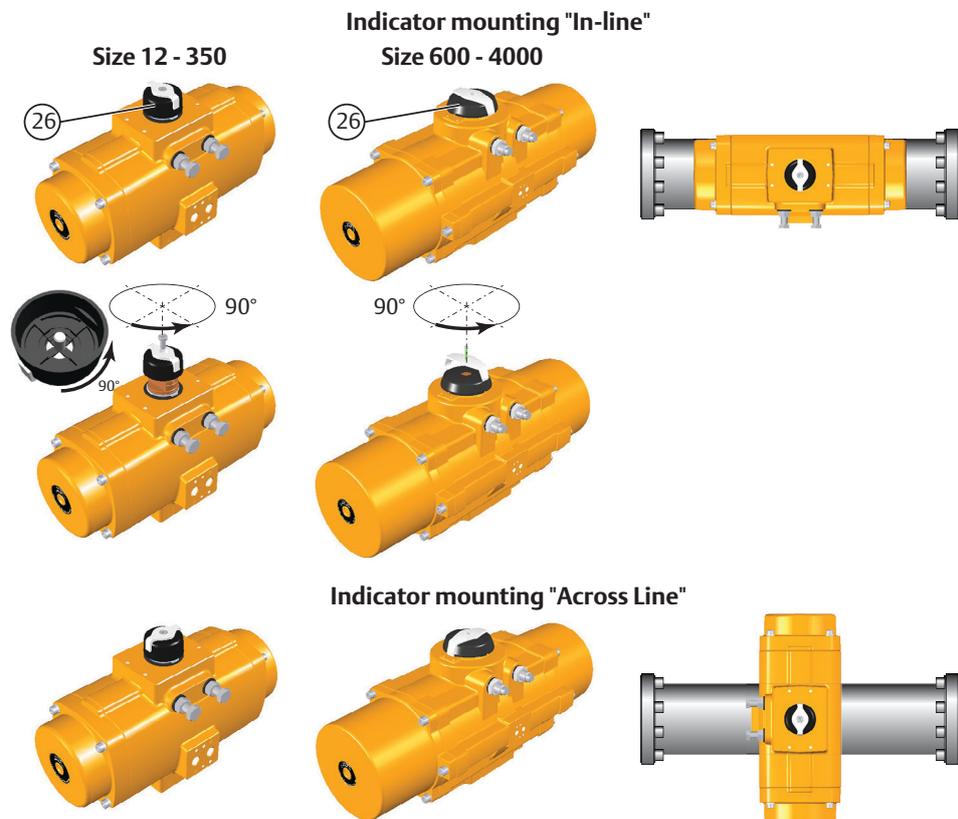

4.6 Mounting of control and feedback accessories

Solenoid valve and or switch boxes can now be mounted to the actuator. Check the instructions as shipped with these components for installation, operating and maintenance instructions.

We recommend to test-cycle the complete assembly to check correct operation.

4.7 Recommended Tubing Sizes

In case the solenoid valve is mounted remotely (i.e. in a central solenoid cabinet) and in order to supply sufficient flow of air supply to the actuator, the following tubing sizes are recommended.

Table 9. Tubing Sizes

| Actuator size | Runs up to | | Runs over to | |
|----------------------------|------------|----------|--------------|-----------|
| | 1.2 meters | 4 feet | 1.2 meters | 4 feet |
| 25, 40, 65 | 6 mm | 1/4 inch | 6 mm | 1/4 inch |
| 100, 150, 200, 350, 600 | 6 mm | 1/4 inch | 8 mm | 5/16 inch |
| 950, 1600, 2500, 4000 | 6 mm | 1/4 inch | 10 mm | 3/8 inch |

Section 5: Mechanical Stroke Adjustment

This section explains:

- What mechanical stroke adjustment is.
- What the factory settings are.
- How to adjust the travel stops.


EL-O-Matic F actuator sizes 25 to 4000 have two stroke adjustment stops for adjusting accurately the stroke of the actuator/valve assembly in open and closed position.

The smallest actuator, size F12, does not have limit stops.

The factory setting of the stroke is 90°. Most quarter-turn valve applications will not require readjustment of these settings.

If required the stroke can be adjusted by means of two-stroke adjustment bolts.

Figure 13 Factory Setting

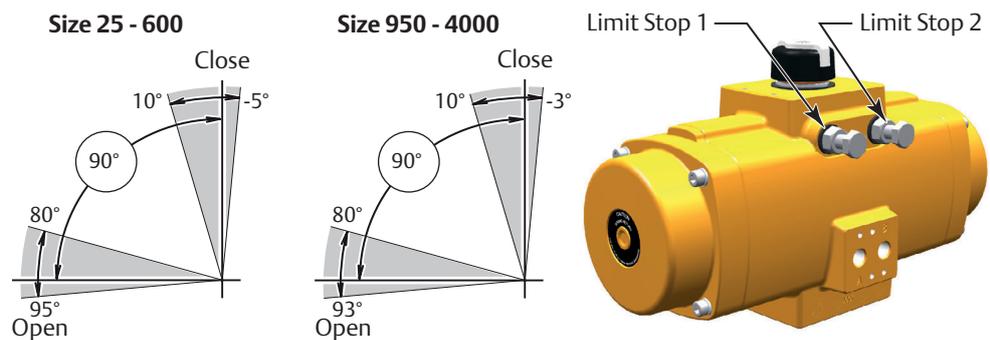

5.1 Travel Stop Adjustment

⚠ CAUTION


Do not turn out the travel stops completely when the actuator is pressurized.

When adjusting the travel stops and the actuator is still pressurized, the travel stops can be “shot” away when completely turned out.

5.1.1 Double-Acting Actuators

1. Operate valve/actuator assembly to the required "Closed" position.
2. Remove air supply.
3. Slacken locknut on the “closed” stop (2).

Figure 14

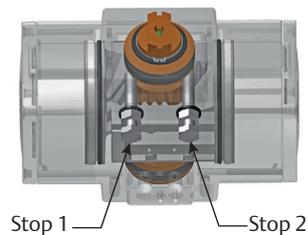


4. Turn the “closed” stop clockwise to reduce or counterclockwise to increase the travel. Consult Section 5.1.3 (angular displacement of the pinion), to define how far the limit stop must be turned in or out.
5. Tighten the lock nut.
6. Connect air and cycle the actuator to check that the position is correct. If not repeat from 2.
7. Remove air supply.
8. For adjusting the open position repeat steps 1 to 7, but now for the open position and “open” stop (1).

5.1.2 Spring-Return Actuators

1. Connect air supply to the A port. Actuator will move to the open position.
2. Slacken locknut (24) on the “closed” stop (2).

Figure 15

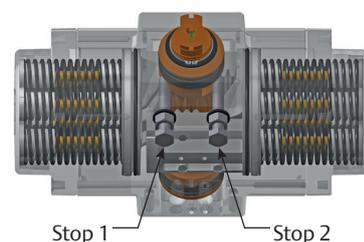

3. Turn the “closed” stop clockwise to reduce or counterclockwise to increase the travel. Consult Section 5.1.3 (angular displacement of the pinion), to define how far the limit stop must be turned in or out.
4. Remove air supply. Actuator will move to the closed position.
5. Check whether the actuator valve assembly is in the required position. If not repeat steps 1 to 5.
6. Remove air supply.
7. For adjusting the open position repeat steps 1 to 6, but now for the open position and "open" stop (1).

Table 10. Limit stop dimensions

| Actuator size | Thread | Bolt Wrench size (mm) | Nut wrench size (mm) |
|---------------|--------|-----------------------|----------------------|
| 25 | M 6 | 10 | 10 |
| 40 | M 8 | 13 | 13 |
| 65 | M 10 | 17 (16)* | 17 (16)* |
| 100 | M 10 | 17 (16)* | 17 (16)* |
| 150 | M 10 | 17 (16)* | 17 (16)* |
| 200 | M 12 | 19 (18)* | 19 (18)* |
| 350 | M 16 | 24 | 24 |
| 600 | M 20 | 30 | 30 |
| 950 | M 22 | 12 | 32 |
| 1600 | M 24 | 14 | 36 |
| 2500 | M 27 | 17 | 41 |
| 4000 | M 22 | 12 | 32 |

1. Default dimension according DIN933 standard.
2. Dimensions in brackets according ISO4017 standard.
3. Actuator size 12 is not available with limit stops.

5.1.3 Angular Displacement

Below Table identifies, per actuator size, what the angular displacement of the pinions is, when using the limit stop screws.

- Turn the limit stop clockwise reduces the stroke.
- Turn the limit stop counterclockwise to increase the stroke.

Table 11. Angular Displacement limit stops

| Actuator size | Turns for 5° adjustment of the pinion: | 360° revolution of limit stop screw will adjust |
|---------------|--|---|
| F 12 | Actuator size 12 is not available with limit stops | |
| F 25 | 0.7 | 7.1° |
| F 40 | 0.8 | 6.3° |
| F 65 | 0.6 | 8.3° |
| F 100 | 0.7 | 7.1° |
| F 150 | 1.2 | 4.2° |
| F 200 | 1.0 | 5.0° |
| F 350 | 0.8 | 6.3° |
| F 600 | 0.8 | 6.3° |
| F 950 | 1.1 | 4.7° |
| F 1600 | 1.3 | 4.1° |
| F 2500 | 1.5 | 3.4° |
| F 4000 | 3.2 | 1.6° |

NOTICE

In case of air leakage over the limit stop bolts, turn the lock nut of the limit stop bolts tighter, until leakage stops.

Section 6: Maintenance

This section explains:

- When and how to do maintenance.
 - Normal maintenance.
 - Extraordinary maintenance.
- What to do when replacing springs.
- What the availability is of spare parts, action conversion kits and temperature conversion kits.

WARNING

Actuator must be isolated pneumatically and electrically before any (dis)assembly starts. Before mounting or (dis)assembling the actuator, consult the relevant sections of this manual.

6.1 Normal Maintenance

EL-O-Matic F actuators are designed to operate without maintenance for their normal working life. Normal working life is 500,000 cycles* for sizes up to F1600 and 250,000 for sizes F2500 and F4000.

For actuators with the optional low temperature silicon seals, we advise to replace these seals after 250.000 cycles*.

NOTE:

*CYCLES = ONE OPEN STROKE AND ONE CLOSE STROKE.

We recommend regular inspections to make certain that the actuator / valve assembly operates smoothly and to check that there are no visible or audible defects. We advise to perform the following checks upon each proof test interval complying with the rules and regulations of the country of final installation:

- Visually check the entire actuator as well as the control system (where foreseen).
- Ensure there are no leaks on the actuator parts under pressure.
- Check pneumatic connections for leaks. Tighten tube fittings as required.
- Check if manual override (where foreseen) is regular.
- Check if pneumatic filter cartridge (where foreseen) is sound and filter bowl (where foreseen) has been cleaned properly.
- Check the setting of the relief valves (where foreseen).
- Verify that the power fluid supply pressure value is within the required range.
- Remove built-up dust and dirt from all actuator surfaces.

- Inspect actuator paint work for damages to ensure continued corrosion protection. Touch-up as required in accordance with the applicable paint specification.
- Operate the Actuator/Valve assembly for 2 complete open/close cycles with complete closing of the valve.
- Verify the correct performing of open – close operations (e.g. check locally, or automatically via Logic solver, the correct movement of the actuator).

All actuators are supplied with sufficient lubrication for their normal working life. If required, see Section 9.1 (Grease instructions) for the recommended grease.

For mounting the parts of the repair kit follow the instruction of the Decommission, Disassembly and Reassembly Sections of this manual.

6.2 Inspection and Repair

Replacement of internal seals and bearings allows you to extend the normal working life. Service kits, containing all necessary spare parts (like seals, bearings and non-reusable parts) can be obtained through authorized Emerson distributors.

6.2.1 Service Kits

All soft seals, bearings, and non-reusable parts are included in the recommended service kit. The service kit is identical for both the Double-Acting and the Spring-Return models.

6.2.2 Spring-Return Actuator

For the Spring-Return models, we recommend a set of spare springs for each different model in addition to the recommended spare parts kit.

On Spring-Return actuators, the spring cartridges can be replaced. **SPRING CARTRIDGES SHOULD ALWAYS BE REPLACED IN COMPLETE SETS.** Spring kits are available through authorized Emerson distributors.

Section 7: Decommission (Out of Service)

This section explains:

- How to decommission an actuator in a safe way.

7.1 Before You Start

WARNING

Actuator must be isolated pneumatically and electrically before any (dis)assembly starts. Before mounting or (dis)assembling the actuator consult the relevant sections of this manual.

Actuator can move when removing supply pressure and/or electrical control signal of actuators. If not already there, a Spring-Return actuator will cycle to its fail position.

When removing any ball valve or plug valve assemblies from a pipe system, isolate the piping system on which the Actuator is installed and relieve any media pressure that may be trapped in the valve cavities before removing the actuator for maintenance.

A Spring-Return actuator mounted on a valve, which is stuck in mid stroke, contains a high spring load which will cause a sudden rotation of the actuator versus the valve or valve bracket during disassembly. This can cause serious injury to personnel or damage to property.

Refer to Appendix A for instructions to safely remove the spring load before disassembling the Spring-Return actuator from valve or bracket.


IMPORTANT:

Refer to the Safety Guide for Lifting Instructions.

7.2 Removing the Actuator from the Valve

1. Disconnect all air supply hoses (Ports A and B or solenoid).
2. Disconnect all electrical wirings of the switch box.
3. Disconnect the electrical wiring of the solenoid valve.
4. Remove the bolts and nuts from the valve flange.
5. Remove the bracket from the actuator.
6. Remove the switch box and solenoid valve. Refer to the documentation of the switch box and solenoid valve for safe disassembly.

Figure 16 Removing actuator from valve

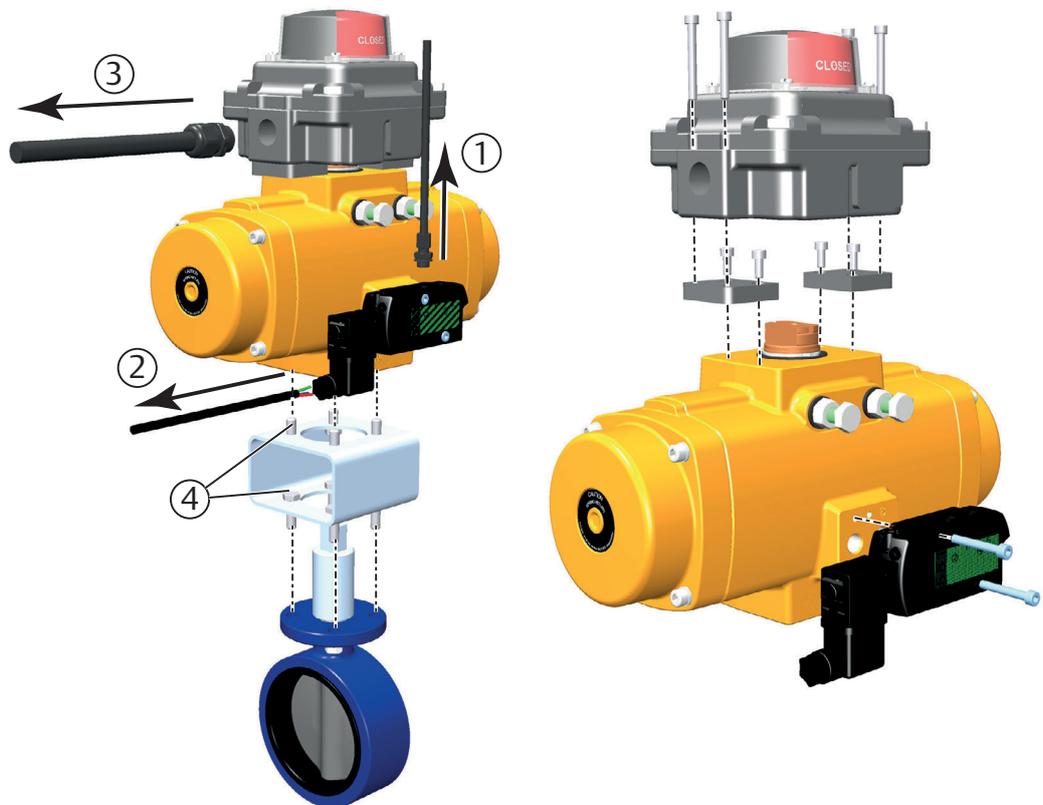

Section 8: Disassembly

This section explains:

- How to disassemble an actuator safely.

TIP:

The instructions of this section can be used for maintenance or reconfiguration like spring set change or maintenance.

Reference numbers for components refer to the exploded view in Section 11.

In case of maintenance, discard all the used soft parts like O-ring seals, guide bands, wear strips and circlip.

WARNING

Actuator must be isolated pneumatically and electrically before any (dis)assembly starts.

Before mounting or (dis)assembling the actuator consult the relevant sections of this manual.

CAUTION

Spring-Return actuators contain springs in a compressed state. Follow these instructions to release the spring force safely.

The end caps of Spring-Return actuators sizes 25 to 600 should be free of the spring load after 10 full turns (crosswise relaxing) of the end cap screws. If there is still spring load on the end cap, this might indicate a broken spring cartridge. Stop this disassembly procedure immediately. Continuing might cause the end cap to be “shot” away causing serious injury.

Spring-Return actuator size 950 to 4000 have long end cap screws to release the spring load safely.

Refer to Appendix A for instructions to safely remove the spring load before disassembling the end cap of a Spring-Return actuator with a broken spring cartridge.

NOTICE


The actuator is designed to be installed, commissioned and maintained using generic tools like wrenches, Allen keys and screwdrivers.

Refer to the Tables in this Section or refer to Appendix B, Tool and Torque Table.

8.1 Removing End Caps (Sizes 25 to 600)

1. For Double-Acting actuators, do the following:
 - a. Remove the screws (8) and washers (10) of the end caps (6).
 - b. Remove the O-ring (11) and "B" port seal (2). Discard these parts.

Figure 17 Double-Acting End Caps Removal

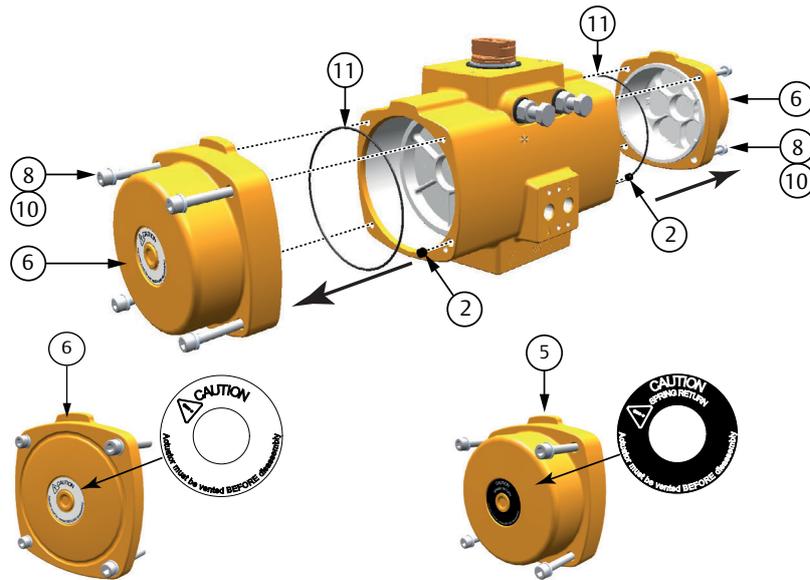


Double-Acting end caps (6) are fitted with a white warning sticker. Spring-Return end caps (5) are fitted with a black warning sticker.

Actuator sizes 25 to 100 have high end caps for Double-Acting and Spring-Return models.

Actuator sizes 150 to 4000 have low end caps for Double-Acting models and high end caps for Spring-Return models.

2. For spring-return actuators, do the following:
 - a. **Tip:** For actuators with assembly code CW, turn back the right hand limit stop screw (30) 2 full turns.
For actuators with assembly code CC, turn back the left hand limit stop screw (30) 2 full turns.
This will lower the spring force on the end cap and reduces the screw out length of the end cap screws.
 - b. Uniformly loosen the screws (9) of the end caps (5) 1/4-1/2 turns at a time, in sequence, as per Figure 18, to relieve the pre-load of the springs.
 - c. Remove the O-rings (11) and "B" port seals (2). Discard these parts.


Figure 18 Spring-Return End Caps Removal

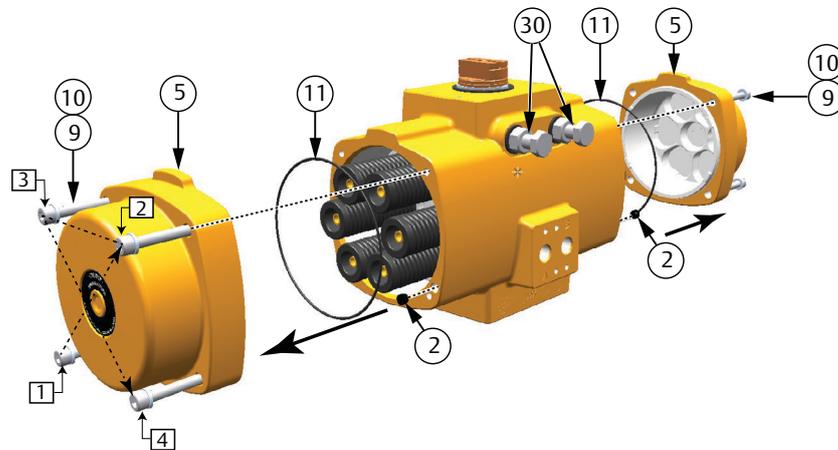

8.2 Removing End Caps (Sizes 950 to 4000)


1. For Double-Acting actuators, do the following:
 - a. Remove the screws (8) and washers (10) of the end caps (6).
 - b. Remove the O-ring (11) and "B" port seal (2). Discard these parts.

Figure 19 Double-Acting End Caps Removal sizes 950 to 4000

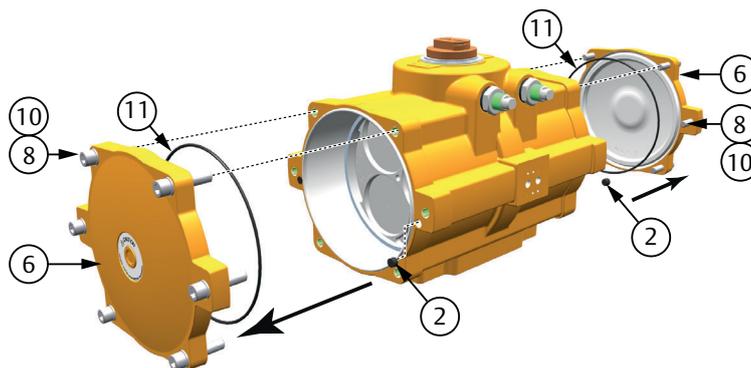

2. For Spring-Return actuators, do the following:
 - a. **Tip:** For actuators with assembly code CW, turn back the right hand limit stop screw (30) 2 full turns.
For actuators with assembly code CC, turn back the left hand limit stop screw (30) 2 full turns.
This will lower the spring force on the end cap and reduces the screw out length of the end cap screws.
 - b. Uniformly loosen the screws (9) of the end caps (5) 1/4-1/2 turns at a time, in sequence, as per Figure 20, to relieve the pre-load of the springs.
 - c. Remove the O-rings (11) and "B" port seals (2). Discard these parts.

Figure 20 Spring-Return End Caps Removal sizes 950 to 4000

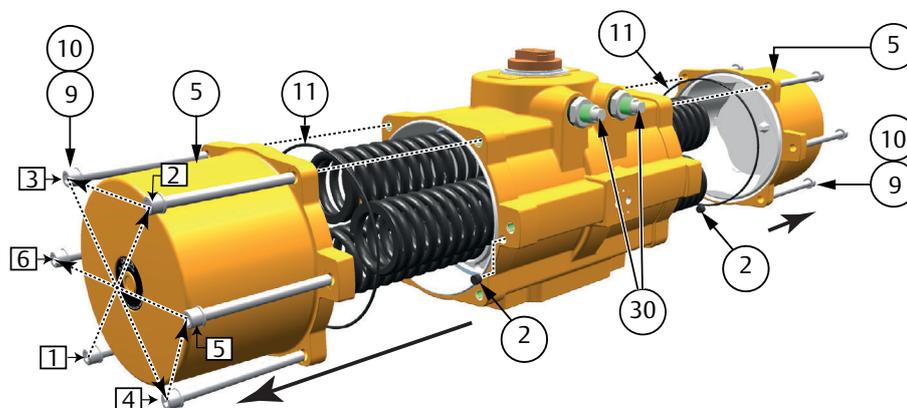

8.3 Removing Spring Cartridges or Springs

1. Remove the spring cartridges or springs (7).

Figure 21 Removing Spring Cartridges size 25 to 600


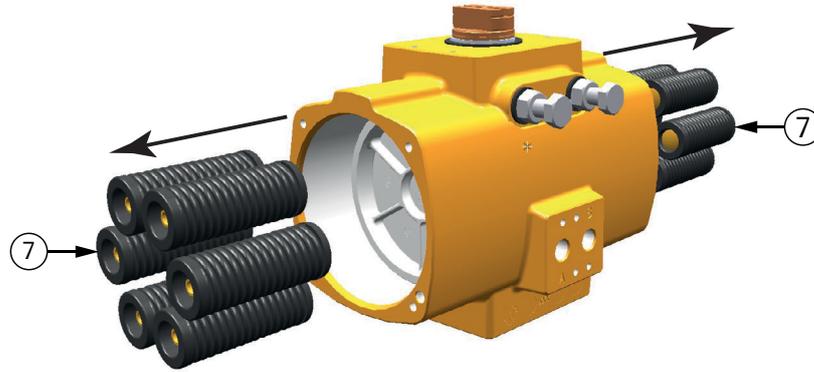



Figure 22 Removing Springs size 950 to 4000

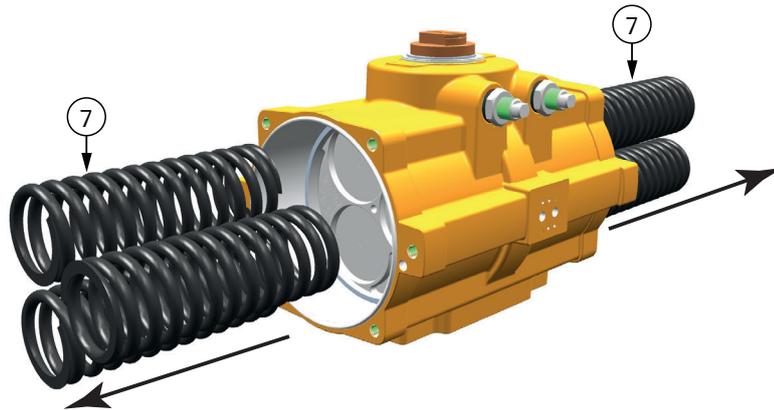

8.4 Removing of Limit Stop Screws

1. Remove the limit stop screws (30), limit stop nuts (31), limit stop washers (32) and limit stop O-rings (33). Discard the O-rings.


Figure 23 Limit Stop Removal

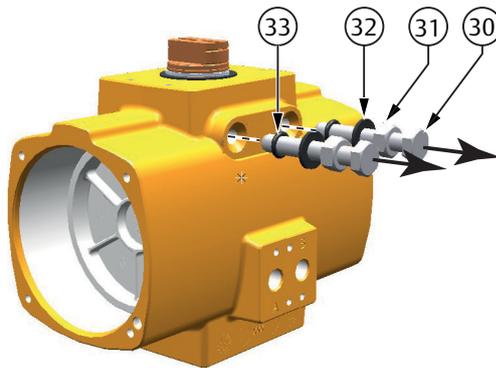

8.5 Removing Pistons

1. Use a wrench and turn the pinion counterclockwise until the pistons (14) come out of the body.
2. Remove the piston bearings (15), piston rack bearing strips (17) and piston O-ring seals (16). Discard these parts.

Figure 24 Removing Pistons

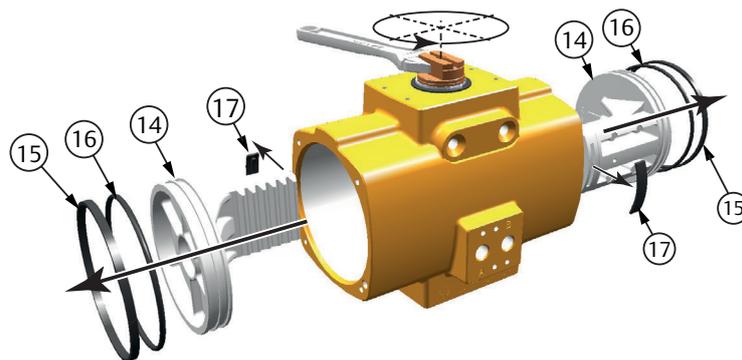

8.6 Removing Pinion

1. Remove the circlip (27) and thrust bearing (23) on top of the pinion assembly. For sizes 950 to 4000 remove also the top pinion bearing (19).
2. Remove the pinion (18) by pushing it downwards. For Size 4000, remove the backup ring (29), O-ring pinion top (21) the cam (24) and cam thrust washer (25) through the main bore of the housing.
3. Remove the pinion O-ring seals (21/22) and the pinion bearings (19/20). For Size 950 to 2500, remove also the backup ring (29).
4. Discard all of these parts.

Figure 25 Pinion Removal

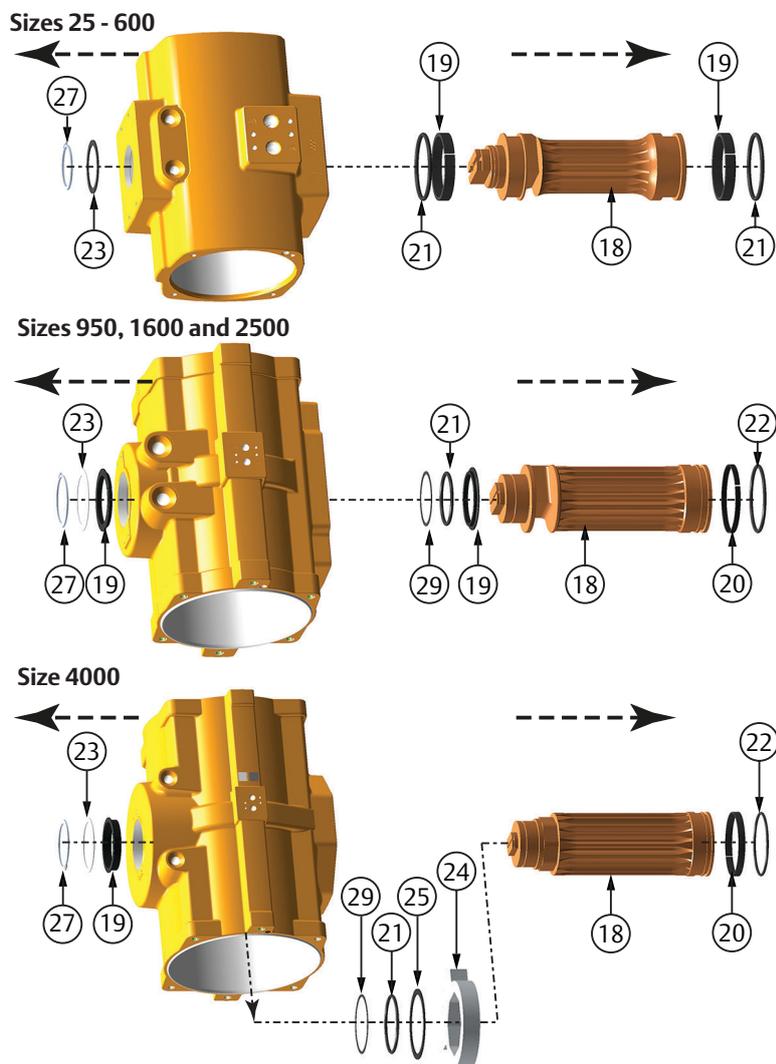


Table 12. Recommended circlip pliers according DIN 5254 (or equal) for shaft circlips.

| Actuator size | Pinion top diameter | | Pliers according DIN 5254 | Actuator size | Pinion top diameter | | Pliers according DIN 5254 |
|------------------|---------------------|--------|---------------------------|---------------|---------------------|-------|---------------------------|
| 12 | 16 mm | 0.630" | A1 | 950 | 65 mm | 2.559 | A3 |
| 25 - 100 | 22 mm | 0.866" | A2 | 1600 | 75 mm | 2.953 | A3 |
| 150 - 350 | 36 mm | 1.417" | A3 | 2500 | 95 mm | 3.74 | A4 |
| 600 | 55 mm | 2.165" | A3 | 4000 | 96 mm | 3.78 | A4 |

8.7 Cleaning the Components

In case of maintenance, use a clean dry cloth and thoroughly wipe clean and remove old grease from:

- The inside and outside of the body including thread holes and crevices/grooves
- The pinion gears
- The pistons

Section 9: Reassembly

This section explains:

- Which parts and how to grease them.
- How to reassemble a complete actuator.
- How to set the stroke adjustment bolts after reassembly.
- How to do a basic function and air leak test.

TIP:

The instructions of this Section can be used for maintenance or reconfiguration like spring set change or maintenance.

Reference numbers for components refer to the exploded view in Section 11.

In case of maintenance, discard all used soft parts like O-ring seals, guide bands and wear strips and circlip and replace them with the parts as supplied in the repair kit.

In case of reconfiguration replace the parts as supplied in the conversion kit (see also Section 6).

Refer to the Safety Guide for Lifting Instructions.

NOTICE

The actuator is designed to be installed, commissioned and maintained using generic tools like wrenches, Allen keys and screwdrivers.

Refer to the Tables in this Section or refer to Appendix B, Tool and Torque Table.

9.1 Grease Instructions

Check the product coding on the product labels and Section 3 of this manual, to define which type of grease to use.

Table 13. Recommended Greases


| Standard temperature | High temperature | Low Temperature |
|--|--|---|
| -20 °C to +80 °C / -4 °F to +176 °F | -10 °C to +120 °C / +14 °F to +250 °F | -40 °C to +80 °C / -40 °F to +176 °F |
| Castrol High Temperature - Rocol Sapphire Premier - Castrol Spheerol EPL 2 - Total Ceran XM 220 - | (Formerly called Castrol LMX) (Formerly called Sapphire HI-TEMP 2) (Formerly called BP Energrease LS-EP2) (Formerly called Total Ceran WR2) | Castrol Optitemp LG2 SKF – LGLT 2 FUCHS – Renolit Unitemp 2 |

We recommend using a suitable sized paint brush to apply the required amount of grease on the parts as per Table 13 and Figure 26.

Table 14. Grease Instructions

| Part | | Section of part | Amount of grease |
|----------------|---------------|----------------------------|---------------------------------------|
| O-rings: | A | Completely | Light film |
| Housing Parts: | B | Piston bore | Light film |
| | C | Top pinion bore | Light film |
| | D | Bottom pinion bore | Light film |
| | E | O-ring & bearing groove | Light film |
| Piston Parts: | F | Rack teeth | Half the teeth depth full with grease |
| | G | Piston bearing | Light film on outside |
| | H | Piston rack bearing strip | Light film |
| | Piston Parts: | J | Pinion bottom & O-ring groove |
| K | | Pinion top & O-ring groove | Light film |
| L | | Gear teeth | Half the teeth depth |
| M | | Pinion top bearing | Light film (inside and out) |
| N | | Pinion bottom bearing | Light film (inside and out) |

Figure 26 Grease Instructions

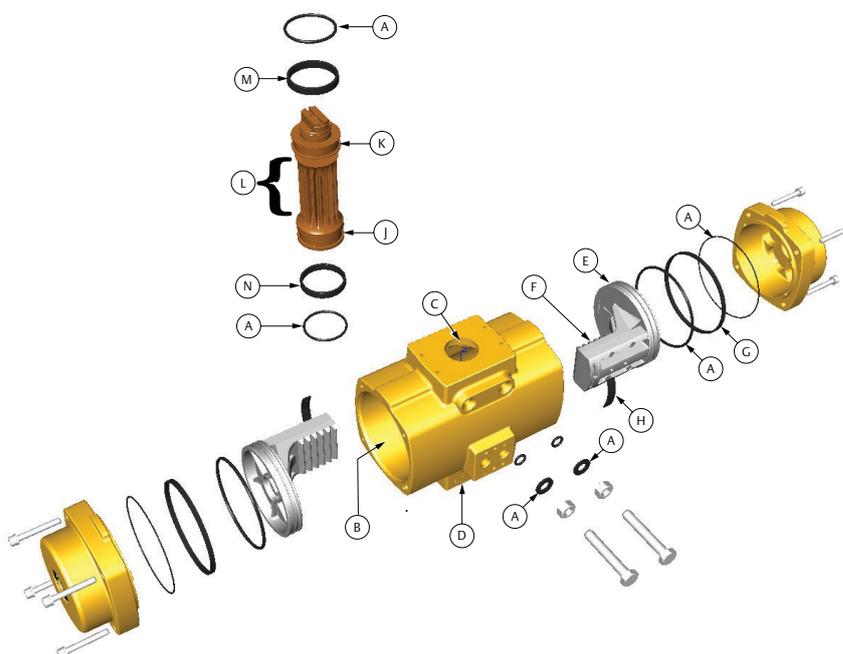

9.2 Reassembly of the Pinion

1. Grease the pinion parts according to Section 9.1.
2. Install the pinion bearings (19/20) and the O-ring seals (21/22) on the pinion (18). For Size 950 to 2500, install also the backup ring (29).
3. Insert the pinion (18) in the housing. For size 4000: mount first the cam (24), cam thrust washer (25), pinion top O-ring (21) and backup ring (29) through the mainbore onto the pinion (18).
4. For sizes 950 to 4000 install first the top pinion bearing (19). For all sizes, install the thrust washer (23) and mount the circlip (27) on the pinion top.
 - Install the new circlip onto its mating groove on the top shaft extension and with the non-sharp edge (2) towards the housing and the sharp edge (1) towards the top of the shaft.

Figure 27 Reassemble the pinion

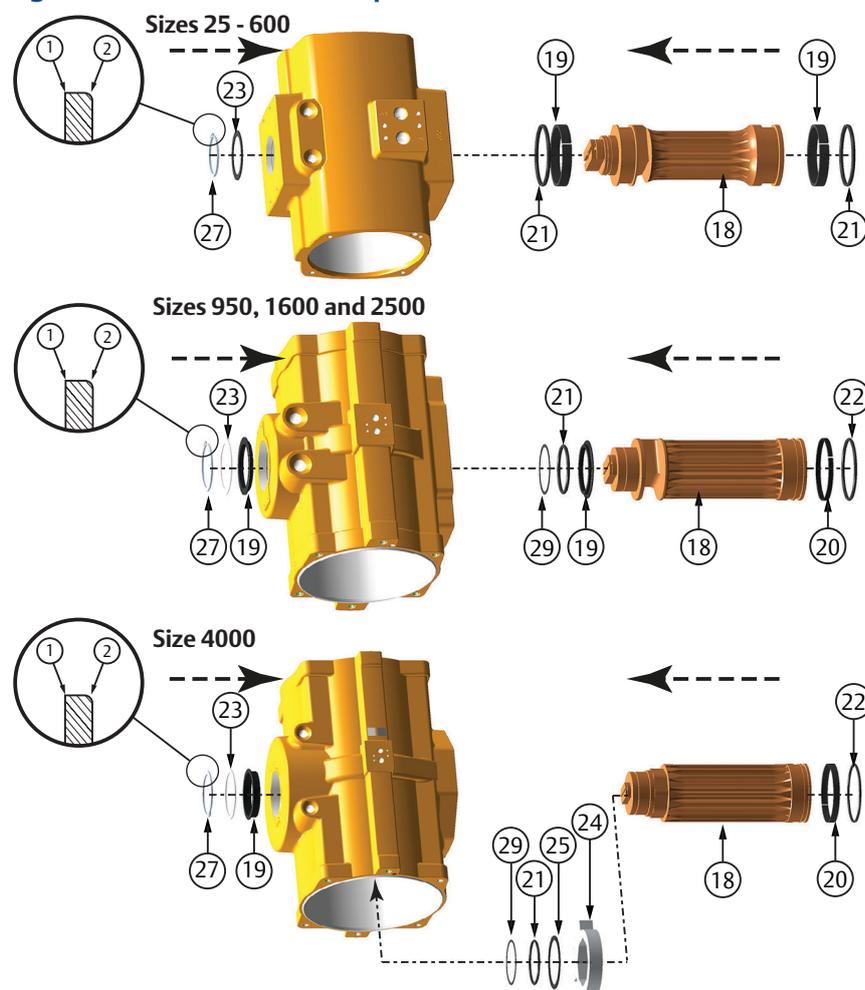


Table 15. Recommended circlip pliers according DIN 5254 (or equal) for shaft circlips

| Actuator size | Pinion top diameter | Pliers according DIN 5254 | Actuator size | Pinion top diameter | Pliers according DIN 5254 |
|---------------|---------------------|---------------------------|---------------|---------------------|---------------------------|
| 12 | 16 mm | 0.630" | 950 | 65 mm | 2.559 |
| 25 - 100 | 22 mm | 0.866" | 1600 | 75 mm | 2.953 |
| 150 - 350 | 36 mm | 1.417" | 2500 | 95 mm | 3.74 |
| 600 | 55 mm | 2.165" | 4000 | 96 mm | 3.78 |


9.3 Reassembly of the Pistons

NOTICE

Before reassembling the pistons, check the required assembly code (see Section 4.2).


1. Grease the piston parts according to Section 9.1.
2. Install the piston rack bearing strips (17) and piston O-ring seals (16) on the pistons (14). Ensure all these parts are kept in place during assembly.

Figure 28 Reassemble the pistons

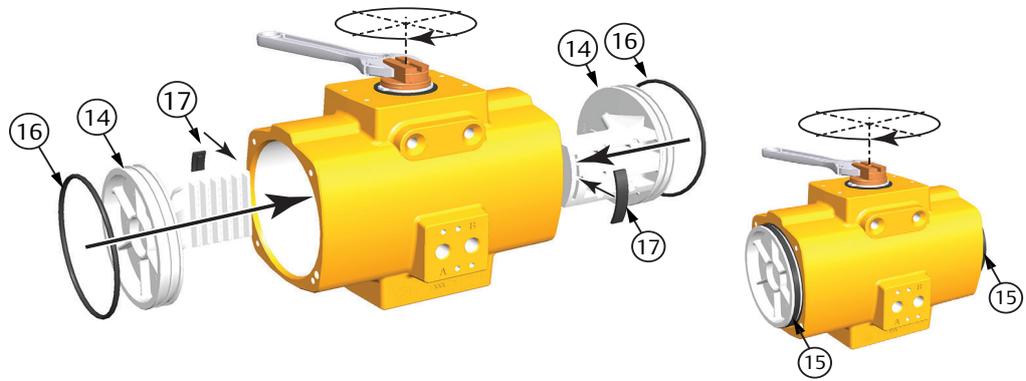

3. Align the pinion (see Figure 28) so that the teeth on the pinion will pick up the pistons rack teeth when turning the pinion. The position of the pinion top slot and the cam on the pinion top:
 - For standard or Spring-to-Close: Assembly Code CW.
 - For reverse or Spring-to-Open: Assembly Code CC.
4. Slightly push the pinion inward to engage with the pinion.
 - Ensure that smooth movement and 90-degree operation can occur without moving the pistons out of the actuator body.
 - For larger pistons, use a rubber mallet and slightly hitting the pistons inward to engage with the pinion.
5. When the pistons are moved 90° inwards (see Figure 28), check that the pinion slot on the pinion top is:
 - Perpendicular to the length centre line of the house for assembly code CW.
 - In line to the length centre line of the house for assembly code CC.
6. If not, turn pinion to move the pistons outward until they disengage from the pinion. Shift one tooth of the pinion, reassemble and check again.
7. Move the pistons outward so that just the bearing groove sticks out of the housing. Fold the piston bearings (15) around the piston and hold the bearing ends in place while moving the pistons inwards.
 - For larger pistons, use a rubber mallet and slightly hitting the pistons inward to engage with the pinion.

Figure 29 Position of the slot and the cam on the pinion top

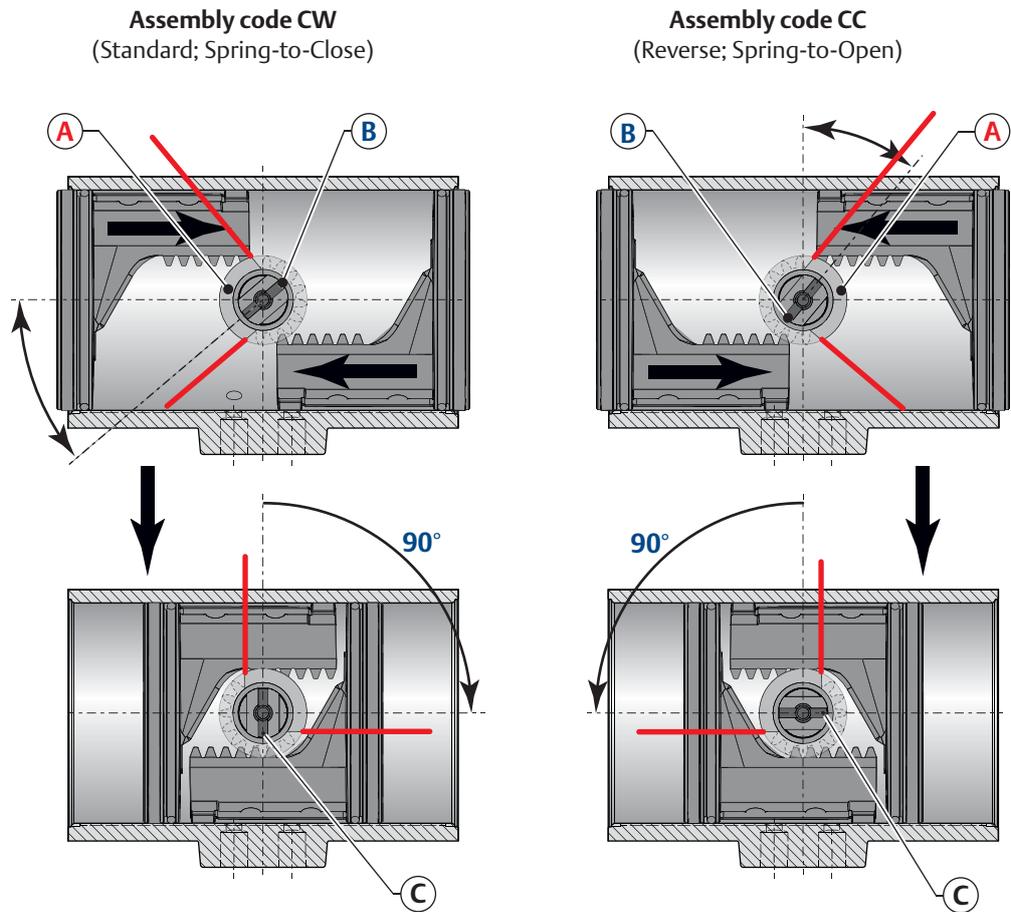

- A = Position of cam
- B = Position of slot and dot in pinion
- C = Final position of pinion dot


NOTE:

When the pistons are completely moved inwards, the pinion top will show a 5° over travel.

9.4 Reassembly and Settings of the Limit Stops

1. Install the limit stop screws (30), limit stop nuts (31), limit stop washers (32) and limit stop O-rings (33).

Figure 30 Install Limit Stop Bolts

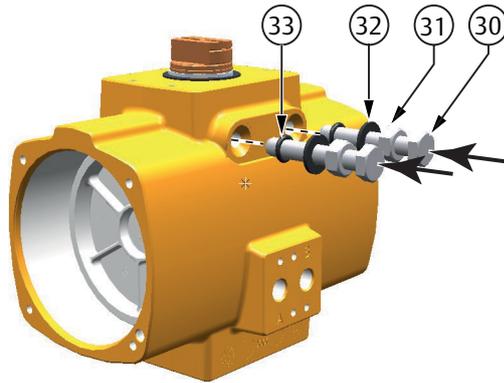


2. Move the pistons inward until the slot in the top of the pinion is perpendicular to centerline of the housing.
3. Double check if the position of the slot and the cam on the pinion top is in the correct position (see Figure 28). Screw in the right hand travel stop until it comes into contact with the pinion stop face.
4. Move the pistons outward until the slot in the top of the pinion is in line with the centerline of the housing.
5. Screw in the left hand travel stop until it comes into contact with the pinion stop face.
 - For accurate travel stop adjustment of the actuator on the valve, see Section 5.

9.5 Reassembly of the End Caps

9.5.1 Double-Acting Actuators

- Grease the O-ring seals (11) and B port seals (2) according to Section 9.1.
- Ensure that O-ring seals (11) and B port seals (2) are kept in place during assembly.
- Install the end caps (6) and tighten the end cap screws (8). Refer to Table 16 for the correct torque.

Figure 31 Double-Acting end cap assembly

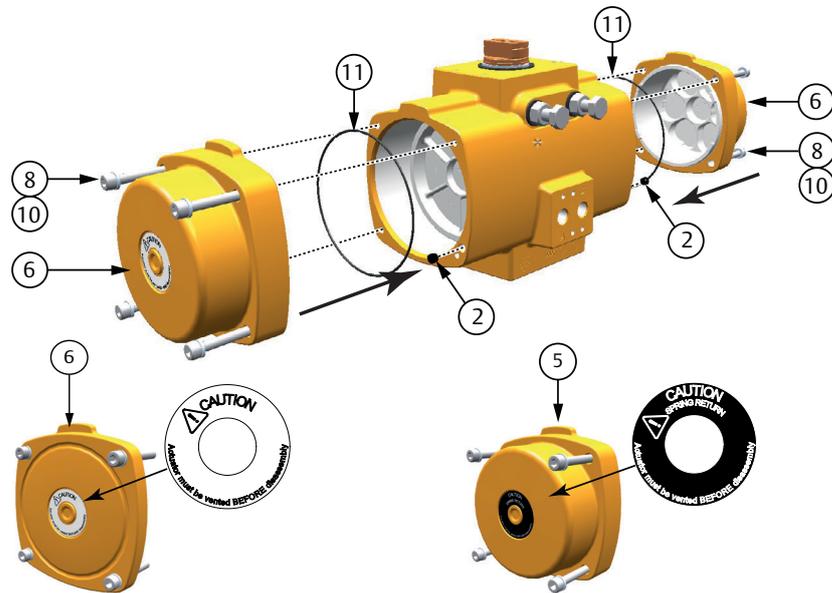

Double-Acting end caps (6) are fitted with a white warning sticker. Spring-Return end caps (5) are fitted with a black warning sticker.

Actuator sizes 25 to 100 have high end caps for Double-Acting and Spring-Return models.

Actuator sizes 150 to 4000 have low end caps for Double-Acting models and high end caps for Spring-Return models.

Table 16. End cap Screw Torque

| Actuator size | Thread | Tool | Size | Torque (Nm) | | | Torque (lbf-ft) | | |
|---------------|--------|-----------|------|-------------|------|------|-----------------|------|------|
| | | | | Target | Min. | Max. | Target | Min. | Max. |
| 12 | M4 | Allen key | SW 3 | 1.1 | 0.8 | 1.3 | 0.8 | 0.6 | 1.0 |
| 25 | M5 | | SW 4 | 2.0 | 1.6 | 3.0 | 1.5 | 1.2 | 2.2 |
| 40 | M5 | | SW 4 | 2.0 | 1.6 | 3.0 | 1.5 | 1.2 | 2.2 |
| 65 | M5 | | SW 4 | 2.0 | 1.6 | 3.0 | 1.5 | 1.2 | 2.2 |
| 100 | M5 | | SW 4 | 2.0 | 1.6 | 3.0 | 1.5 | 1.2 | 2.2 |
| 150 | M6 | | SW 5 | 3.3 | 2.6 | 5.1 | 2.4 | 1.9 | 3.8 |
| 200 | M6 | | SW 5 | 3.3 | 2.6 | 5.1 | 2.4 | 1.9 | 3.8 |
| 350 | M8 | | SW 6 | 8.4 | 6.7 | 12.2 | 6.2 | 4.9 | 9.0 |
| 600 | M10 | | SW 8 | 15.3 | 12.2 | 24.8 | 11.3 | 9.0 | 18.3 |
| 950 | M12 | | SW10 | 24.3 | 19.4 | 41.6 | 17.9 | 14.3 | 30.7 |
| 1600 | M12 | | SW10 | 24.3 | 19.4 | 41.6 | 17.9 | 14.3 | 30.7 |
| 2500 | M12 | | SW10 | 24.3 | 19.4 | 41.6 | 17.9 | 14.3 | 30.7 |
| 4000 | M14 | | SW12 | 43.5 | 34.8 | 66.4 | 32.1 | 25.7 | 49.0 |

9.5.2 Spring-Return actuators (Size 25 to 600)

IMPORTANT:

EL-O-Matic F-Series Spring-Return actuators are supplied with springs on each side of the actuator. Throughout the F-Series size range, there are three different spring designs:


- Size F12 has only 1 spring on each side.
- Sizes F25 to F600 have 6 springs on each side (see Figure 32).
- Sizes F950 to F4000 have 3 springs on each side (see Section 9.5.3).

Check below Figures to see where to place the spring cartridges in case of spring set conversion.

When replacing spring cartridges in a Spring-Return actuator, ensure that the cartridges are replaced in their identical position from where they were removed.

Before assembling the spring cartridges and end caps, make sure that the pistons are completely inwards.


Figure 32 Spring placement size 25 to 600

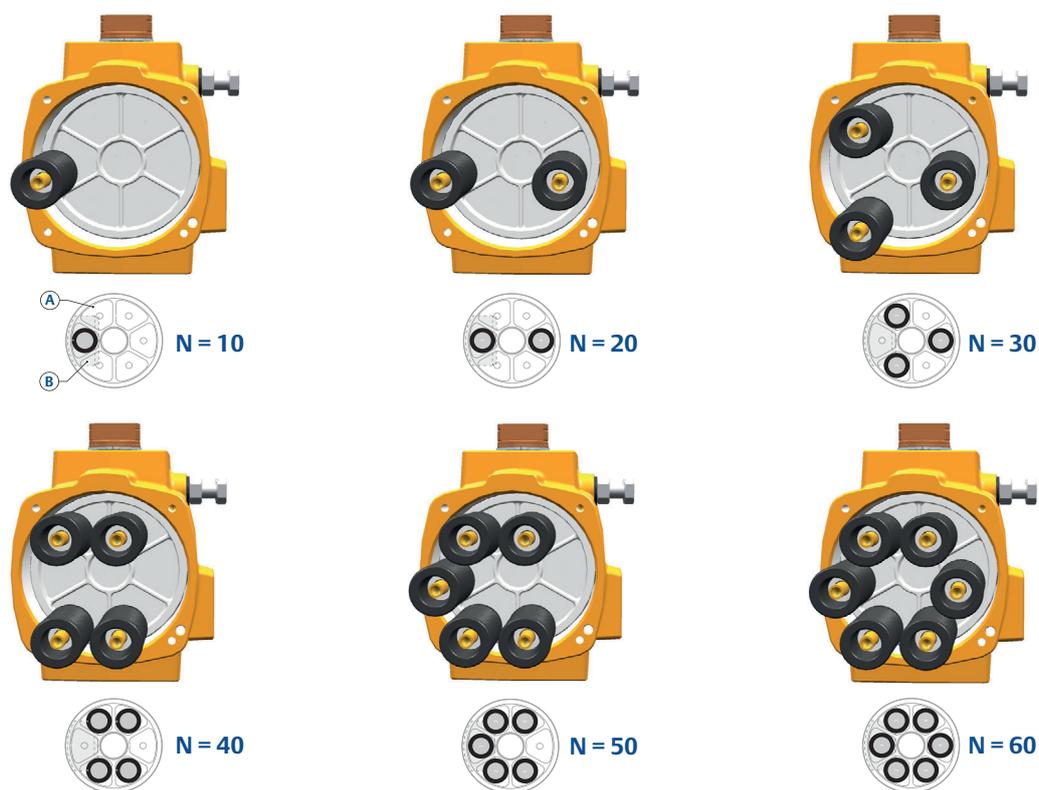

A = Piston top view
B = Position of gear rack

1. Grease the O-ring seals (11) and B port seals (2) according to Section 9.1.
2. Ensure that O-ring seals (11) and B port seals (2) are kept in place during assembly.
3. Place the spring cartridges in actuator as per required spring set (see Figure 32).
4. Put the end cap screw washer (10) on the end cap screw (9) and tighten each end cap screw in small equal turns and in the sequence as per Figure 33. Refer to Table 16 for the correct torque. We recommend to use some grease on the screws for easier fastening.

Figure 33 Spring-Return End cap assembly size 25 to 600

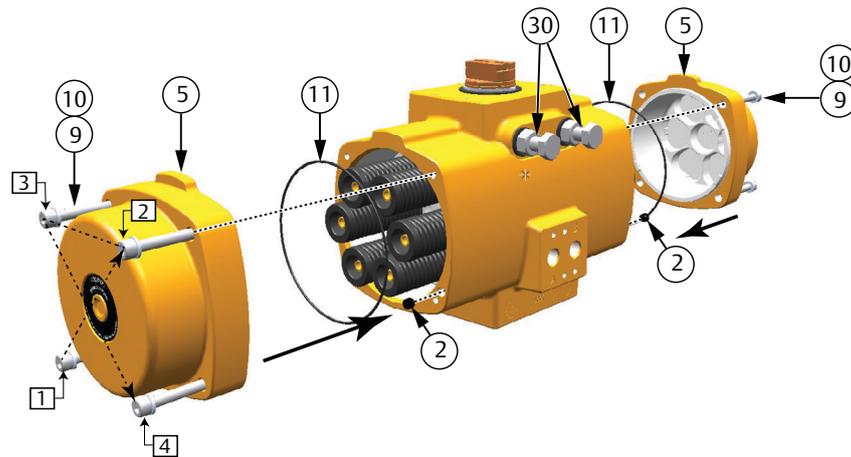

9.5.3 Spring-Return Actuators (Size 950 to 4000)

IMPORTANT:

EL-O-Matic F-Series Spring-Return actuators are supplied with springs on each side of the actuator. Throughout the F-Series size range, there are three different spring designs:


- Size F12 has only 1 spring on each side.
- Sizes F25 to F600 have 6 springs on each side (Section 9.5.2).
- Sizes F950 to F4000 have 3 springs on each side (see Figure 34).

Check below Figures to see where to place the springs in case of spring set conversion.

When replacing springs in a Spring-Return actuator, ensure that the springs are replaced in their identical position from where they were removed.

Before assembling the springs and end caps, make sure that the pistons are completely inwards.


Figure 34 Spring cartridge placement

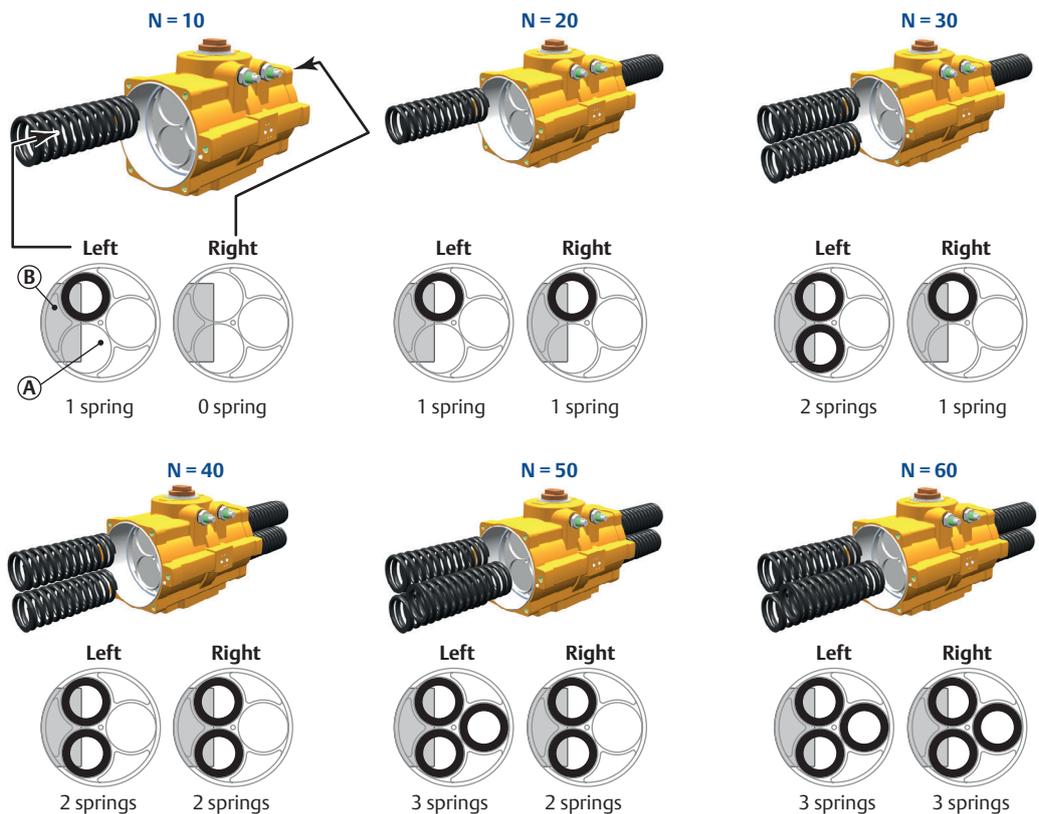

A = Piston top view
 B = Position of gear rack

1. Grease the O-ring seals (11) and B port seals (2) according to Section 9.1.
2. Ensure that O-ring seals (11) and B port seals (2) are kept in place during assembly.
3. Place the spring in actuator as per required spring set (see Figure 29).
4. Put the end cap screw washer (10) on the end cap screw (9) and tighten each end cap screw in small equal turns and in the sequence as per Figure 35. Refer to Table 16 for the correct torque. We recommend to use some grease on the screws for easier fastening.

Figure 35 Spring-Return end cap assembly size 950 to 4000

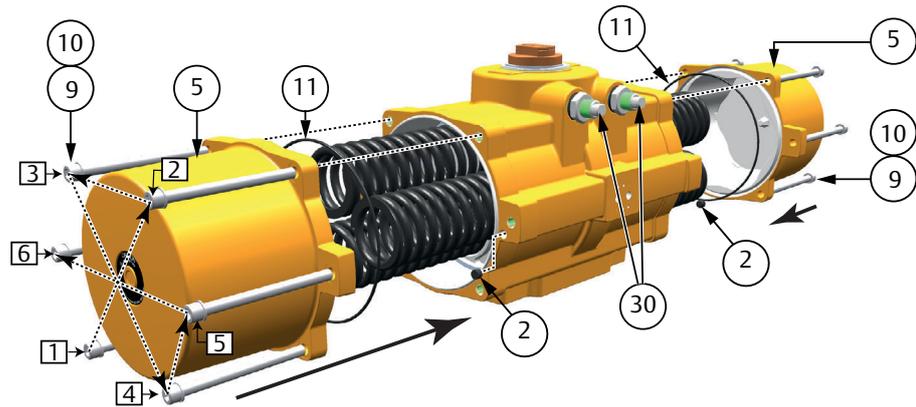


9.6 Basic Function and Air Leak Test

⚠ CAUTION

Applying pressure to the actuator will cause the actuator/valve assembly to operate.

1. Apply pressure (max. 8 bar/120 psi) to ports A and B. Use some soap suds at the indicated points: around pinion top (1), pinion bottom (2), the end caps (3) and limit stops (4).
2. In case of leakage around:
 - a. The limit stop bolts: Turn the lock nut of the bolts tighter, until the leakage stops.
 - b. The end caps: Disassemble the end caps, replace O-rings and reassemble.
 - c. The pinion top or bottom and A- or B- port: Disassemble the complete actuator, replace O-rings and reassemble.

Figure 36 Basic function and air leak test

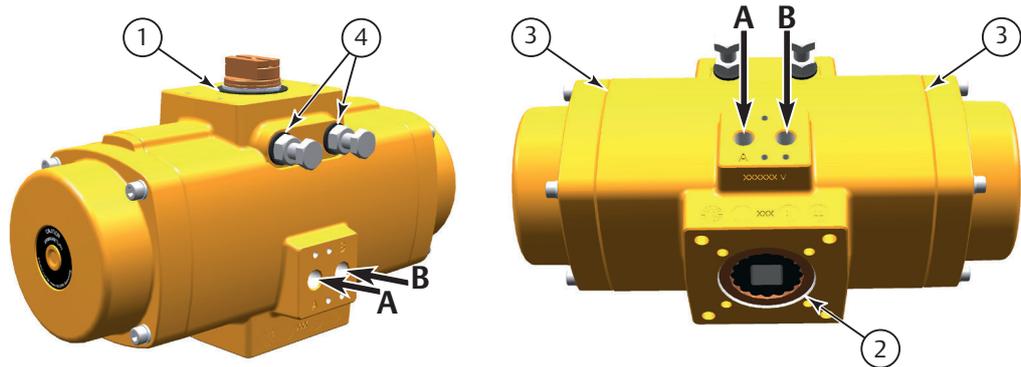

Section 10: Troubleshooting

10.1 Mechanical Problems

| Problem | Possible error | Solution | Where to find |
|--|---|---|---------------|
| Feedback position and actual position are not the same. | Actuator and valve are mounted 90° rotated in relation to each other. | Remove actuator from valve. Check assembly code of actuator. Put both valve and actuator in “Closed” position. Mount actuator on valve. | Section 4 |
| Valve is in “Closed” position, actuator is in “Open” position and will not move anymore. | | | |
| Valve does not reach the completely “Closed” or “Open” position. | Limit stop screws are not set correctly. | Readjust the limit stop screws. | Section 5 |
| | Insert is not mounted properly. | Mount the insert in the right position. Remark: Rotate insert to one cam = 22.5°. | Section 4.5 |
| | Pressure too low. | Apply pressure as per sizing. | |
| | Sizing is wrong. | Check valve torque data with actuator torque data. | |
| | Pinion is mounted in the wrong position. | Reassemble actuator. | Section 9 |
| Actuator rotates, valve does not. | No coupling between actuator shaft and valve spindle. | Install a coupling between actuator shaft and valve spindle. | Section 4.5 |
| Actuator does not rotate or does not rotate smoothly. | Broken gearing on pistons or pinion. | Contact nearest EL-O-Matic representative to replace actuator. | Appendix A |
| | Spring or Spring cartridge is broken. | Contact nearest EL-O-Matic representative to replace actuator. | |
| Limit stop screws cannot be turned out anymore. | Limit stop screws is bend. | Contact nearest EL-O-Matic representative to replace actuator. | |

10.2 Pneumatic Problems

| Problem | Possible error | Solution | Where to find |
|--|---|---|--|
| Actuator does not react to electrical control signal. | There is no supply pressure at the actuator. | Supply the right pressure to the actuator. | Section 2.3 Check that the actual supply pressure is higher than the sizing pressure. |
| Actuator does not react good to electrical control signal. | There is sufficient supply air pressure but insufficient supply air capacity. | Take care the supply air tubing has the right dimensions. | Section 4.6 |
| | Supply pressure too low, causing pilot operated solenoid valve to fail. | Check that supply pressure at the actuator and solenoid is sufficient to operate the actuator. | Section 2.3 Check that the actual supply pressure is higher than the sizing pressure. |
| | Solenoid valve is not mounted properly. | Check the solenoid valve mounting. | Instructions shipped with the solenoid valve. |
| | Speed control throttle (if present) blocks air flow. | Turn the speed control more open. | Instructions shipped with the speed control valve. |
| | Manual override (if present) on the Solenoid Valve is locked. | Unlock manual override on the solenoid valve. | Instructions shipped with the manual override. |
| Air leakage between actuator and solenoid valve. | Sealing between solenoid valve and actuator is not mounted air tight. | Reassemble solenoid valve taking care, that all seals are in place. | Instructions shipped with the solenoid valve. |
| Double-Acting actuator will only move to "open" position. | Actuator has wrong solenoid valve configuration. | Mount a solenoid valve suitable for Double-Acting actuators (4/2 or 5/2 function). | Instructions shipped with the solenoid valve. |
| | | Check that conversion plate on solenoids, that have both 3/2 and 5/2 functions, is in the right position. | Instructions shipped with the solenoid valve. |
| Leakage notice on the actuator. | Seals on the limit stops screws are not air tight. | Turn the lock nut of the bolts tighter; until the leakage stops. | Section 9.6 |
| | Seals on the end caps are not air tight. | Disassemble the end caps, replace O-rings and reassemble. Consider to replace all O-ring seals and bearings. | Section 9.6 or Section 6 |
| | Seals on the pinion top and bottom are not air tight. | Disassemble the complete actuator, replace O-rings and reassemble. Consider to replace all O-ring seals and bearings. | Section 9.6 or Section 6 |

10.3 Electrical Problems

| Problem | Possible error | Solution | Where to find |
|---|---|---|--|
| Actuator does not react to control signals. | Control wiring. Power supply wiring or feedback wiring are not right connected. | Connect all wiring in the right way. | Instructions of the control or feedback accessories. |
| | The power supply voltage is not the same as the voltage of the applicable solenoid valve. | Connect the right power supply voltage. | Instructions of the solenoid valve. |
| There are problems with position feedback after sending the actuator to either the "Open" or "Closed" position. | The wiring of the feedback signals may be switched. | Connect the feedback wiring in the right way. | Instructions of the feedback device. |

Section 11: Parts List and Spare Parts Recommendations

11.1 Actuator Size F12

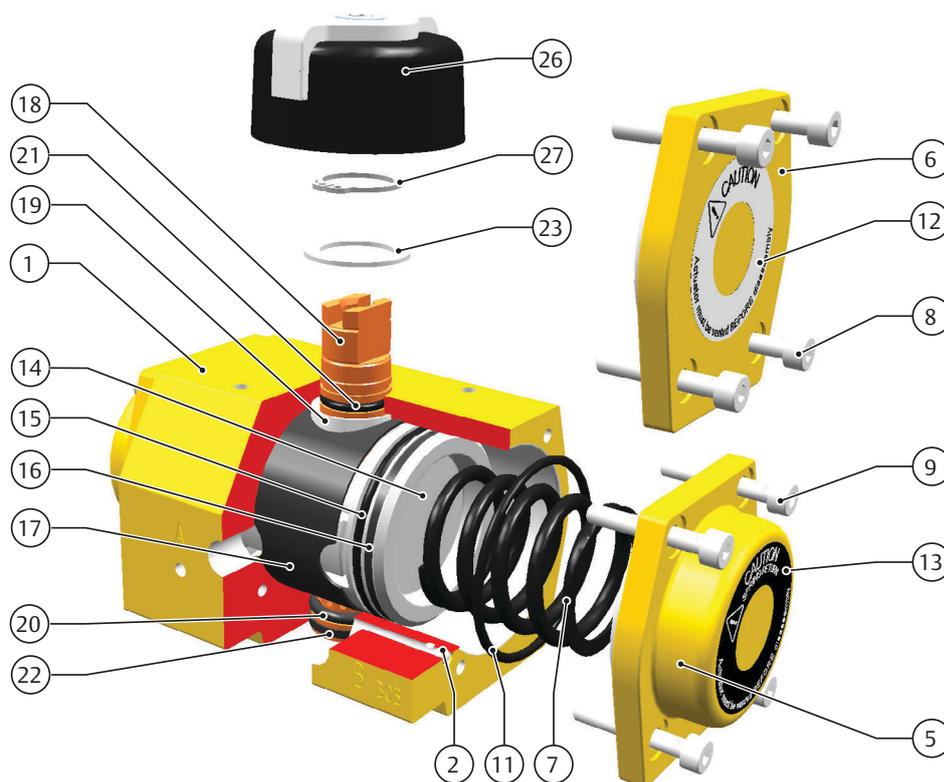


Table 17. Parts List

| Pos. | Qty | Notes | Description | Material |
|------|--------|-------|-----------------------|-----------------------------|
| 1 | 1 | - | House | Extruded aluminium alloy |
| 2 | 2 | 1 | B-port ball | Steel |
| 5 | 2 | - | End cap SR (DA) | Cast Aluminium alloy |
| 6 | 2 | - | End cap DA | Cast Aluminium alloy |
| 7 | Max. 2 | - | Springs | Spring steel |
| 8 | 8 | - | End cap screw DA | Stainless Steel |
| 9 | 8 | - | End cap screw SR | Stainless Steel |
| 11 | 2 | 1 | O-ring end cap | Nitrile rubber |
| 12 | 2 | - | Warning sticker DA | Polyester |
| 13 | 2 | - | Warning sticker SR | Polyester |
| 14 | 2 | - | Piston | Cast Aluminium alloy |
| 15 | 2 | 1 | Bearing piston | PTFE 25% carbon-filled |
| 16 | 2 | 1 | O-ring piston | Nitrile rubber |
| 17 | 1 | 1 | Guide band | Nylatron |
| 18 | 2 | - | Pinion | High grade aluminium |
| 19 | 1 | 1 | Bearing pinion top | POM |
| 20 | 1 | 1 | Bearing pinion bottom | POM |
| 21 | 1 | 1 | O-ring pinion top | Nitrile rubber |
| 22 | 1 | 1 | O-ring pinion bottom | Nitrile rubber |
| 23 | 1 | 1 | Thrust bearing pinion | POM, black UV stabilized |
| 26 | 1 | - | Indicator assembly | ABS + stainless steel screw |
| 27 | 1 | 1 | Circlip | Spring steel |

Notes:

1 Included in Service Kit.

11.2 Actuator Sizes F25 to F600

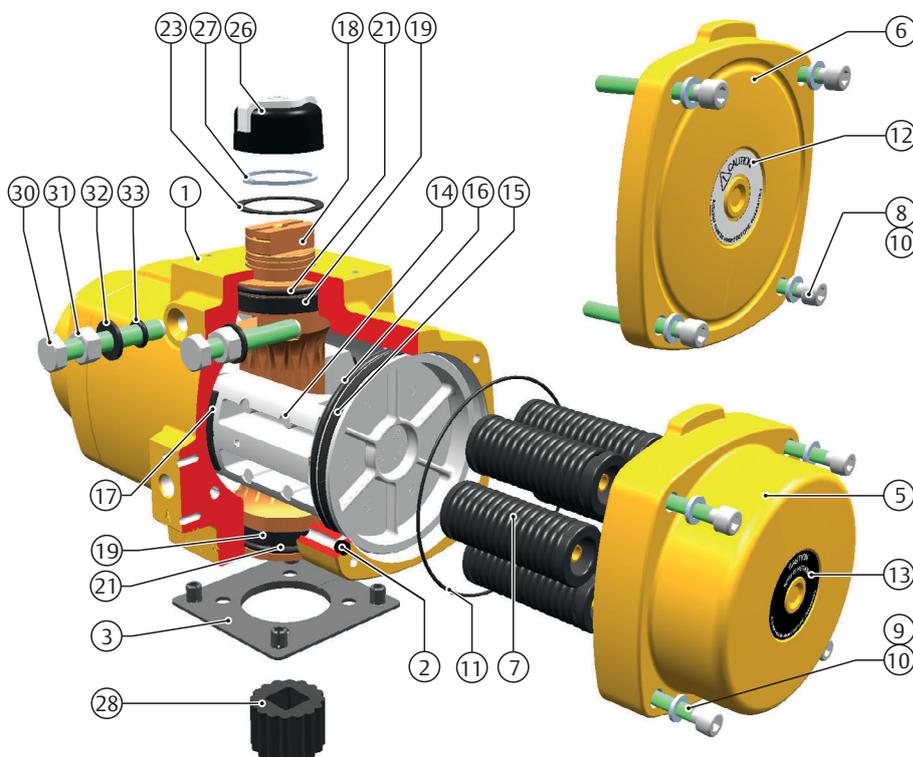


Table 18. Parts List

| Pos. | Qty | Notes | Description | Material |
|------|---------|-------|---------------------------|-----------------------------|
| 1 | 1 | - | House | Cast Aluminium alloy |
| 2 | 2 | 1 | B-port seal | Nitrile rubber |
| 3 | 1 | - | Center plate (option) | Nylon PA6, Black |
| 5 | 2 | 2 | End cap SR (DA) | Cast Aluminium alloy |
| 6 | 2 | 2 | End cap DA | Cast Aluminium alloy |
| 7 | Max. 12 | - | Spring cartridge | Spring steel |
| 8 | 8 | - | End cap screw DA | Stainless Steel |
| 9 | 8 | - | End cap screw SR | Stainless Steel |
| 10 | 8 | - | End cap screw washer | Stainless Steel |
| 11 | 2 | 1 | O-ring end cap | Nitrile rubber |
| 12 | 2 | - | Warning sticker DA | Polyester |
| 13 | 2 | - | Warning sticker SR | Polyester |
| 14 | 2 | - | Piston | Cast Aluminium alloy |
| 15 | 2 | 1 | Bearing piston | PTFE 25% carbon-filled |
| 16 | 2 | 1 | O-ring piston | Nitrile rubber |
| 17 | 2 | 1 | Bearing strip piston rack | POM |
| 18 | 2 | - | Pinion | High grade aluminium |
| 19 | 2 | 1 | Bearing pinion | POM |
| 21 | 2 | 1 | O-ring pinion | Nitrile rubber |
| 23 | 1 | 1 | Thrust bearing pinion | POM, black UV stabilized |
| 26 | 1 | - | Indicator assembly | ABS + stainless steel screw |
| 27 | 1 | 1 | Circlip | Spring steel |
| 28 | 1 | - | Drive insert | Aluminium |
| 30 | 2 | - | Limit stop screw | Stainless steel |
| 31 | 2 | - | Limit stop nut | Stainless steel |
| 32 | 2 | 1 | Limit stop washer | PA66 |
| 33 | 2 | 1 | O-ring limit stop | Nitrile rubber |

Notes:

- 1 Included in Service Kit.
- 2 Actuator sizes 25 to 100 have high end caps for Double-Acting and Spring-Return models. Actuator sizes 150 to 4000 have low end caps for Double-Acting models and high end caps for Spring-Return models.

11.3 Actuator Sizes F950 to F2500

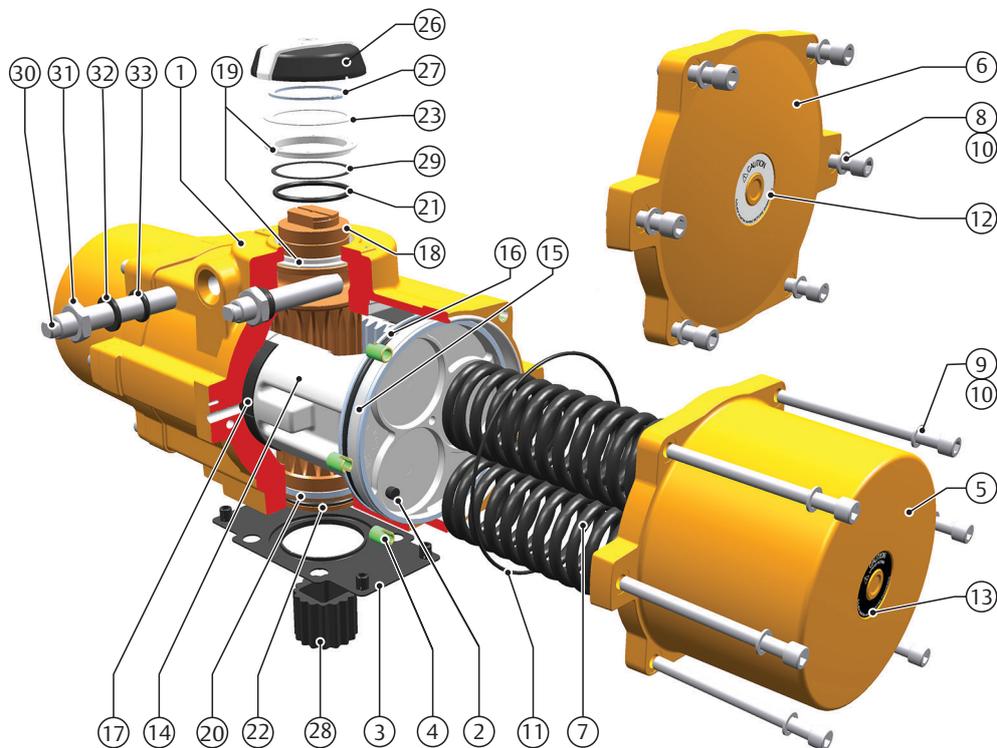


Table 19. Parts List

| Pos. | Qty | Notes | Description | Material |
|------|--------|-------|---------------------------|---|
| 1 | 1 | - | House | Cast Aluminium alloy |
| 2 | 2 | 1 | B-port seal | Nitrile rubber |
| 3 | 1 | - | Center plate (option) | Nylon PA6, Black |
| 4 | 12 | - | Thread insert | Steel |
| 5 | 2 | - | End cap SR | Cast Aluminium alloy |
| 6 | 2 | - | End cap DA | Cast Aluminium alloy |
| 7 | Max. 6 | - | Springs | Spring steel |
| 8 | 12 | - | End cap screw DA | Stainless Steel |
| 9 | 12 | - | End cap screw SR | Stainless Steel |
| 10 | 12 | - | End cap screw washer | Stainless Steel |
| 11 | 2 | 1 | O-ring end cap | Nitrile rubber |
| 12 | 2 | - | Warning sticker DA | Polyester |
| 13 | 2 | - | Warning sticker SR | Polyester |
| 14 | 2 | - | Piston | Cast Aluminium alloy |
| 15 | 2 | 1 | Bearing piston | PTFE 25% carbon-filled |
| 16 | 2 | 1 | O-ring piston | Nitrile rubber |
| 17 | 2 | 1 | Bearing strip piston rack | Nylon 66 resin containing Aramid Fibre & PTFE |
| 18 | 1 | - | Pinion | High grade aluminium |
| 19 | 2 | 1 | Bearing pinion top | POM |
| 20 | 1 | 1 | Bearing pinion bottom | POM |
| 21 | 1 | 1 | O-ring pinion top | Nitrile rubber |
| 22 | 1 | 1 | O-ring pinion bottom | Nitrile rubber |
| 23 | 1 | 1 | Thrust bearing pinion | POM, black UV stabilized |
| 26 | 1 | - | Indicator assembly | ABS + stainless steel screw |
| 27 | 1 | 1 | Circlip | Spring steel |
| 28 | 1 | - | Drive insert | Aluminium |
| 29 | 1 | 1 | Backup ring | POM |
| 30 | 2 | - | Limit stop screw | Stainless steel |
| 31 | 2 | - | Limit stop nut | Stainless steel |
| 32 | 2 | 1 | Limit stop washer | PA66 |
| 33 | 2 | 1 | O-ring limit stop | Nitrile rubber |

Notes:

1 Included in Service Kit.

11.4 Actuator Sizes F4000

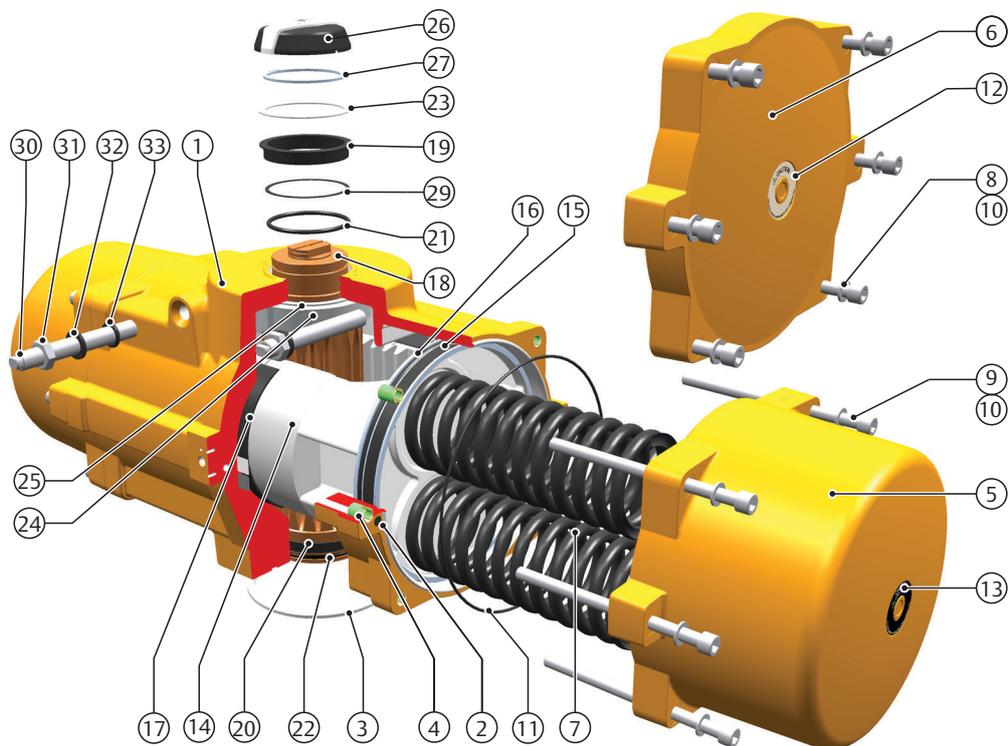


Table 20. Parts List

| Pos. | Qty | Notes | Description | Material |
|------|--------|-------|---------------------------|---|
| 1 | 1 | - | House | Cast Aluminium alloy |
| 2 | 2 | 1 | B-port seal | Nitrile rubber |
| 3 | 1 | - | Center ring (option) | Stainless Steel AISI 304 |
| 4 | 12 | - | Thread insert | Steel |
| 5 | 2 | - | End cap SR | Cast Aluminium alloy |
| 6 | 2 | - | End cap DA | Cast Aluminium alloy |
| 7 | Max. 6 | - | Springs | Spring steel |
| 8 | 12 | - | End cap screw DA | Stainless Steel |
| 9 | 12 | - | End cap screw SR | Stainless Steel |
| 10 | 12 | - | End cap screw washer | Stainless Steel |
| 11 | 2 | 1 | O-ring end cap | Nitrile rubber |
| 12 | 2 | - | Warning sticker DA | Polyester |
| 13 | 2 | - | Warning sticker SR | Polyester |
| 14 | 2 | - | Piston assembly | Cast Aluminium alloy |
| 15 | 2 | 1 | Bearing piston | PTFE 25% carbon-filled |
| 16 | 2 | 1 | O-ring piston | Nitrile rubber |
| 17 | 2 | 1 | Bearing strip piston rack | Nylon 66 resin containing Aramid Fibre & PTFE |
| 18 | 1 | - | Pinion | High grade aluminium |
| 19 | 2 | 1 | Bearing pinion top | POM |
| 20 | 1 | 1 | Bearing pinion bottom | POM |
| 21 | 1 | 1 | O-ring pinion top | Nitrile rubber |
| 22 | 1 | 1 | O-ring pinion bottom | Nitrile rubber |
| 23 | 1 | 1 | Thrust washer pinion | POM, black UV stabilized |
| 24 | 1 | - | Cam stroke adjustment | Steel |
| 25 | 1 | 1 | Cam thrust washer | POM, black UV stabilized |
| 26 | 1 | - | Indicator assembly | ABS + stainless steel screw |
| 27 | 1 | 1 | Circlip | Spring steel |
| 29 | 1 | 1 | Backup ring | POM |
| 30 | 2 | - | Limit stop screw | Stainless steel |
| 31 | 2 | - | Limit stop nut | Stainless steel |
| 32 | 2 | 1 | Limit stop washer | PA66 |
| 33 | 2 | 1 | O-ring limit stop | Nitrile rubber |

Notes:

1 Included in Service Kit.

Appendix A: Spring Load Removal

This section explains:

- How to remove the spring load safely of Spring-Return actuators in case:
 - The valve gets “stuck” in mid position.
 - One of the spring cartridges is broken.

⚠ WARNING

A spring-return actuator mounted on a valve, which is stuck in mid stroke, contains a high spring load which will cause a sudden rotation of the actuator versus the valve during disassembly. This can cause serious injury to personnel or damage to material.


On spring-return actuators with a broken spring cartridge, the end cap can be “shot” away during disassembly of the actuator. This can cause serious injury to personnel or damage to material.

A.1 Spring Load Relief

⚠ CAUTION

In case of an actuator/valve assembly “stuck” in mid position, leave the actuator on the valve and/or mounting bracket during this procedure.

Figure A-1 Spring load removal

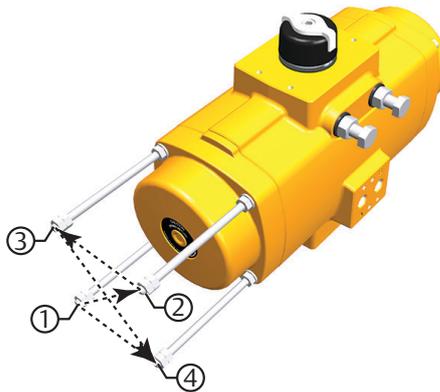

⚠ WARNING


Failure to follow instructions for removal of spring loaded actuator may result in serious personal injury.

1. Depressurize the actuator completely.
2. Based on the actuator size, choose the correct threaded rod kit from Table A-1.
3. Replace one by one each end cap screw for the threaded rod kit and turn down the adjusting nut until it touches the end cap.
4. Once all for end cap screws have been replaced, gradually turn the adjustment nuts on threaded rod in CCW direction by turning the nuts half turn at a time. Make sure the rod itself does not turn. Continue this until the load of springs are relieved.
5. Repeat the same procedure for the end cap screws on the other size of the actuator as shown in Figure A-1.
6. In case of an actuator/valve assembly “stuck” in mid position: The actuator now can be disassembled from Valve, by removing the mounting studs/bolts.

Table A-1. Threaded rod dimensions

| Actuator Size | Thread | Threaded rod length | |
|---------------|--------|---------------------|--------|
| | | (mm) | (inch) |
| 12 | M4 | 132 | 5.2 |
| 25 | M5 | 140 | 5.5 |
| 40 | M5 | 140 | 5.5 |
| 65 | M5 | 140 | 5.5 |
| 100 | M5 | 140 | 5.5 |
| 150 | M6 | 145 | 5.7 |
| 200 | M6 | 145 | 5.7 |
| 350 | M8 | 185 | 7.3 |
| 600 | M10 | 185 | 7.3 |
| 950 | M12 | 498 | 19.6 |
| 1600 | M12 | 498 | 19.6 |
| 2500 | M12 | 498 | 19.6 |
| 4000 | M14 | 600 | 23.6 |

Figure A-2 Spring load removal rod dimensions

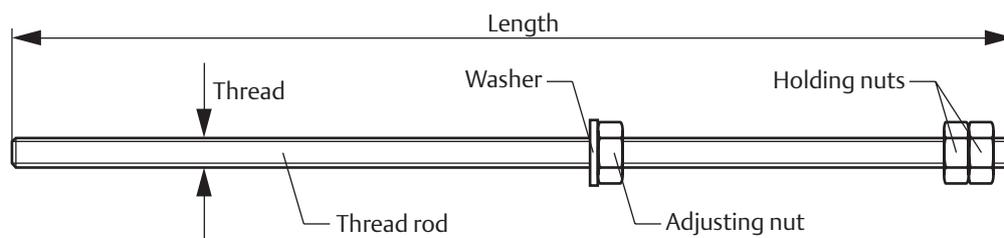

Appendix B: Tool and Torque Table

This section explains:

- Which tools to use for the indicated fasteners.
- The recommended amount of torque to apply on the indicated fasteners.

Table B-1. End cap bolts

| Actuator size | Thread | Tool | Size | Torque (Nm) | | | Torque (lbf-ft) | | |
|---------------|--------|-----------|------|-------------|------|------|-----------------|------|------|
| | | | | Target | Min. | Max. | Target | Min. | Max. |
| 12 | M4 | Allen key | SW 3 | 1.1 | 0.8 | 1.3 | 0.8 | 0.6 | 1.0 |
| 25 | M5 | | SW 4 | 2.0 | 1.6 | 3.0 | 1.5 | 1.2 | 2.2 |
| 40 | M5 | | SW 4 | 2.0 | 1.6 | 3.0 | 1.5 | 1.2 | 2.2 |
| 65 | M5 | | SW 4 | 2.0 | 1.6 | 3.0 | 1.5 | 1.2 | 2.2 |
| 100 | M5 | | SW 4 | 2.0 | 1.6 | 3.0 | 1.5 | 1.2 | 2.2 |
| 150 | M6 | | SW 5 | 3.3 | 2.6 | 5.1 | 2.4 | 1.9 | 3.8 |
| 200 | M6 | | SW 5 | 3.3 | 2.6 | 5.1 | 2.4 | 1.9 | 3.8 |
| 350 | M8 | | SW 6 | 8.4 | 6.7 | 12.2 | 6.2 | 4.9 | 9.0 |
| 600 | M10 | | SW 8 | 15.3 | 12.2 | 24.8 | 11.3 | 9.0 | 18.3 |
| 950 | M12 | | SW10 | 24.3 | 19.4 | 41.6 | 17.9 | 14.3 | 30.7 |
| 1600 | M12 | | SW10 | 24.3 | 19.4 | 41.6 | 17.9 | 14.3 | 30.7 |
| 2500 | M12 | | SW10 | 24.3 | 19.4 | 41.6 | 17.9 | 14.3 | 30.7 |
| 4000 | M14 | | SW12 | 43.5 | 34.8 | 66.4 | 32.1 | 25.7 | 49.0 |

Table B-2. Bottom flange

| Actuator size | ISO Pattern | Metric Thread | Torque (Nm) | | Imperial Thread | Torque (lbf-ft) | |
|---------------|--------------------|---------------|-------------|-------|-----------------|-----------------|-------|
| | | | Min. | Max. | | Min. | Max. |
| 12 | F04 | M6 | 4.5 | 5.0 | 10-24UNC | 3.3 | 3.7 |
| 25 | F03 inner pattern | M5 | 2.0 | 3.0 | 10-24UNC | 1.5 | 2.2 |
| | F05 outer pattern | M6 | 4.5 | 5.0 | 1/4"-20 | 3.3 | 3.7 |
| 40, 65, 100 | F05 inner pattern | M6 | 4.5 | 5.0 | 1/4"-20 | 3.3 | 3.7 |
| | F07 outer pattern | M8 | 10.5 | 12.5 | 5/16"-18 | 7.7 | 9.2 |
| 150, 200, 350 | F07 inner pattern | M8 | 10.5 | 12.5 | 5/16"-18 | 7.7 | 9.2 |
| | F10 outer pattern | M10 | 21.0 | 24.5 | 3/8"-16 | 15.5 | 18.1 |
| 600 | F10 inner pattern | M10 | 21.0 | 24.5 | 3/8"-16 | 15.5 | 18.1 |
| | F12 outer pattern | M12 | 34.5 | 43.0 | 1/2"-13 | 25.4 | 31.7 |
| 950 | F10 inner pattern | M10 | 21.0 | 24.5 | 3/8"-16 | 15.5 | 18.1 |
| | F14 outer pattern | M16 | 90.0 | 104.0 | 5/8"-11 | 66.4 | 76.7 |
| 1600, 2500 | F16 inner pattern | M20 | 170.0 | 204.0 | 3/4"-10 | 125.4 | 150.5 |
| | F25* outer pattern | 4x M16 | 90.0 | 104.0 | 4x 5/8"-11 | 66.4 | 76.7 |
| 4000 | F16 inner pattern | M20 | 170.0 | 204.0 | 3/4"-10 | 125.4 | 150.5 |
| | F25 outer pattern | 8x M16 | 90.0 | 104.0 | 8x 5/8"-11 | 66.4 | 76.7 |

1. For actuator sizes 1600 and 2500 only 4 holes of the ISO5211 F25 drilling pattern are available.

Table B-3. NAMUR (VDE/VDI 3845) flanges

| Flange | Metric | Torque (Nm) | | Imperial | Torque (lbf-ft) | |
|-------------------------------|--------|-------------|------|----------|-----------------|------|
| | Thread | Min. | Max. | Thread | Min. | Max. |
| Solenoid flange screw threads | M5 | 2.0 | 3.0 | 10-24UNC | 1.5 | 2.2 |
| Top flange screw threads | M5 | 2.0 | 3.0 | 10-24UNC | 1.5 | 2.2 |

Table B-4. Limit stop screws

| Actuator size | Thread | Bolt Wrench size (mm) | Nut wrench size (mm) |
|---------------|--------|-----------------------|----------------------|
| 25 | M 6 | 10 | 10 |
| 40 | M 8 | 13 | 13 |
| 65 | M 10 | 17 (16) ¹ | 17 (16) ¹ |
| 100 | M 10 | 17 (16) ¹ | 17 (16) ¹ |
| 150 | M 10 | 17 (16) ¹ | 17 (16) ¹ |
| 200 | M 12 | 19 (18) ¹ | 19 (18) ¹ |
| 350 | M 16 | 24 | 24 |
| 600 | M 20 | 30 | 30 |
| 950 | M 22 | 12 | 32 |
| 1600 | M 24 | 14 | 36 |
| 2500 | M 27 | 17 | 41 |
| 4000 | M 22 | 12 | 32 |

1. Default dimension according DIN933 standard
2. Dimensions in brackets according ISO4017 standard
3. Actuator size 12 is not available with limit stops

Table B-5. Recommended circlip pliers according DIN 5254 (or equal) for shaft circlips

| Actuator size | Pinion top diameter | | Pliers according DIN | Actuator size | Pinion top diameter | | Pliers according DIN |
|---------------|---------------------|--------|----------------------|---------------|---------------------|--------|----------------------|
| F12 | 16 mm | 0.630" | A1 | 950 | 65 mm | 2.559" | A3 |
| F25 - F100 | 22 mm | 0.866" | A2 | 1600 | 75 mm | 2.953" | A3 |
| F150 - F350 | 36 mm | 1.417" | A3 | 2500 | 95 mm | 3.74" | A4 |
| F600 | 55 mm | 2.165" | A3 | 4000 | 96 mm | 3.78" | A4 |

Table B-6. Angular Displacement Limit Stops

| Actuator size | Turns for 5° adjustment of the pinion: | 360° revolution of limit stop screw will adjust |
|---------------|--|---|
| F 12 | Actuator size 12 is not available with limit stops | |
| F 25 | 0.7 | 7.1° |
| F 40 | 0.8 | 6.3° |
| F 65 | 0.6 | 8.3° |
| F 100 | 0.7 | 7.1° |
| F 150 | 1.2 | 4.2° |
| F 200 | 1 | 5.0° |
| F 350 | 0.8 | 6.3° |
| F 600 | 0.8 | 6.3° |
| F 950 | 1.1 | 4.7° |
| F 1600 | 1.3 | 4.1° |
| F 2500 | 1.5 | 3.4° |
| F 4000 | 3.2 | 1.6° |

Appendix C: Full Stroke Adjustment Option

This section explains:


- How to mount the Full Stroke Adjustment option to an actuator.
- How to adjust the Full Stroke Adjustment option to a required rotation angle.

C.1 Full Stroke Adjustment Option

The Full Stroke Adjustment option is available as a complete actuator or as an end cap conversion kit in order to upgrade a standard actuator into a Full Stroke Adjustment version.

The option is available for sizes 25 to 600 and both the Double-Acting kit and Spring-Return kit use the spring-return end cap.

Figure C-1 Availability formats of the full Stroke Adjustment option

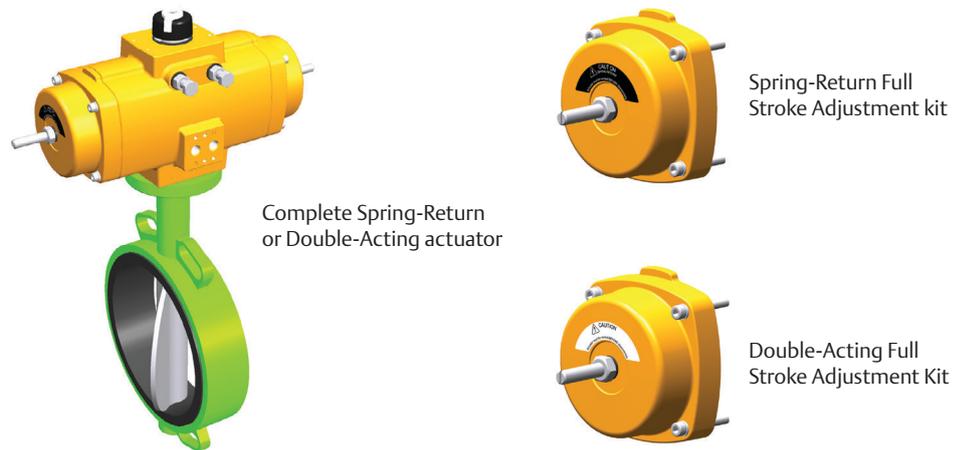

C.2 Convert a Standard Actuator into a Full Stroke Adjustment Version

Before starting to assemble the Full Stroke adjustment kit, please check the kit for completeness. See Figure C-2.

Figure C-2 Full Stroke adjustment kit content

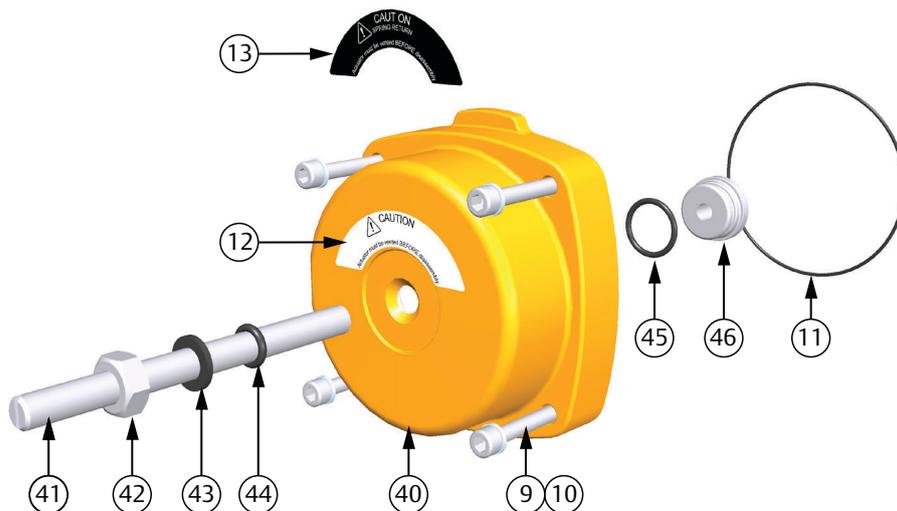


Table C-1 Content Full Stroke Adjustment kit


| Pos. | Description | Material | Qty. | Notes |
|------|---|----------------------|------|-------|
| 40 | End cap - Full stroke adjustment | Cast Aluminium alloy | 2 | 1 |
| 41 | Full Stroke adjustment screw | Stainless steel | 2 | - |
| 42 | Full Stroke adjustment Nut | Stainless steel | 2 | - |
| 43 | Full Stroke adjustment washer | PA66 | 2 | - |
| 44 | O-Ring - Full Stroke adjustment screw | Nitrile rubber | 2 | - |
| 45 | O-Ring - Thread bush | Nitrile rubber | 2 | - |
| 46 | Thread bush | Aluminium | 2 | - |
| 9 | End cap screw | Stainless steel | 8 | - |
| 10 | Washer end cap screw | Stainless steel | 8 | - |
| 11 | O-ring end cap | Nitrile rubber | 2 | - |
| 12 | Warning sticker DA Full Stroke adjustment | Polyester | 2 | - |
| 13 | Warning sticker SR Full Stroke adjustment | Polyester | 2 | - |

1. The same Full Stroke adjustment end cap is used for both Double-Acting and Spring-Return actuators (flat Double-Acting actuator end caps with Full Stroke Adjustment options are not available).

C.2.1 Procedure

1. Remove the existing end caps of a standard actuator.
 - Follow the instructions of Section 8 to remove both the end caps of the actuator.
 - For Spring-Return actuators; note the original positions of the spring cartridges.
2. Mount the Full Stroke Adjustment End cap kit to the actuator.
 - The stroke adjustment screw (41) is factory set at the 90° position.
3. Grease the O-ring seals (11) and B port seals (2) according to Section 9.1.
4. Ensure that O-ring seals (11) and B port seals (2) are kept in place during assembly.
5. For Spring-Return actuators; place the spring cartridges (7) back in their original positions.
6. Install the Full Stroke end cap kits and tighten the end cap screws (9,10).
For Spring-Return units; tighten each endcap screw (9,10) in small equal turns and in the sequence as per Figure C-3. Refer to Appendix B, Table B-1 for the correct torque.
7. For Spring-Return units, place the black warning sticker (13) on the end cap.
For Double-Acting units, place the white warning sticker (12) on the end cap.

Figure C-3 Assembly of Full Stroke adjustment end cap kit

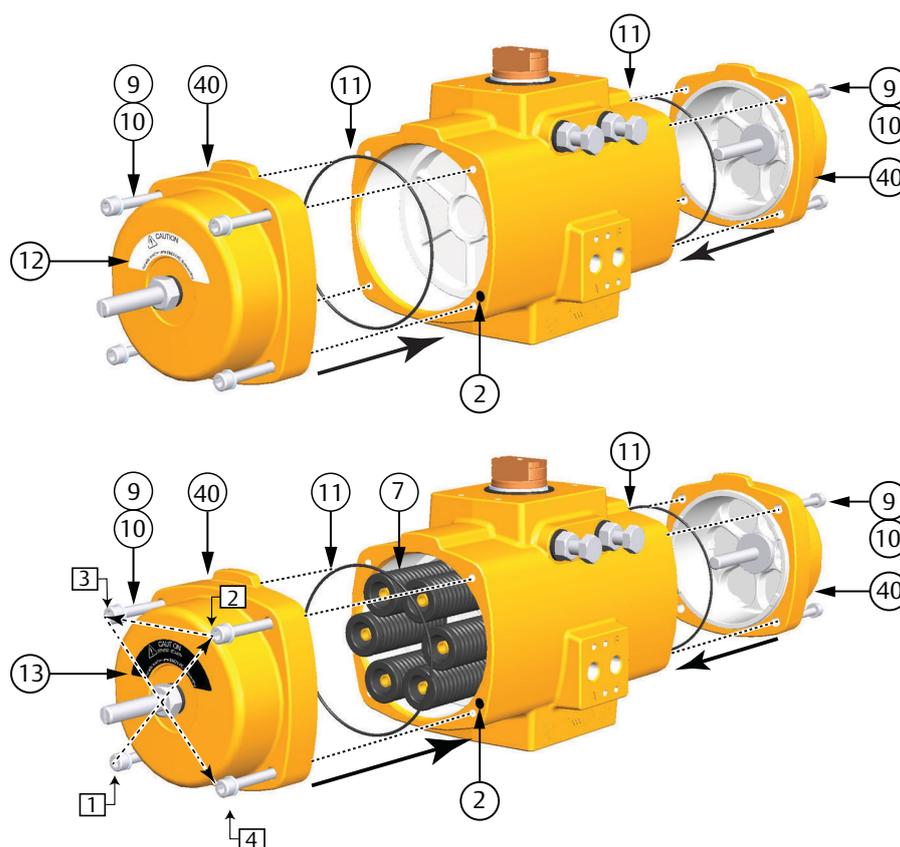

C.3 Full Stroke Adjustment Setting

NOTE:

Standard actuators or actuators with the Full Stroke Adjustment option are shipped by default with a rotation setting of $90^\circ \pm 0.5^\circ$.

The stroke adjustment setting procedure can be two steps:

1. Setting the Full Stroke Adjustment screw to the 90° (factory) position.
 - This step can be applicable if a standard actuator needs to be converted with a Full Stroke Adjustment end cap kit or if the position of the Full Stroke Adjustment screw is somehow lost.
2. Setting the Full Stroke Adjustment screw to the required angle.


C.3.1 Factory Setting Procedure

1. In order to set the Full Stroke Adjustment Screws accurately to the outward position:
 - Do not change the setting of the DSA limit stop screws (A and B) located above the air connection interface.
 - Move the pistons of the actuator outwards by applying pressure to the A-port.
2. Screw in both the Full Stroke Adjustment Screws (41) until the screws touch the pistons. You will feel an obstruction.

IMPORTANT:

Do not overtighten the screws.

Figure C-4 DSA limit stop screw setting

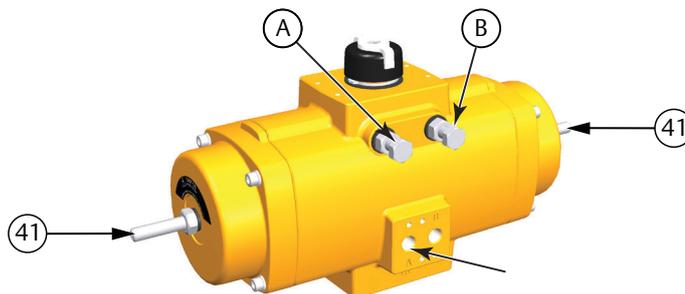

You have now set the adjustment screw to the factory setting.

Notes:

1. Only the outward stroke can be adjusted with the Full Stroke Adjustment screws.
 - In case of assembly code CW, the left side limit stop (A) is redundant.
 - In case of assembly code CC, the right side limit stop (B) is redundant.
2. For the inward stroke the standard limit stops can be used:
 - The right side limit stop (B) for assembly code CW.
 - The left side limit stop (A) for assembly code CC.

C.3.2 Setting the Full Stroke Adjustment Screw to the Required Angle

1. Move the pistons of the actuator inwards.
 - For Spring-Return actuators this happens automatically when the actuator is vented.
 - For Double-Acting actuators vent the A-port and apply pressure to the B-port.
2. In order to set the actuator to the required angle, use next Table to define the number of revolutions which you have to turn in the Full Stroke Adjustment Screws.
3. Turn in both the adjustment screws (41) as defined in step 2. Both the adjustment screws should be turned in with the same length or number of revolutions.

⚠ CAUTION

Screwing in only one adjustment screw or unequal setting of both the screws will lead to high point loads on the pistons and can cause premature failure of the actuator.

4. Test cycle the actuator to check if the correct rotation angle is set. If required, repeat steps 1 to 3 to adjust the rotation angle to the required angle.

Table C-2 Actuator angle rotation per full revolution of Full Stroke adjustment screw

| Actuator size | Stroke | | Flathead screw driver | Screw | | Actuator angle rotation per full revolution of screw |
|---------------|--------|------|-----------------------|--------|------------|--|
| | mm | inch | | Thread | Pitch (mm) | |
| 25 | 15.7 | 0.62 | 1.0 x 5.5 | M6 | 1 | 5.7° |
| 40 | 18.8 | 0.74 | 1.2 x 6.5 | M8 | 1.25 | 6.0° |
| 65 | 22.0 | 0.87 | 1.2 x 6.5 | M8 | 1.25 | 5.1° |
| 100 | 25.1 | 0.99 | 1.2 x 6.5 | M10 | 1.5 | 5.4° |
| 150 | 31.4 | 1.24 | 1.2 x 6.5 | M10 | 1.5 | 4.3° |
| 200 | 37.7 | 1.48 | 1.2 x 6.5 | M10 | 1.5 | 3.6° |
| 350 | 37.7 | 1.48 | 1.2 x 6.5 | M12 | 1.75 | 4.2° |
| 600 | 44.0 | 1.73 | 1.2 x 6.5 | M16 | 2 | 4.1° |

World Area Configuration Centers (WACC) offer sales support, service, inventory and commissioning to our global customers. Choose the WACC or sales office nearest you:

NORTH & SOUTH AMERICA

19200 Northwest Freeway
Houston TX 77065
USA
T +1 281 477 4100

Av. Hollingsworth
325 Iporanga Sorocaba
SP 18087-105
Brazil
T +55 15 3413 8888

ASIA PACIFIC

No. 9 Gul Road
#01-02 Singapore 629361
T +65 6777 8211

No. 1 Lai Yuan Road
Wuqing Development Area
Tianjin 301700
P. R. China
T +86 22 8212 3300

MIDDLE EAST & AFRICA

P. O. Box 17033
Jebel Ali Free Zone
Dubai
T +971 4 811 8100

P. O. Box 10305
Jubail 31961
Saudi Arabia
T +966 3 340 8650

24 Angus Crescent
Longmeadow Business Estate East
P.O. Box 6908 Greenstone
1616 Modderfontein Extension 5
South Africa
T +27 11 451 3700

EUROPE

Holland Fásor 6
Székesfehérvár 8000
Hungary
T +36 22 53 09 50

Strada Biffi 165
29017 Fiorenzuola d'Arda (PC)
Italy
T +39 0523 944 411

For complete list of sales and manufacturing sites, please visit www.emerson.com/actuationtechnologieslocations or contact us at info.actuationtechnologies@emerson.com

www.emerson.com/el-o-matic

VCIOM-14696-EN ©2021 Emerson. All rights reserved.

The Emerson logo is a trademark and service mark of Emerson Electric Co. EL-O-Matic™ is a mark of one of the Emerson family of companies. All other marks are property of their respective owners.

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available upon request. We reserve the right to modify or improve the designs or specifications of such products at any time without notice.

