Type 8626, 8712

Accessories / Spare parts



ACCESSORIES / SPARE PARTS



Risk of injury and/or damage caused by the use of unsuitable parts.

Incorrect accessories and unsuitable replacement parts may cause injuries and damage the device and the surrounding area.

· Use only original accessories from Bürkert.

10.1. Accessories

The Bürkert accessories indicated below are recommended to ensure, problem-free operation, maintenance and repair of the device.

10.1.1. Electrical accessories, devices with an 8 pin M16 female fixed connector

Types	ltem	Order code
8006, 8702, 8626, 8712	8 pin M16 male connector (to be soldered)	918 299
	8 pin M16 male connector, with 5 m cable, with stripped end	787 733
	8 pin M16 male connector, with 10 m cable, with stripped end	787 734
	15 pin Sub-HD male connector with 5 m cable, with stripped end	787 735
	15 pin Sub-HD male connector with 10 m cable, with stripped end	787 736
	RS232 adapter for PC connection with an extension cable (order code 917039)	654 757
	9 pin Sub-D extension cable, RS232, 2 m	917 039
	RS422 adapter	666 370
	USB adapter	670 696
	USB cable, 2 m	772 299
	Software "Mass Flow Communicator"	Can be downloaded at www.burkert.com