









Model Number

PVM58

Features

- Industrial standard housing Ø58 mm
- PROFIBUS interface
- 30 Bit multiturn
- Speed transfer
- Extended scaling functions
- · Programmable limit switches
- Commissioning mode
- Servo or clamping flange

Description

This series of PROFIBUS rotary encoders is based on the modern fast technology of singleturn sampling and the mechanical gear box of the multiturn unit. The absolute encoder corresponds to the PROFIBUS profile for encoders, order no. 3.062. Operation is supported based on Class 1 and Class 2.

For operation based on Class 1, position data and diagnostic data bytes 1 ... 16 are available. In addition, the direction of the code can be selected as either cw ascending (clockwise rotation, code course ascending) or cw descending (clockwise rotation, code course descending).

If the rotary encoder is operated according to Class 2, additional functions to those from Class 1 are available. These include scaling of the resolution per revolution and the overall resolution, as well as the preset function. In addition, expanded diagnostic reporting is supported.

Besides, the rotary encoder offers extended functionalities such as speed transfer, extended scaling functions, programmable limit switches and a commissioning mode.

The removable connecting hood contains a slide switch for setting the terminating resistor and the rotary switches for setting the address. Assign a fixed address and bus termination to the encoder with this switches.

The device is designed for shaft mounting and is available in servo flange or clamping flange design.

Technical data

General	enecifications

Detection type photoelectric sampling

Functional safety related parameters

MTTF_d 70 a

Mission Time (T_M) 20 a

L_{10h} 1.9 E+11 at 6000 rpm and 20/40 N axial/radial shaft load Diagnostic Coverage (DC) 0 %

Electrical specifications

Power consumption P_0 max. 2.5 W Linearity \pm 2 LSB at 16 Bit, \pm 1 LSB at 13 Bit, \pm 0,5 LSB at 12 Bit

Output code binary code
Code course (counting direction) programmable

cw ascending (clockwise rotation, code course ascending)

cw descending (clockwise rotation, code course

descending)

Interface
Interface type PROFIBUS

Resolution

Single turn up to 16 Bit
Multiturn 14 Bit
Overall resolution up to 30 Bit
Transfer rate 0.0096 ... 12 MBit/s
Standard conformity PNO profile 3.062, RS 485

Connection

Terminal compartment in removable housing cover

Standard conformity

Protection degree DIN EN 60529, IP65 IP66 (with shaft seal)

Climatic testing DIN EN 60068-2-30 , no moisture condensation

Emitted interference EN 61000-6-4:2007

Noise immunity EN 61000-6-2:2005

 Shock resistance
 DIN EN 60068-2-27, 100 g, 6 ms

 Vibration resistance
 DIN EN 60068-2-6, 20 g, 10 ... 2000 Hz

Ambient conditions

 $\begin{array}{lll} \mbox{Operating temperature} & -40 \dots 85 \ ^{\circ}\mbox{C} \ (-40 \dots 185 \ ^{\circ}\mbox{F}) \\ \mbox{Storage temperature} & -40 \dots 85 \ ^{\circ}\mbox{C} \ (-40 \dots 185 \ ^{\circ}\mbox{F}) \end{array}$

Mechanical specifications

Material

Combination 1 housing: powder coated aluminium

flange: aluminium shaft: stainless steel housing: stainless steel

Combination 2 (Inox) housing: stainless steel flange: stainless steel

shaft: stainless steel

Mass approx. 600 g (combination 1) approx. 1200 g (combination 2)

Rotational speed max. 12000 min ⁻¹

Moment of inertia 30 gcm^2 Starting torque \leq 3 Ncm (version without shaft seal)

 Shaft load

 Axial
 40 N


 Radial
 110 N


Approvals and certificates

Pepperl+Fuchs Group • Tel.: Germany +49 621 776-0 • USA +1 330 4253555 • Singapore +65 67799091 • Internet http://www.pepperl-fuchs.com

UL approval cULus Listed, General Purpose, Class 2 Power Source

Dimensions

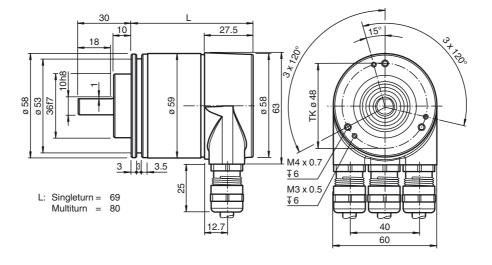

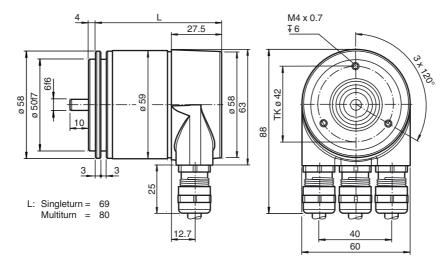

Accessories

9203

Angled flange

Mounting bracket, spring-loaded for clamping flange

AH 58-B1CA-2BW

9310-3

Synchro clamping element

Mounting bracket for servo flange

KW-10/10

Helical coupling

KW-6/10

Helical coupling

KW-6/6

Helical coupling

KW-6/8

Helical coupling

9401 10*10

Spring steel coupling

9401 10*12

Spring steel coupling

9401 6*10

Spring steel coupling

9401 6*6

Spring steel coupling

Spring steel coupling

9404 10*10

Spring disk coupling

9404 6*6

Spring disk coupling

9409 10*10

Bellows coupling

9409 6*10

Bellows coupling

9409 6*6

Bellows coupling

9409 6*8

149153

Date of issue:

Release date: 2012-07-19 15:34

Bellows coupling

9410 10*10

Precision coupling

Precision coupling

9410 10*12

9460 6*6

Stainless steel bellows coupling

9410 6*6

Precision coupling

9460 10*10

Stainless steel bellows coupling


Electrical connection


-	-	-	۰
-			۰

Terminal	Explanation
	Ground connection for power supply
B (left)	Data line B (pair 1), Bus In
A (left)	Data line A (pair 1), Bus In
(-)	0 V
(+)	10 V 30 V
B (right)	Data line B (pair 2), Bus Out
A (right)	Data line A (pair 2), Bus Out
(-)	0 V
(+)	10 V 30 V
	The supply lines only have to be connected once (regardless to which terminal). The outgoing bus is being uncoupled while the terminal resistor is on.

The arrangement of the terminals is shown in the section operating elements.

Indicating and operating elements

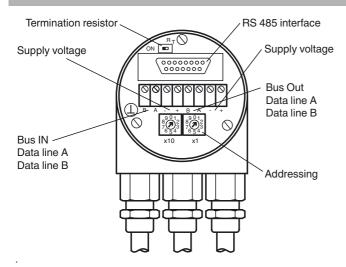

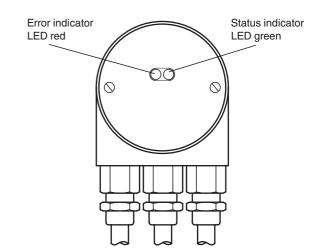


participant X

 R_T

Adjusting the participant address

The participant address can be adjusted with the rotary switches. The address can be defined between 1 and 99, and may only be assigned once.



last participant


EAdjusting the termination resistor

The terminating resistor R_T (121 Ω) can be connected to the circuit by means of the switch:

LED-indicators

LED red	LED green	Meaning	
off	off	No voltage supply	
on	on	Encoder ready, no configuration data received. possible reasons: - wrong address adjusted - wrong bus wiring	
on	flashing	Parameterising or configuration error. Encoder receives data of incorrect length or inconsistant data. possible reason: - adjusted encoder resolution exceeds	
flashing	on	Encoder ready, no communication with master (i.e. wrong address setting)	
on	off	Data timeout (> 40 s). (i.e. data lines interrupted)	
off	on	Normal operation, Data Exchange Mode	
off	flashing	Installation Mode in Data Exchange Mode.	

Principle of data transmission

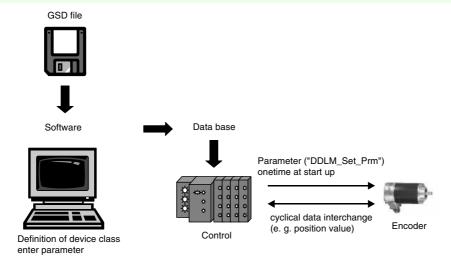

Parameter table encoder classes P+F 2.1 and P+F 2.2


Octet number (Byte)	Parameter	Bit number
18	PROFIBUS standard parameters	
9	Direction of rotation	0
	Class 2 functionality	1
	Commissioning Diagnostics	2
	Scaling function	3
	Reserved	4
	Reserved	5
	Activate manufacturer specific parameters (Octet 26)	6
	Reserved	7
10 13	Desired measuring steps (reference: Octet 26, Bit 0 and 1)	
14 17	Overall resolution	
18 25	Reserved	
26	Reference for desired measuring steps	0
		1
	Activate commissioning mode	2
	Reduced diagnosis	3
	Reserved	4
	Activate lower software limit switch	5
	Activate upper software limit switch	6
	Activation of the parameters from Octet 27	7
27 30	Lower limit switch	
31 34	Upper limit switch	
35 38	Physical measuring steps	
39	Reserved	0
	Rotary encoder type (singleturn or multiturn)	1
	Reserved	2
	Reserved	3
	Selection of the unit for speed transfer	4
		5
	Reserved	6
	Reserved	7

Accessories

For type	Accessories	Name/defining feature	Order code
	Couplings	D1: Ø10 mm, D2: Ø10 mm	9401
		D1: Ø10 mm, D2: Ø10 mm	9404
		D1: Ø10 mm, D2: Ø10 mm	9409
		D1: Ø10 mm, D2: Ø10 mm	KW
	Measurement wheels with cir- cumference of 500 mm	Plastic	9101, 10
		Pimpled rubber	9102, 10
DVM59* 011		Knurled aluminium	9103, 10
PVM58*-011		Knurled plastic	9112, 10
	Measurement wheels with cir- cumference of 200 mm	Plastic	9108, 10
		Pimpled rubber	9109, 10
		Knurled aluminium	9110, 10
		Knurled plastic	9113, 10
	Mounting aids	Mounting bracket	9203
		Mounting bracket	9213
PVM58*-032	Couplings	D1: Ø6 mm, D2: Ø6 mm	9401
		D1: Ø6 mm, D2: Ø6 mm	9402
		D1: Ø6 mm, D2: Ø6 mm	9404
		D1: Ø6 mm, D2: Ø6 mm	9409
		D1: Ø6 mm, D2: Ø6 mm	KW
	Mounting aids	Mounting bracket and set	9300 and 9311-3
		Eccentric clamping elements	9310-3

For additional information on the accessories, please see the "Accessories" section.

Order code

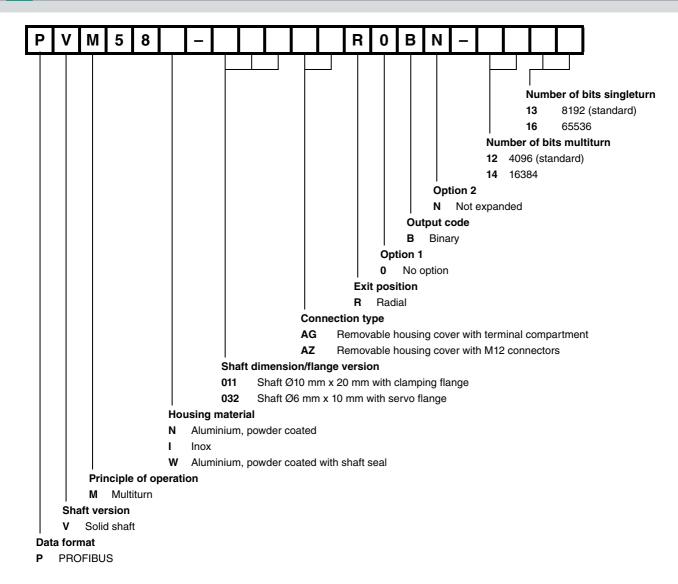

Release date: 2012-07-19 15:34 Date of issue: 2012-07-19 t49153_eng.xml