


Digital proportional relief valves high performance

piloted, with on-board pressure transducer

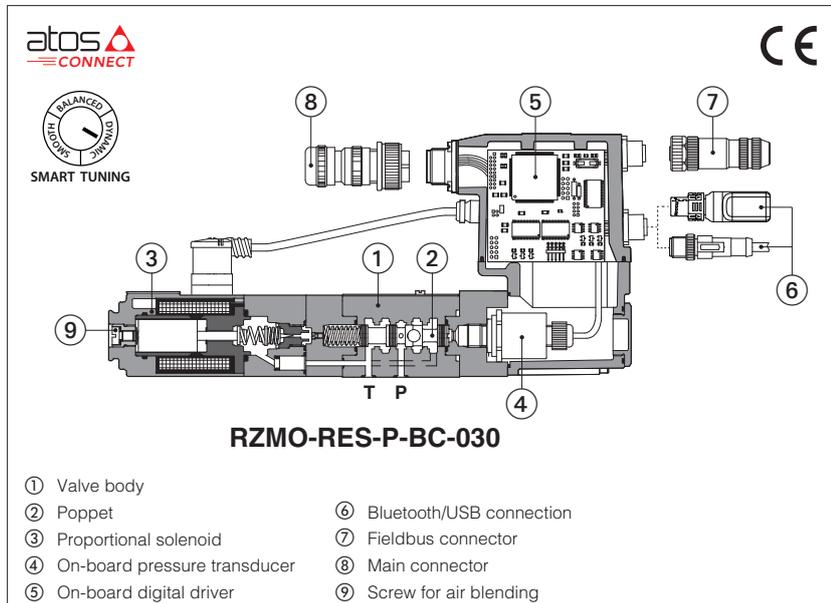

RZMO-R , RZMO-REB, RZMO-RES

Spool type piloted digital proportional relief valves with on-board pressure transducer for pressure closed loop controls.

R to be coupled with off-board driver.

REB basic execution, with on-board digital driver, with analog reference signal or IO-Link interface for digital reference signals, valve settings, and real-time diagnostics.

RES full execution, with on-board digital driver which includes also fieldbus interfaces for digital reference signals, valve settings, and real-time diagnostics.

For **REB** and **RES**, Bluetooth/USB connection is always present for valve settings via mobile App and Atos PC software.

Size: **06** - ISO 4401

Max flow: **40 l/min**


Max pressure: **350 bar**

1 MODEL CODE

| | | | | | | | | | | | | | | | | | | |
|--|---|------------|---|----------|---|-----------|---|------------|---|------------|---|---|---|---------------|---|--|---|---|
| RZMO | - | REB | - | P | - | NP | - | 030 | / | 210 | / | * | / | * | / | * | / | * |
| Proportional pressure relief valve, piloted | | | | | | | | | | | | | | Series number | | Seals material, see section 13: - = NBR PE = FKM BT = NBR low temp. | | |
| R = off-board driver, see section 3 REB = basic on-board digital driver RES = full on-board digital driver | | | | | | | | | | | | | | | | Bluetooth option , only for REB and RES , see section 6: T = Bluetooth adapter supplied with the valve | | |
| P = with on-board pressure transducer | | | | | | | | | | | | | | | | Electronic options (1) , only for REB-NP and RES : I = current reference input and monitor 4÷20 mA Q = enable signal Z = double power supply, enable, fault and monitor signals -12 pin connector | | |
| IO-Link interface , only for REB , see section 8: NP = Not present IL = IO-Link | | | | | | | | | | | | | | | | | | |
| Fieldbus interfaces , only for RES , see section 9: BC = CANopen EH = EtherCAT BP = PROFIBUS DP | | | | | | | | | | | | | | | | | | |
| Configuration: 030 = regulation on port P, discharge in T (pilot operated version) | | | | | | | | | | | | | | | | Max regulated pressure: 100 = 100 bar 315 = 315 bar 210 = 210 bar 350 = 350 bar | | |

(1) Possible combined options: IQ, IZ (/T Bluetooth adapter option can be combined with all other options)

2 HYDRAULIC SYMBOLS

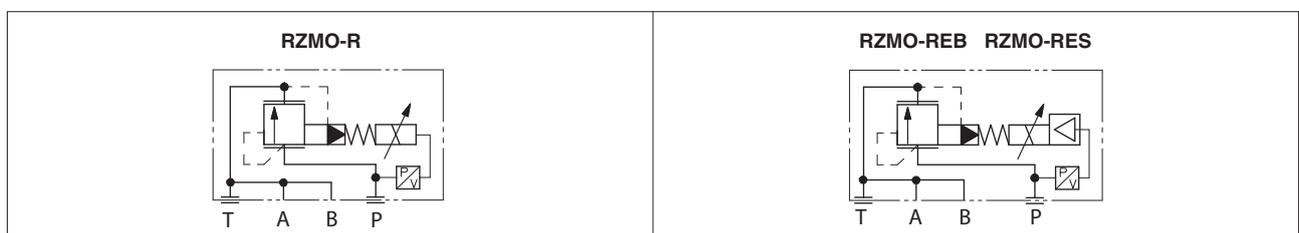

3 OFF-BOARD ELECTRONIC DRIVER - only for R

| | |
|---------------|-----------------------|
| Drivers model | E-BM-RES |
| Type | Digital |
| Format | DIN rail panel format |
| Tech table | GS203 |

4 GENERAL NOTES

Atos digital proportionals valves are CE marked according to the applicable directives (e.g. Immunity and Emission EMC Directive). Installation, wirings and start-up procedures must be performed according to the general prescriptions shown in tech table **FS900** and in the user manuals included in the E-SW-SETUP programming software.

5 VALVE SETTINGS AND PROGRAMMING TOOLS - see tech. table GS500

5.1 Atos CONNECT mobile App

Free downloadable App for smartphones and tablets which allows quick access to valve main functional parameters and basic diagnostic information via Bluetooth, thus avoiding physical cable connection and significantly reducing commissioning time. Atos CONNECT supports Atos digital valve drivers equipped with E-A-BTH adapter or with built-in Bluetooth. It does not support valves with p/Q control or axis controls.




5.2 E-SW-SETUP PC software

Free downloadable software for PC allows to set all valve functional parameters and to access complete diagnostic information of digital valve drivers via Bluetooth/USB service port. Atos E-SW-SETUP PC software supports all Atos digital valve drivers and it is available at www.atos.com in MyAtos area.

WARNING: drivers USB port is not isolated! For E-C-SB-USB/M12 cable, the use of E-A-SB-USB/OPT isolator adapter is highly recommended for PC protection

Bluetooth or USB connection

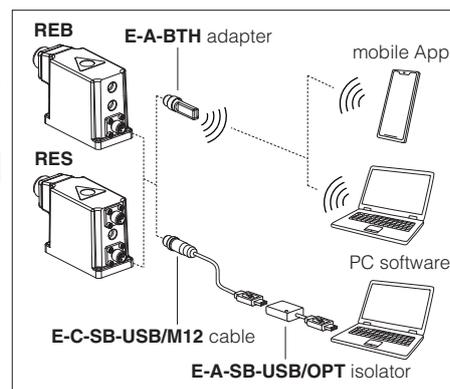

6 BLUETOOTH OPTION - see tech. table GS500

T option adds Bluetooth® connectivity to Atos valve drivers thanks to E-A-BTH adapter, which can be left permanently installed on-board, to allow the Bluetooth connection with the valve drivers at any time. E-A-BTH adapter can also be purchased separately and used to connect with any supported Atos digital product.

Bluetooth connection to the valve can be protected against unauthorised access by setting a personal password. The adapter leds visually indicates the status of valve driver and Bluetooth connection.

WARNING: for the list of countries where the Bluetooth adapter has been approved, see tech. table **GS500**
T option is not available for the Indian market, so the Bluetooth adapter must be ordered separately.

7 SMART TUNING

Smart tuning allows to adjust the valve dynamic response in order to match different hydraulic conditions and performance requirements.


The valve is provided with 3 factory settings for the pressure control:

- **dynamic** fast response time for best dynamic performances. Default factory setting for pressure valves
- **balanced** average response time suitable for major applications
- **smooth** attenuated response time for slow regulation without overshoots

Smart tuning setting can be switched from Dynamic (default) to Balanced or Smooth via software or fieldbus; if requested, performances can be further customized directly tuning each single control parameter. For details consult related manuals E-MAN-* and Quickstart, see section **24**.


Below indications have to be considered as a general guideline, being affected by hydraulic circuit stiffness, working flow and dead volume.

High stiffness - Low flow - Small volume

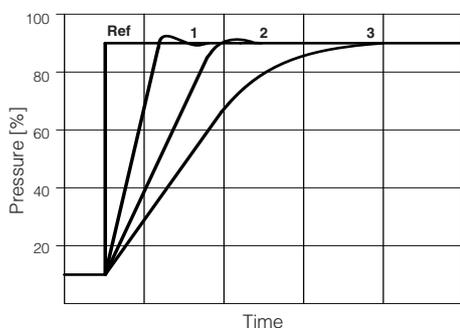

- 1 = dynamic
- 2 = balanced
- 3 = smooth

Low stiffness - High flow - Large volume

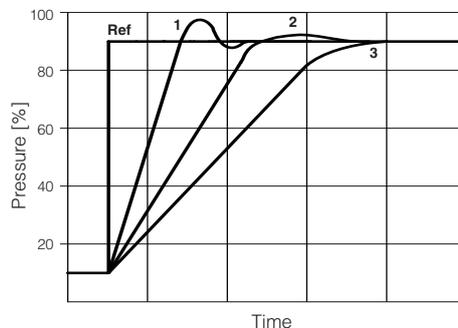

- 1 = dynamic
- 2 = balanced
- 3 = smooth

8 IO-LINK - only for REB, see tech. table GS520

IO-Link allows low cost digital communication between the valve and machine central unit. The valve is directly connected to a port of an IO-Link master (point-to-point connection) via low-cost unshielded cables for digital reference, diagnostic and settings. The IO-Link master works as a hub exchanging this information with the machine central unit via fieldbus.

9 FIELDBUS - only for RES, see tech. table GS510

Fieldbus allows valve direct communication with machine control unit for digital reference, valve diagnostics and settings. These execution allow to operate the valves through fieldbus or analog signals available on the main connector.

10 GENERAL CHARACTERISTICS

| | |
|--|---|
| Assembly position | Any position |
| Subplate surface finishing to ISO 4401 | Acceptable roughness index: $R_a \leq 0,8$, recommended $R_a 0,4$ – Flatness ratio 0,01/100 |
| MTTFd valves according to EN ISO 13849 | 150 years, for further details see technical table P007 |
| Ambient temperature range | R: Standard = $-20^\circ\text{C} \div +70^\circ\text{C}$ / PE option = $-20^\circ\text{C} \div +70^\circ\text{C}$ / BT option = $-40^\circ\text{C} \div +60^\circ\text{C}$ REB, RES: Standard = $-20^\circ\text{C} \div +60^\circ\text{C}$ / PE option = $-20^\circ\text{C} \div +60^\circ\text{C}$ / BT option = $-40^\circ\text{C} \div +60^\circ\text{C}$ |
| Storage temperature range | R: Standard = $-20^\circ\text{C} \div +80^\circ\text{C}$ / PE option = $-20^\circ\text{C} \div +80^\circ\text{C}$ / BT option = $-40^\circ\text{C} \div +70^\circ\text{C}$ REB, RES: Standard = $-20^\circ\text{C} \div +70^\circ\text{C}$ / PE option = $-20^\circ\text{C} \div +70^\circ\text{C}$ / BT option = $-40^\circ\text{C} \div +70^\circ\text{C}$ |
| Surface protection | Zinc coating with black passivation, galvanic treatment (driver housing for REB and RES) |
| Corrosion resistance | Salt spray test (EN ISO 9227) > 200 h |
| Vibration resistance | See technical table G004 (for REB and RES) |
| Compliance | CE according to EMC directive 2014/30/EU (Immunity: EN 61000-6-2; Emission: EN 61000-6-3) RoHS Directive 2011/65/EU as last update by 2015/863/EU REACH Regulation (EC) n°1907/2006 |

11 HYDRAULIC CHARACTERISTICS - based on mineral oil ISO VG 46 at 50 °C

| | | |
|--|--|--|
| Valve model | RZMO-*-030 | |
| Max regulated pressure [bar] | 100; 210; 315; 350 | |
| Max pressure at port P [bar] | 350 | |
| Max pressure at port T [bar] | 210 | |
| Min regulated pressure [bar] | see min. pressure / flow diagram at section 14 | |
| Min ÷ Max flow [l/min] | 2,5 ÷ 40 | |
| Response time 0-100% step signal (depending on installation) (1) [ms] | ≤ 45 | |
| Hysteresis | ≤ 0,5 [% of max pressure] | |
| Linearity | ≤ 1,0 [% of max pressure] | |
| Repeatability | ≤ 0,2 [% of max pressure] | |
| Thermal drift | zero point displacement < 1% at $\Delta T = 40^\circ\text{C}$ | |

Note: above performance data refer to valves coupled with Atos electronic drivers, see section [3](#)

(1) Average response time value; the pressure variation in consequence of a modification of the reference input signal to the valve is affected by the stiffness of the hydraulic circuit: greater is the stiffness of the circuit, faster is the dynamic response, see section [7](#)

12 ELECTRICAL CHARACTERISTICS

| | | | | | |
|----------------------------------|--|--|---|-----------------------------------|---|
| Power supplies | Nominal : +24 VDC Rectified and filtered : $V_{RMS} = 20 \div 32 V_{MAX}$ (ripple max 10 % V_{PP}) | | | | |
| Max power consumption | R = 30 W REB, RES = 50 W | | | | |
| Max. solenoid current | 3 A | | | | |
| Coil resistance R at 20°C | 3 ÷ 3,3 Ω | | | | |
| Analog input signals | Voltage: range ± 10 VDC (24 V_{MAX} tolerant) Current: range ± 20 mA | | Input impedance: $R_i > 50$ k Ω Input impedance: $R_i = 500$ Ω | | |
| Monitor output | Voltage: maximum range 0 ÷ 10 Vdc @ max 5 mA Current: maximum range 0 ÷ 20 mA @ max 500 Ω load resistance | | | | |
| Enable input | Range: 0 ÷ 9 VDC (OFF state), 15 ÷ 24 VDC (ON state), 9 ÷ 15 VDC (not accepted); Input impedance: $R_i > 87$ k Ω | | | | |
| Fault output | Output range : 0 ÷ 24 Vdc (ON state \equiv VL+ [logic power supply] ; OFF state \equiv 0 V) @ max 50 mA; external negative voltage not allowed (e.g. due to inductive loads) | | | | |
| Pressure transducer (1) | E-ATR-8*/I Output signal: 4 ÷ 20 mA (see tech table GS465) | | | | |
| Alarms | Solenoid not connected/short circuit, cable break with current reference signal, over/under temperature, current control monitoring, power supplies level, pressure transducer failure | | | | |
| Insulation class | H (180°) Due to the occurring surface temperatures of the solenoid coils, the European standards ISO 13732-1 and EN982 must be taken into account | | | | |
| Protection degree to DIN EN60529 | R = IP65; REB, RES = IP66 / IP67 with mating connectors | | | | |
| Duty factor | Continuous rating (ED=100%) | | | | |
| Tropicalization | Tropical coating on electronics PCB | | | | |
| Additional characteristics | Short circuit protection of solenoid's current supply; current control by P.I.D. with rapid solenoid switching; protection against reverse polarity of power supply | | | | |
| Communication interface | USB Atos ASCII coding | IO-Link Interface and System Specification 1.1.3 | CANopen EN50325-4 + DS408 | PROFIBUS DP EN50170-2/IEC61158 | EtherCAT IEC 61158 |
| Communication physical layer | not insulated USB 2.0+ USB OTG | SDCI class port B | optical insulated CAN ISO11898 | optical insulated RS485 | Fast Ethernet, insulated 100 Base TX |
| Recommended wiring cable | LiYCY shielded cables, see section 21 | | | | |

(1) In case of pressure transducer failure, the valve's reaction can be configured through Atos E-SW-SETUP software to:

- cut off the current to solenoid, therefore the regulated pressure will be reduced to minimum value (default setting)
- automatically switch the pressure control from closed loop (dynamic, balanced, smooth) to open loop, to let the valve to temporarily operate with reduced regulation accuracy

Note: a maximum time of 500 ms (depending on communication type) has to be considered between the driver energizing with the 24 Vdc power supply and when the valve is ready to operate. During this time the current to the valve coils is switched to zero.


13 SEALS AND HYDRAULIC FLUIDS - for other fluids not included in below table, consult our technical office

| | | | |
|--------------------------------------|--|--|----------------------|
| Seals, recommended fluid temperature | NBR seals (standard) = -20°C ÷ +60°C (+80°C for R), with HFC hydraulic fluids = -20°C ÷ +50°C FKM seals (/PE option) = -20°C ÷ +80°C NBR low temp. seals (/BT option) = -40°C ÷ +60°C, with HFC hydraulic fluids = -20°C ÷ +50°C | | |
| Recommended viscosity | 20 ÷ 100 mm ² /s - max allowed range 15 ÷ 380 mm ² /s | | |
| Max fluid contamination level | normal operation | ISO4406 class 18/16/13 | NAS1638 class 7 |
| | longer life | ISO4406 class 16/14/11 | NAS1638 class 5 |
| | | see also filter section at www.atos.com or KTF catalog | |
| Hydraulic fluid | Suitable seals type | Classification | Ref. Standard |
| Mineral oils | NBR, FKM, NBR low temp. | HL, HLP, HLPD, HVLP, HVLPD | DIN 51524 |
| Flame resistant without water | FKM | HFDU, HFDR | ISO 12922 |
| Flame resistant with water | NBR, NBR low temp. | HFC | |

14 DIAGRAMS (based on mineral oil ISO VG 46 at 50 °C)


1 Regulation diagrams

with flow rate Q = 10 l/min

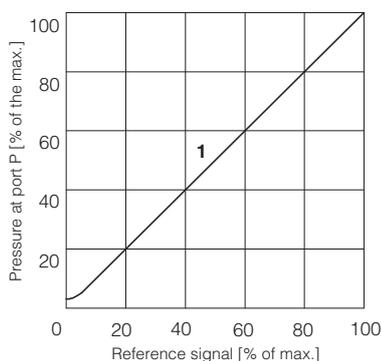


2 Pressure/flow diagrams

with reference signal set at Q = 10 l/min

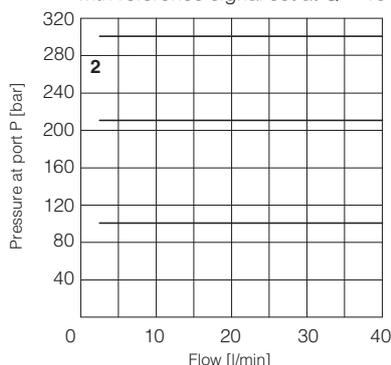

3-4 Minimum pressure/flow diagrams

with zero reference signal

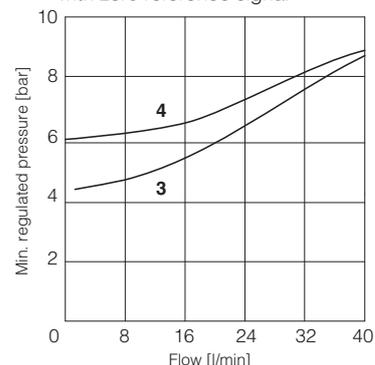

3 = All the models (except /350)
4 = All the models (only /350)

15 ELECTRONIC OPTIONS - only for **REB-NP** and **RES**

I = This option provides 4 ÷ 20 mA current reference and monitor signals, instead of the standard 0 ÷ 10 VDC.

Input signal can be reconfigured via software selecting between voltage and current, within a maximum range of ±10 VDC or ±20 mA.

It is normally used in case of long distance between the machine control unit and the valve or where the reference signal can be affected by electrical noise; the valve functioning is disabled in case of reference signal cable breakage.

Q = This option permits to inhibit the valve function without removing the power supply to the driver. Upon disable command the current to the solenoid is zeroed and the valve's spool moves to rest position.

The option /Q is suggested for all cases where the valve has to be frequently inhibited during the machine cycle – see 18.5 for signal specifications.

Z = This option provides, on the 12 pin main connector, the following additional features:

Fault output signal - see 18.6

Enable input signal - see above option /Q

Power supply for driver's logics and communication - see 18.2

16 POSSIBLE COMBINED OPTIONS


Electronic options: /IQ, /IZ

Note: /T Bluetooth adapter option can be combined with all other options

17 AIR BLEEDING

At the first valve commissioning the air eventually trapped inside the solenoid must be bled-off through the screw ① located at the rear side of the solenoid housing.

The presence of air may cause pressure instability and vibrations.

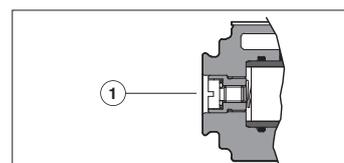

18 POWER SUPPLY AND SIGNALS SPECIFICATIONS - only for REB-NP and RES

Generic electrical output signals of the valve (e.g. fault or monitor signals) must not be directly used to activate safety functions, like to switch-ON/OFF the machine's safety components, as prescribed by the European standards (Safety requirements of fluid technology systems and components-hydraulics, ISO 4413).

For REB-IL signals see section 19

18.1 Power supply (V+ and V0)

The power supply must be appropriately stabilized or rectified and filtered: apply at least a 10000 μ F/40 V capacitance to single phase rectifiers or a 4700 μ F/40 V capacitance to three phase rectifiers. In case of separate power supply see 18.2.



A safety fuse is required in series to each power supply: 2,5 A time lag fuse.

18.2 Power supply for driver's logic and communication (VL+ and VL0) - only for /Z option

The power supply for driver's logic and communication must be appropriately stabilized or rectified and filtered: apply at least a 10000 μ F/40 V capacitance to single phase rectifiers or a 4700 μ F/40 V capacitance to three phase rectifiers.

The separate power supply for driver's logic on pin 9 and 10, allow to remove solenoid power supply from pin 1 and 2 maintaining active the diagnostics, USB and fieldbus communications.



A safety fuse is required in series to each driver's logic and communication power supply: 500 mA fast fuse.

18.3 Pressure reference input signal (P_INPUT+)

The driver controls in closed loop the current to the valve pressure proportionally to the external reference input signal.

Reference input signal is factory preset according to selected valve code, defaults are 0 \div 10 VDC for standard and 4 \div 20 mA for /I option.

Input signal can be reconfigured via software selecting between voltage and current, within a maximum range of \pm 10 VDC or \pm 20 mA.

Drivers with fieldbus interface (BC, BP, EH) can be software set to receive reference signal directly by the machine control unit (fieldbus reference).

Analog reference input signal can be used as on-off commands with input range 0 \div 24 VDC.

18.4 Pressure monitor output signal (P_MONITOR)

The driver generates an analog output signal proportional to the actual pressure of the valve; the monitor output signal can be software set to show other signals available in the driver (e.g. analog reference, fieldbus reference).

Monitor output signal is factory preset according to selected valve code, defaults settings are 0 \div 10 Vdc for standard and 4 \div 20 mA for /I option.

Output signal can be reconfigured via software selecting between voltage and current, within a maximum range of 0 \div 10 VDC or 0 \div 20 mA.

18.5 Enable input signal (ENABLE) - not for standard

To enable the driver, supply a 24 Vdc on pin 3 (pin C): Enable input signal allows to enable/disable the current supply to the solenoid, without removing the electrical power supply to the driver; it is used to active the communication and the other driver functions when the valve must be disabled for safety reasons. This condition **does not comply** with norms IEC 61508 and ISO 13849.

Enable input signal can be used as generic digital input by software selection.

18.6 Fault output signal (FAULT) - only for /Z option

Fault output signal indicates fault conditions of the driver (solenoid short circuits/not connected, reference signal broken for 4 \div 20 mA input, etc.).

Fault presence corresponds to 0 VDC, normal working corresponds to 24 VDC. Fault status is not affected by the Enable input signal.

19 IO-LINK SIGNALS SPECIFICATIONS - only for REB-IL

19.1 Power supply for IO-Link communication (L+ and L-)

The IO-Link master provides dedicated 24 VDC power supply for IO-Link communication.

Maximum power consumption: 2 W

Internal electrical isolation of power L+, L- from P24, N24

19.2 Power supply for driver's logic and valve regulation (P24 and N24)

The IO-Link master provides dedicated 24 VDC power supply for valve regulation, logics and diagnostics.

Maximum power consumption: 50 W

Internal electrical isolation of power P24, N24 from L+, L-

19.3 IO-Link data line (C/Q)

C/Q signal is used to establish communication between IO-Link master and valve.

20 ELECTRONIC CONNECTIONS

20.1 Main connector signals - 7 pin (A1) Standard and /Q option - for REB-NP and RES

| PIN | Standard | /Q | TECHNICAL SPECIFICATIONS | NOTES |
|-----|----------------------------------|--------|--|--|
| A | V+ | | Power supply 24 Vdc | Input - power supply |
| B | V0 | | Power supply 0 Vdc | Gnd - power supply |
| C | AGND | | Analog ground | Gnd - analog signal |
| | | ENABLE | Enable (24 Vdc) or disable (0 Vdc) the driver, referred to V0 | Input - on/off signal |
| D | P_INPUT+ | | Pressure reference input signal: ± 10 Vdc / ± 20 mA maximum range Defaults are 0 \div 10 Vdc for standard and 4 \div 20 mA for /I option | Input - analog signal Software selectable |
| E | INPUT- | | Negative reference input signal for P_INPUT+ | Input - analog signal |
| F | P_MONITOR referred to: AGND V0 | | Pressure monitor output signal: 0 \div 10 Vdc / 0 \div 20 mA maximum range Defaults are 0 \div 10 Vdc for standard and 4 \div 20 mA for /I option | Output - analog signal Software selectable |
| G | EARTH | | Internally connected to driver housing | |

20.2 Main connector signals - 12 pin (A2) /Z option - for REB-NP and RES


| PIN | /Z | TECHNICAL SPECIFICATIONS | NOTES |
|-----|-----------|--|--|
| 1 | V+ | Power supply 24 Vdc | Input - power supply |
| 2 | V0 | Power supply 0 Vdc | Gnd - power supply |
| 3 | ENABLE | Enable (24 Vdc) or disable (0 Vdc) the driver, referred to V0 | Input - on/off signal |
| 4 | P_INPUT+ | Pressure reference input signal: ± 10 Vdc / ± 20 mA maximum range Defaults are 0 \div 10 Vdc for standard and 4 \div 20 mA for /I option | Input - analog signal Software selectable |
| 5 | INPUT- | Negative reference input signal for INPUT+ | Input - analog signal |
| 6 | P_MONITOR | Pressure monitor output signal: 0 \div 10 Vdc / 0 \div 20 mA maximum range, referred to V0 Defaults are 0 \div 10 Vdc for standard and 4 \div 20 mA for /I option | Output - analog signal Software selectable |
| 7 | NC | Do not connect | |
| 8 | NC | Do not connect | |
| 9 | VL+ | Power supply 24 Vdc for driver's logic and communication | Input - power supply |
| 10 | V0 | Power supply 0 Vdc for driver's logic and communication | Gnd - power supply |
| 11 | FAULT | Fault (0 Vdc) or normal working (24 Vdc), referred to V0 | Output - on/off signal |
| PE | EARTH | Internally connected to driver housing | |

Note: do not disconnect V0 before VL+ when the driver is connected to PC USB port

20.3 IO-Link connector signals - M12 - 5 pin - Coding A, port class B (A) only for REB-IL

| PIN | SIGNAL | TECHNICAL SPECIFICATIONS | NOTES |
|-----|--------|--|-------------------------|
| 1 | L+ | Power supply 24 Vdc for IO-Link communication | Input - power supply |
| 2 | P24 | Power supply 24 Vdc for valve regulation, logics and diagnostics | Input - power supply |
| 3 | L- | Power supply 0 Vdc for IO-Link communication | Gnd - power supply |
| 4 | C/Q | IO-Link data line | Input / Output - signal |
| 5 | N24 | Power supply 0 Vdc for valve regulation, logics and diagnostics | Gnd - power supply |

Valve to Master connection examples

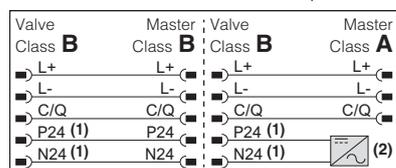

(1) Maximum power consumption: 50 W
(2) External power supply

Note: L+, L- and P24, N24 are electrically isolated

20.4 Communication connectors - for REB (B) and RES (B) - (C)

| (B) USB connector - M12 - 5 pin always present | | |
|--|---------|-----------------------------|
| PIN | SIGNAL | TECHNICAL SPECIFICATION (1) |
| 1 | +5V_USB | Power supply |
| 2 | ID | Identification |
| 3 | GND_USB | Signal zero data line |
| 4 | D- | Data line - |
| 5 | D+ | Data line + |

| (C1) BC fieldbus execution, connector - M12 - 5 pin (2) | | |
|---|----------|-----------------------------|
| PIN | SIGNAL | TECHNICAL SPECIFICATION (1) |
| 1 | CAN_SHLD | Shield |
| 2 | NC | do not connect |
| 3 | CAN_GND | Signal zero data line |
| 4 | CAN_H | Bus line (high) |
| 5 | CAN_L | Bus line (low) |

| (C2) BP fieldbus execution, connector - M12 - 5 pin (2) | | |
|---|--------|---------------------------------------|
| PIN | SIGNAL | TECHNICAL SPECIFICATION (1) |
| 1 | +5V | Termination supply signal |
| 2 | LINE-A | Bus line (high) |
| 3 | DGND | Data line and termination signal zero |
| 4 | LINE-B | Bus line (low) |
| 5 | SHIELD | |

| (C3) (C4) EH fieldbus execution, connector - M12 - 4 pin (2) | | |
|--|--------|-----------------------------|
| PIN | SIGNAL | TECHNICAL SPECIFICATION (1) |
| 1 | TX+ | Transmitter |
| 2 | RX+ | Receiver |
| 3 | TX- | Transmitter |
| 4 | RX- | Receiver |
| Housing | SHIELD | |

(1) Shield connection on connector's housing is recommended

(2) Only for RES execution


20.5 Solenoid connection - only for R

| PIN | SIGNAL | TECHNICAL SPECIFICATION | Connector code 666 |
|-----|--------|-------------------------|--------------------|
| 1 | COIL | Power supply | |
| 2 | COIL | Power supply | |
| 3 | GND | Ground | |

20.6 Pressure transducer connection - only for R


| PIN | SIGNAL | TECHNICAL SPECIFICATION | Connector code ZBE-08 |
|-----|--------|------------------------------|-----------------------|
| 1 | V+ | Power supply | |
| 2 | NC | Not connected | |
| 3 | TR | Output signal 4 \div 20 mA | |
| 4 | NC | Not connected | |
| 5 | NC | Not connected | |

20.7 REB-NP connections layout

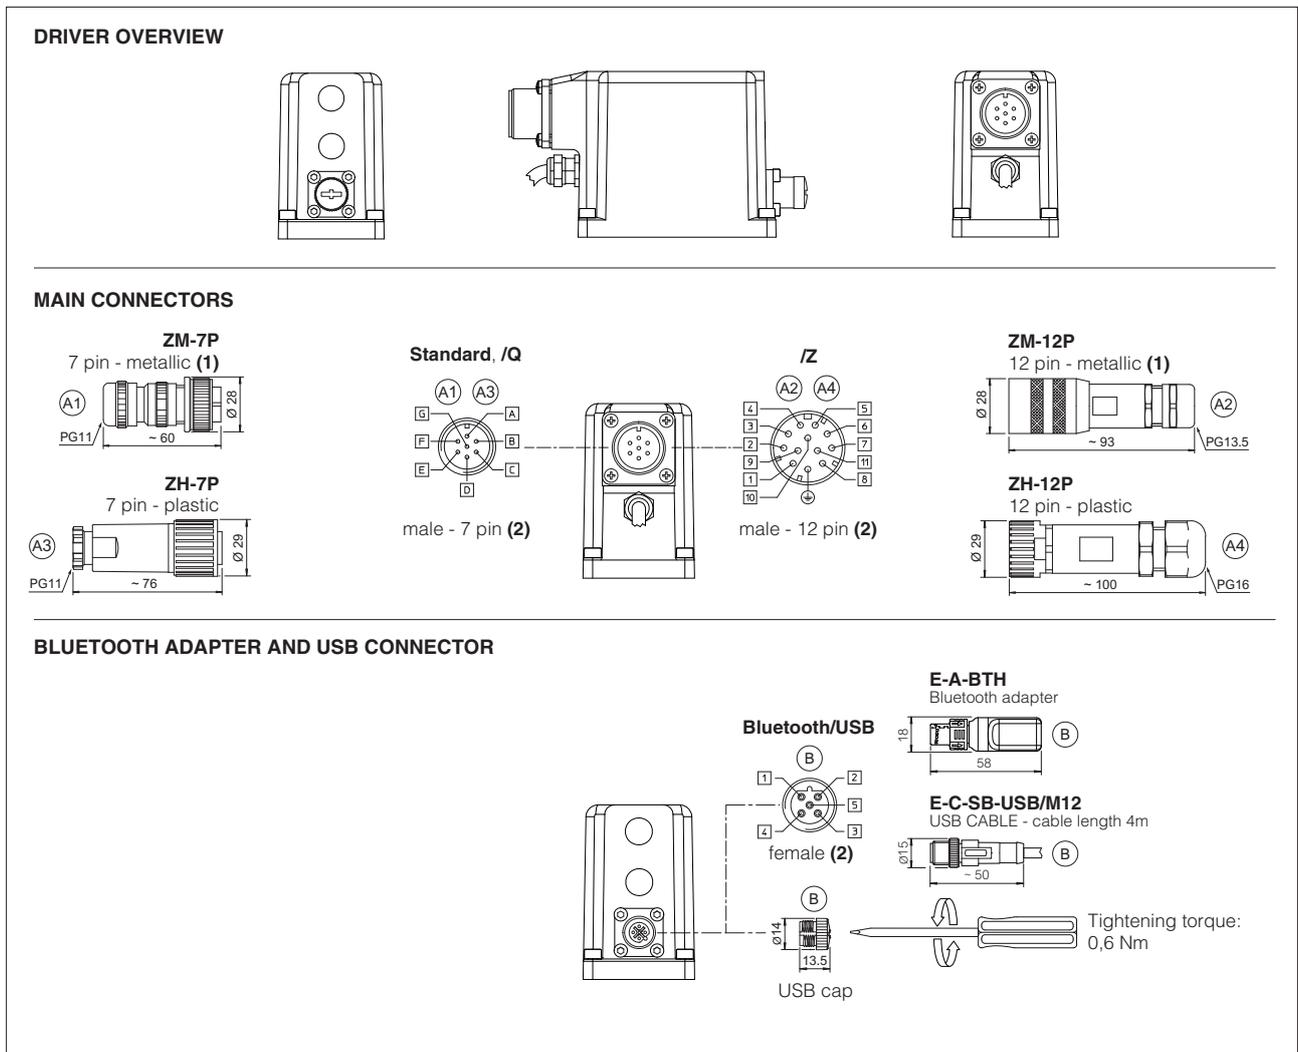

(1) Use of metallic connectors is strongly recommended in order to fulfill EMC requirements (2) Pin layout always referred to driver's view


20.8 REB-IL connections layout

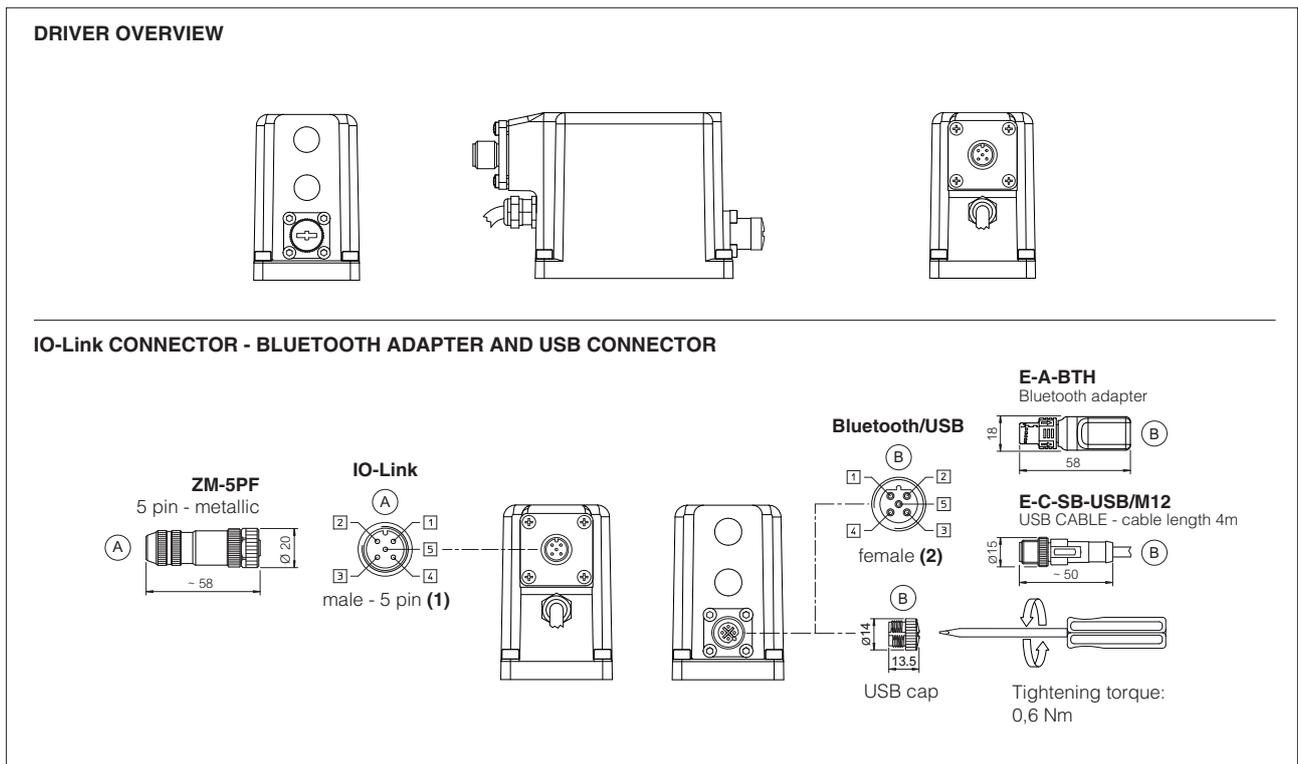


(1) Use of metallic connectors is strongly recommended in order to fulfill EMC requirements (2) Pin layout always referred to driver's view

20.9 RES connections layout


DRIVER OVERVIEW

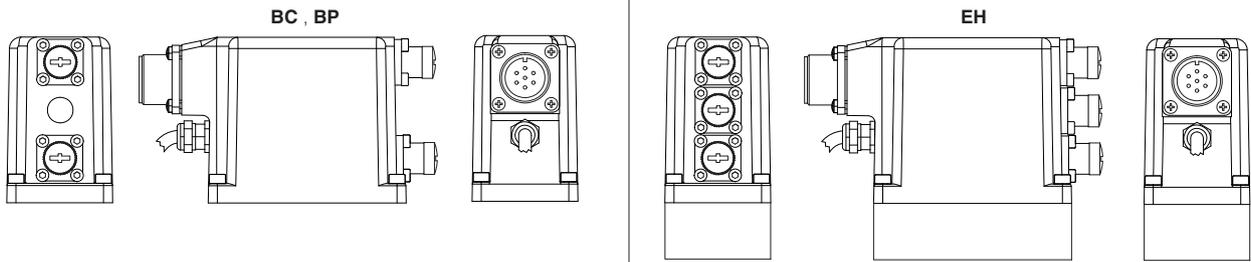


MAIN CONNECTORS

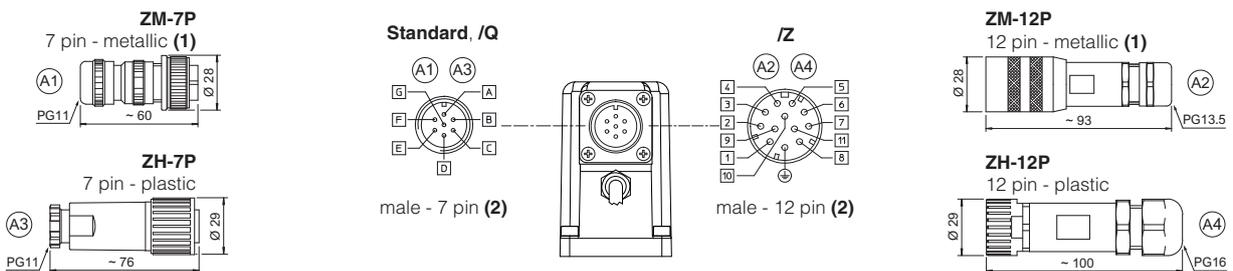

FIELDBUS CONNECTORS

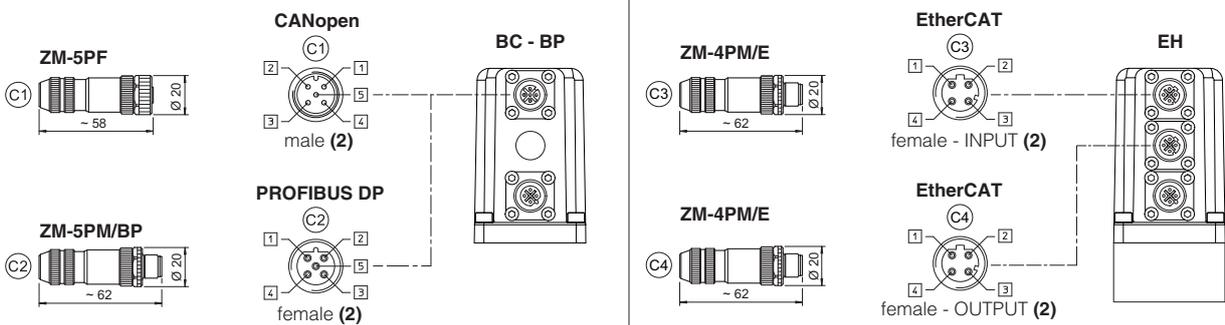

BLUETOOTH ADAPTER AND USB CONNECTOR

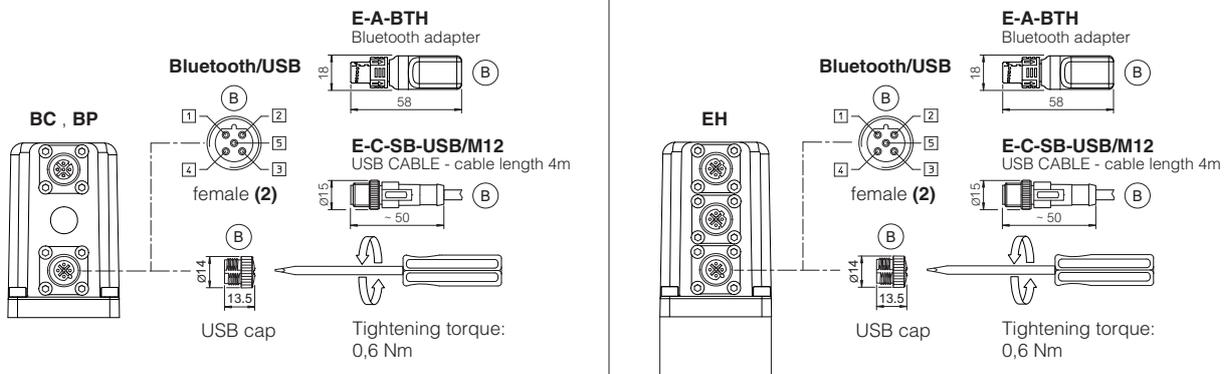

(1) Use of metallic connectors is strongly recommended in order to fulfill EMC requirements

(2) Pin layout always referred to driver's view

21 CONNECTORS CHARACTERISTICS - to be ordered separately

21.1 Main connectors - 7 pin - for REB-NP and RES

| CONNECTOR TYPE | POWER SUPPLY AND SIGNALS | POWER SUPPLY AND SIGNALS |
|-----------------------|--|--|
| CODE | (A1) ZM-7P | (A3) ZH-7P |
| Type | 7pin female straight circular | 7pin female straight circular |
| Standard | According to MIL-C-5015 | According to MIL-C-5015 |
| Material | Metallic | Plastic reinforced with fiber glass |
| Cable gland | PG11 | PG11 |
| Recommended cable | LiYCY 7 x 0,75 mm ² max 20 m (logic and power supply) or LiYCY 7 x 1 mm ² max 40 m (logic and power supply) | LiYCY 7 x 0,75 mm ² max 20 m (logic and power supply) or LiYCY 7 x 1 mm ² max 40 m (logic and power supply) |
| Conductor size | up to 1 mm ² - available for 7 wires | up to 1 mm ² - available for 7 wires |
| Connection type | to solder | to solder |
| Protection (EN 60529) | IP 67 | IP 67 |

21.2 Main connectors - 12 pin - for REB-NP and RES

| CONNECTOR TYPE | POWER SUPPLY AND SIGNALS | POWER SUPPLY AND SIGNALS |
|-----------------------|---|---|
| CODE | (A2) ZM-12P | (A4) ZH-12P |
| Type | 12pin female straight circular | 12pin female straight circular |
| Standard | DIN 43651 | DIN 43651 |
| Material | Metallic | Plastic reinforced with fiber glass |
| Cable gland | PG13,5 | PG16 |
| Recommended cable | LiYCY 12 x 0,75 mm ² max 20 m (logic and power supply) | LiYCY 10 x 0,14mm ² max 40 m (logic) LiYY 3 x 1mm ² max 40 m (power supply) |
| Conductor size | 0,5 mm ² to 1,5 mm ² - available for 12 wires | 0,14 mm ² to 0,5 mm ² - available for 9 wires 0,5 mm ² to 1,5 mm ² - available for 3 wires |
| Connection type | to crimp | to crimp |
| Protection (EN 60529) | IP 67 | IP 67 |

21.3 IO-Link connector - only for REB-IL

| CONNECTOR TYPE | IL IO-Link |
|-----------------------|--------------------------------------|
| CODE | (A) ZM-5PF |
| Type | 5pin female straight circular |
| Standard | M12 coding A – IEC 61076-2-101 |
| Material | Metallic |
| Cable gland | Pressure nut - cable diameter 6÷8 mm |
| Recommended cable | 5 x 0,75 mm ² max 20 m |
| Connection type | screw terminal |
| Protection (EN 60529) | IP 67 |


21.4 Fieldbus communication connectors - only for RES

| CONNECTOR TYPE | BC CANopen (1) | BP PROFIBUS DP (1) | EH EtherCAT (2) |
|-----------------------|--------------------------------------|--------------------------------------|--------------------------------------|
| CODE | (C1) ZM-5PF | (C2) ZM-5PM/BP | (C3) (C4) ZM-4PM/E |
| Type | 5 pin female straight circular | 5 pin male straight circular | 4 pin male straight circular |
| Standard | M12 coding A – IEC 61076-2-101 | M12 coding B – IEC 61076-2-101 | M12 coding D – IEC 61076-2-101 |
| Material | Metallic | Metallic | Metallic |
| Cable gland | Pressure nut - cable diameter 6÷8 mm | Pressure nut - cable diameter 6÷8 mm | Pressure nut - cable diameter 4÷8 mm |
| Cable | CANbus Standard (DR 303-1) | PROFIBUS DP Standard | Ethernet standard CAT-5 |
| Connection type | screw terminal | screw terminal | terminal block |
| Protection (EN 60529) | IP67 | IP 67 | IP 67 |

(1) E-TRM-** terminators can be ordered separately - see tech table **GS500**

(2) Internally terminated

22 FASTENING BOLTS AND SEALS
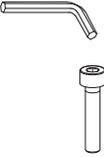
| | |
|---|--|
|  | <p>Fastening bolts:</p> <p>4 socket head screws M5x50 class 12.9</p> <p>Tightening torque = 8 Nm</p> |
|  | <p>Seals:</p> <p>2 OR 108</p> <p>Diameter of ports P, T: Ø 7,5 mm</p> <p>Ports A, B connected to port T</p> |



23 INSTALLATION DIMENSIONS [mm]

ISO 4401: 2005



Mounting surface: 4401-03-02-0-05 (see table P005)

| Mass [kg] | | |
|-----------|----------|--------|
| R | REB, RES | RES-EH |
| 3,1 | 3,6 | 3,7 |



RZMO-R-P

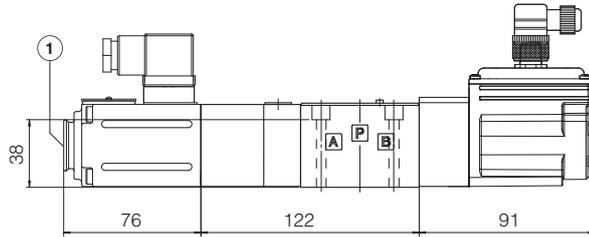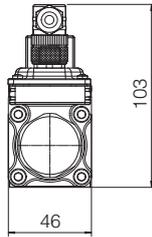



RZMO-REB-P-NP
RZMO-REB-P-IL

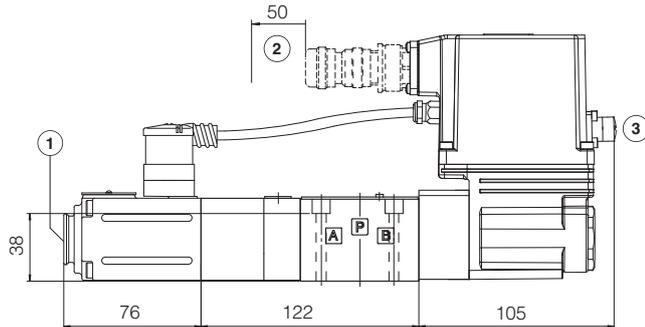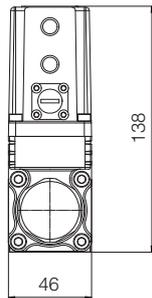

RZMO-RES-P-BP
RZMO-RES-P-BC

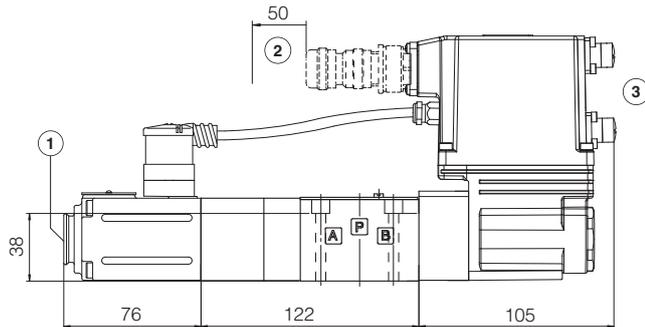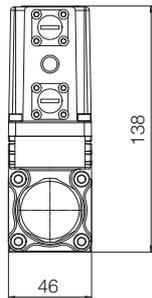

RZMO-RES-P-EH

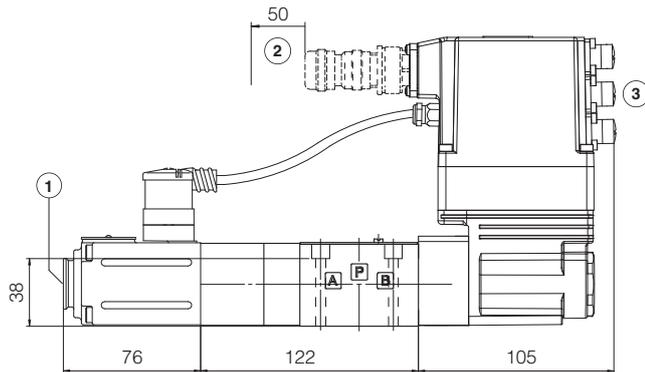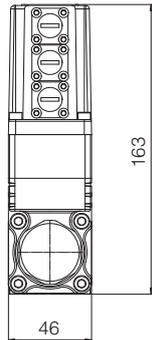

① = Air bleeding, see section 17

② = Space required for connection cable and for connector removal

③ = The dimensions of connectors and Bluetooth adapter must be considered, see section 20.7, 20.8 and 20.9

24 RELATED DOCUMENTATION

| | | | |
|--------------|---|---------------------|---|
| FS001 | Basics for digital electrohydraulics | P005 | Mounting surfaces for electrohydraulic valves |
| FS900 | Operating and maintenance information for proportional valves | QB400 | Quickstart for REB valves commissioning |
| GS203 | E-BM-RES digital driver | QF400 | Quickstart for RES valves commissioning |
| GS500 | Programming tools | E-MAN-BM-RES | E-BM-RES user manual (off-board) |
| GS510 | Fieldbus | E-MAN-RI-REB | REB user manual |
| GS520 | IO-Link interface | E-MAN-RI-RES | RES user manual |
| K800 | Electric and electronic connectors | | |