# GasMultiBloc® Control and safety combination One-stage mode

MBC-65... MBC-120... DUNGS®
Combustion Controls

7.10



- Compact design (105 mm long)
- The following components can be integrated:
  - Microfilter
  - 2 x A valves
  - Servopressure regulator
  - Pressure switch
- · Max. operating pressure

MBC-65: p<sub>max.</sub> 200 mbar (20 kPa)
MBC-65-N..: p<sub>max.</sub> 65 mbar (6.5 kPa)
MBC-120: p<sub>max.</sub> 360 mbar (36 kPa)
MBC-120-N..: p<sub>max.</sub> 100 mbar (10 kPa)

- Degree of protection: IP 54
- Radio interference suppression; interference level N
- Ambient temperature:
   -15 °C bis +60 °C
- Other available servo pressure regulator models:
  - Zero pressure
  - Constant pressure regulator Ratio

 $V=p_{R}/p_{I}=0,45:1...1:1$ 



#### **Technical description**

Filter, valves, regulator and pressure switch are integrated in the DUNGS GasMultiBloc® to form a compact fitting.

- Dirt trap: Microfilter
- One regulator and two valves
- Two valves (fast opening)
- Regulator (fast opening) or regulator (slow opening)
- Solenoid valves as per DIN EN 161 Class A Group 2 MBC-65 to 200 mbar (20 kPa) MBC-120 to 360 mbar (36 kPa)
- Sensitive setting of output pressure via servopressure regulator as per DIN EN 88 Class C Group 2
- Opening delay by means of damped pressure rise
- High flow values at low pressure difference
- DC voltage solenoid drive
- Main valve restrictor downstream of regulator
- Flange connections with tube threads as per ISO 7/1

Easy-to-mount, small dimensions, low weight

#### **Application**

The modular system provides individual solutions in gas safety and control systems. Suitable for gases of gas families 1, 2, 3 and other neutral gaseous media.

#### **Approvals**

EC type test approval as per EC Gas Appliance Directive:

MB-65/120-... CE-0085 AU 0377

EC type test approval as per EC Pressure Equipment Directive:

MB-65/120-... CE0036

Approvals in other important gas consuming countries.

#### **Functional description**

#### Gas flow

- Valves V1 and V2 are closed. Inlet pressure is applied to chamber A until valve V1 is seated.
- The min. pressure switch is connected to Chamber A by a borehole. If the inlet pressure exceeds the reference value set on the pressure switch, it switches to the automatic gas burner control.
- After a release signal from the automatic gas burner control, valves V1 and V2 open. The gas flow through chambers A, B, C and D of the GasMultiBloc is released.

#### Dirt trap device

Dirt trap device, fine-meshed filter (1) to protect the fitting.

# Operating mode of valve V1 and valve V2

The plungers of valves V1 and V2 are connected to the valve plate units. On opening, the plungers pretension the closing springs. The valves open completely without limitation.

#### Closing function

When the power supply of solenoid coils of V1 and V2 is interrupted, the valves are closed within < 1s by means of pressure springs.

# Operating mode of servopressure regulator

The servopressure regulator equalises the pressure fluctuations in the power supply. The output pressure is set at the reference value adjustment device (14). The servopressure regulator controls the pressure regulator (5) via nozzle (7).

The "slow opening" function is enabled by a damped pressure increase.

The opening time of MBC-120 cannot be set.

With MBC-120, the opening behaviour can be adjusted at high operating pressure values.

#### Start flow adjustment


The adjustment screw (15) for the start flow restrictor (10) is closed (factory setting).

The start flow can be set by opening the restrictor up to approx. 80 % of the main flow.

#### Main flow adjustment


The adjustment screw (13) for the main flow restrictor (9) is completely open (factory setting). The servopressure regulator

#### Sectional view MBC-65-DLE-S20

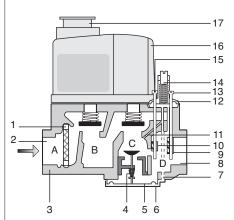


- 1. Microfilter
- 2. Inlet P1
- 3. Housing
- 4. Spring, gas pressure regulator
- 5. Diaphragms, gas pressure regulator
- 6. Cover side
- 7. Nozzle
- 8. Outlet P3
- 9. Main flow restrictor
- 10. Start gas restrictor
- 11. Damper
- 12. Servopressure regulator
- 13. Adjustment screw main flow
- 14. Reference value adjustment device pressure regulator
- 15. Adjustment screw start flow
- 16. Solenoid housing V1, V2
- 17. Electrical connection
- 18 Setting of opening time (only MBC-120)

## Pressure taps

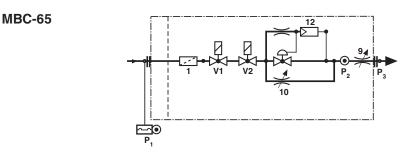




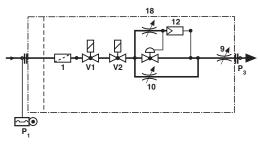

keeps the output pressure upstream of the main flow restrictor constant. The burner pressure is determined when the output pressure and the main flow restrictor (9) are adjusted.

#### Gas pressure switch

The gas pressure switch monitors the gas pressure on the inlet side; the pressure switch is preset.

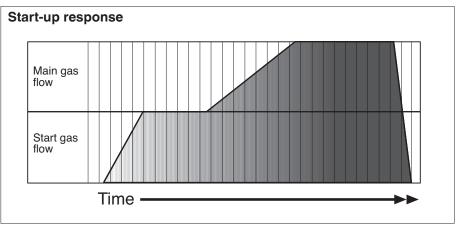



# **Specifications**

Nominal widths	MBC-65		MBC-12	MBC-120		
Flange with tube threads as per ISO 7/1 (DIN 2999)	Rp 3/8, Rp 1/2		Rp 3/4	Rp 3/4		
Max. operating pressure	MBC-65 MBC-65-N/S0 MBC-120 MBC-120-N/S		p <sub>max.</sub> p <sub>max.</sub> p <sub>max.</sub> p <sub>max.</sub>	200 mbar (20 kPa) 65 mbar (6.5 kPa) 360 mbar (36 kPa) 100 mbar (10 kPa)		
Output pressure ranges P3 (p <sub>a</sub> )	MBCDLE S MBCDLE S MBCND/S(	640/S42	4 mbar	3 mbar to 15 mbar (0.3 to 1.5 kPa) 4 mbar to 37 mbar (0.4 to 3.7 kPa) 0 ± 0.2 mbar (0 ± 0.02 kPa)		
Media	Gases of gas families 1, 2, 3 and other neutral gaseous media					
Ambient temperature	-15 °C to +60 °C					
Dirt trap device	Filter with 120µm mesh width					
Pressure switches	For further infor	Types GW A5, GW A2, NB A2, ÜB A2 can be mounted as per DIN EN 1854. For further information, refer to datasheet GWA2 No. 213 372 and datasheet GWA5 No. 225 756				
Pressure regulator	Servopressure regulator as per DIN EN 88 Class C. Reference value spring is installed permanently (no spring replacement possible). Blow-out line over roof top must not be installed. Internal pulse tap available.					
Solenoid valve V1	Valve as per DI	Valve as per DIN 161 Class A Group 2, fast closing, fast opening				
Solenoid valve V2	Valve as per DIN 161 Class A Group 2, fast closing, fast opening					
	Design	Valves V1 and V2	Pressure r	Pressure regulator		
	MBCDLE MBCND	fast closing fast closing		ing ing, proportional regulator sure regulator		
Measuring/ignition gas connection	See "Pressure t	aps", page 2				
Voltage/frequency	~(AC) 50-60 Hz 220-230 V - 15 % + 10 % Preferred voltages: 110-120 VAC, 24 VDC					
Electrical connection	Plug connection as per DIN EN 175301-803 for valves and pressure switches or DIN 46342 for safety extra-low voltage					
Performance/power consumption Switch-on period Degree of protection Radio interference suppression	MBC-65 24 VA per ~(AC) 230 V, 20 °C MBC-120 24 VA per ~(AC) 230 V, 20 °C 100 % ED IP 54 as per IEC 529 (EN 60529) Interference level N					
Material of gas-wetted parts	Housing Diaphragms, se Solenoid drive	eals	NBR b	Aluminium NBR basis, cork Steel, brass, aluminium		
Installation position	Vertical, with so their intermedia		rds or lying	with horizontal solenoid and		

## Adjustment range


# Application of constant pressure regulator

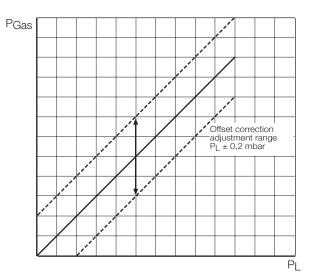

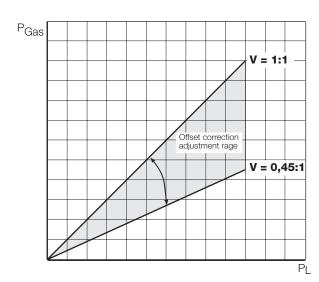

## Adjustment range

# Application of zero pressure regulator

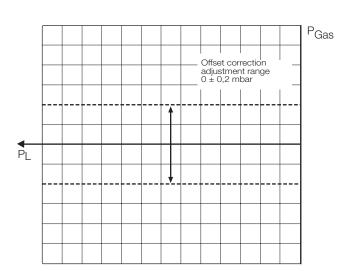


## **Adjustment instructions**

Rapid and simple adjustment by means of:


- Adjust offset correction using setting screw on servo regulator.
- Adjust maximum flow using flow restriction screw.

## Volume flow pressure difference characteristics in steady state with microsieve

MBC-65...

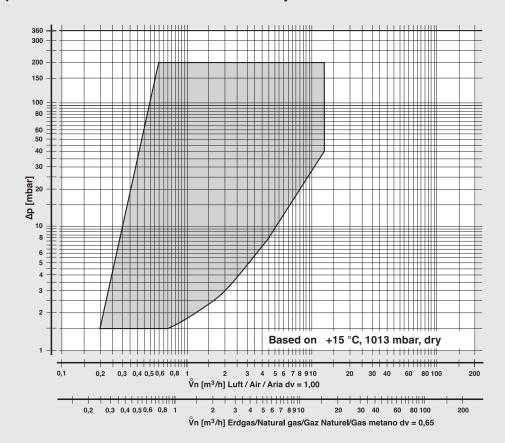

MBC-120...

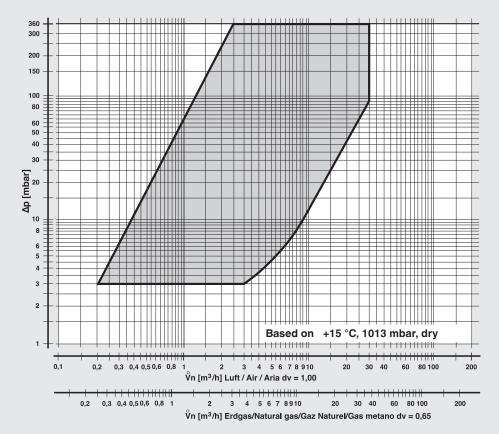

f =

Air density

Density of gas used


Gas type	Density [kg/m³]	dv	f
Natural gas City gas Liquefied gas	0.81 0.58 2.08	0.65 0.47 1.67	1.24 1.46 0.77
Air	1.24	1.00	1.00

 $\mathring{V}_{verwendetes \,Gas/gas \,used/\,gaz \,utilisé/gas \,utilizzato} \,\,\,=\,\,\,\,\mathring{V}_{Luft/air/aria}\,\,\,x\,\,\,\,f$ 

GasMultiBloc®
Control and safety combination
One-stage mode

MBC-65-... MBC-120-...



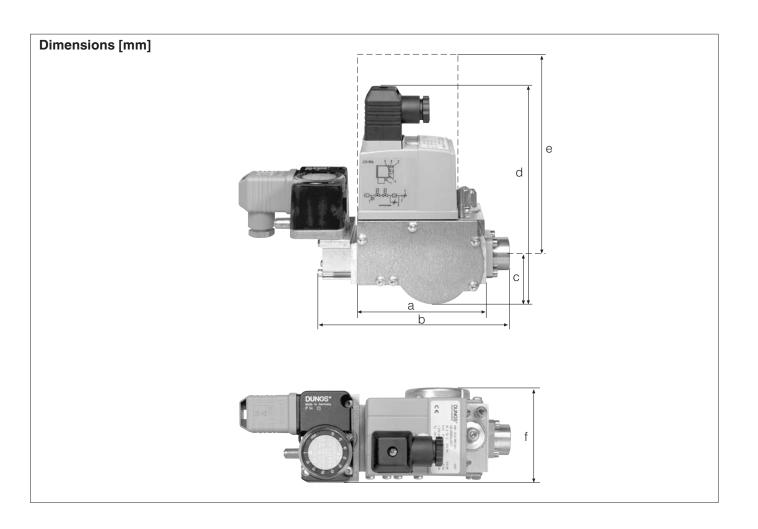

Туре	Rp	Opening time				ns [m d	-	f	Rating/Power Consumption ~(AC) 230 V; + 20 °C	Weight [kg]
<b>MBC-65</b>	Rp 1/2	< 1s	105	148	31	160	226	76	25 VA	1,5
MBC-120	Rp 3/4	< 20 s	105	155	37	165	232	82	25 VA	1,6

We reserve the right to make any changes in the interest of technical progress.

Head Offices and Factory Karl Dungs GmbH & Co. KG Siemensstraße 6-10 D-73660 Urbach, Germany Telephone +49 (0)7181-804-0 Fax +49 (0)7181-804-166 Postal address Karl Dungs GmbH & Co. KG Postfach 12 29 D-73602 Schorndorf, Germany e-mail info@dungs.com Internet www.dungs.com