

**PROPORTIONAL PRESSURE RELIEF AND REDUCING VALVES**

Valve model: RZMO-REB-P RZGO-REB-P AGMZO-REB-P AGRCZO-REB-P

Driver model: E-RI-REB-P

**IDENTIFICATION**

Valve identification plates and label

Valve name plate : M  
1 : valve code  
2 : valve matrix code  
3 : valve hydraulic symbol

Pilot valve name plate : N  
4 : pilot valve code  
5 : pilot valve matrix code  
6 : pilot hydraulic symbol

Driver label : L  
7 : driver code  
8 : driver serial number  
9 : factory firmware version

**INSTALLATION TOOLS ACCORDING TO VALVE MODEL- not included**

Fastening bolts	Wrenches	Screwdriver	Main connectors	IO-Link connector IL
socket head screws	for fastening bolts and mechanical pilot relief	for air bleeding	std, /Q /Z	5 pin metallic
	see STEP 1 and STEP 3		see STEP 2.1	see STEP 2.2

**PROGRAMMING TOOLS - not included**

PC software	mobile App	Bluetooth	OR	USB connection KIT
E-SW-SETUP	Atos CONNECT	Adapter		Cable Isolator
		E-A-BTH		E-C-SB-USB/M12 E-A-SB-USB/OPT

NOTE: Atos CONNECT supports Atos digital valve drivers equipped with E-A-BTH or with built-in Bluetooth, see STEP 5

**PC SOFTWARE**

E-SW-SETUP	supports	NP (USB)	IL (IO-Link)	PS (Serial)	IR (Infrared)
		BC (CANopen)	BP (PROFIBUS DP)	EH (EtherCAT)	
		EW (POWERLINK)	EI (EtherNet/IP)	EP (PROFINET RT/IRT)	
		supports valves with SP, SF, SL alternated p/Q control			

REMARK Atos PC software is designed for Windows based operative systems - Windows 10 or later

**PC SOFTWARE DOWNLOAD**

Download PC software at [www.atos.com](http://www.atos.com) accessing to "MyAtos -> Download area electronics"

Free registration by filling the form at [www.atos.com/en-it/login](http://www.atos.com/en-it/login)

E-SW-SETUP is free and available in Download area

**RELATED DOCUMENTATION - www.atos.com**

FS900 Operating and maintenance information - tech. table	STARTUP BLUETOOTH Bluetooth adapter startup guide
FS010 RZMO-010 pressure relief, direct - tech. table	E-MAN-RI-REB REB - driver operating manual
FS020 RZGO-010 pressure reducing, direct - tech. table	E-MAN-S-IL IO-Link protocol programming manual
FS040 AGMZO pressure relief, two stage - tech. table	
FS055 AGRCZO pressure reducing, two stage - tech. table	
FS067 RZMO-030 pressure relief, piloted - tech. table	
FS075 RZGO-033 pressure reducing, piloted - tech. table	
P005 Mounting surfaces - tech. table	
GS500 Programming tools - tech. table	
GS520 IO-Link features - tech. table	
K800 Electric and electronic connectors - tech. table	

**ATTENTION !**

The purpose of this quickstart guide is show a logical sequence of basic operations. This guide does not cover all details or variants of Atos valves. All operations described in this document should be performed only by qualified personnel. Operations and images could be subject to change without notice. For further information please refer to related documentation.

**CONTACT US**

Atos spa - Italy - 21018 Sesto Calende [www.atos.com](http://www.atos.com) [support@atos.com](mailto:support@atos.com)

**PRODUCTS OVERVIEW**

STEP 1: Mechanical installation (mounting surface layout)

STEP 2: Electrical installation (wiring connections)

STEP 3: Hydraulic installation (fluid filling)

STEP 4: PC software programming

STEP 5: Mobile app programming

INSTALLATION			PROGRAMMING	
STEP 1	STEP 2	STEP 3	STEP 4	STEP 5
MECHANICAL	ELECTRICAL	HYDRAULICS	PC SOFTWARE	MOBILE APP

**STEP 1 MECHANICAL**

In case of first commissioning, before the valve installation the whole system must be correctly flushed to grant the required cleanliness level

During the flushing operation use on-off or by-pass valves in place of the proportional valve

- remove protection pad P1 located on the valve bottom face only immediately before installation (do not remove connectors caps)
- check the presence and correct positioning of the seals on valve ports
- verify that valve mounting surface is clean and free from damages or burrs
- verify the correct valve orientation according to the pattern of the relevant mounting interface
- lock the fastening bolts respecting below sequence and tightening torque according to valve model

<b>RZMO-REB / RZGO-REB</b> Mounting surface layout 4401-03-02-0-05 (RZMO without A and B ports) Valve size ISO 4401: 06 Fastening bolts: n°4 M5x50 class:12.9, wrench 4 mm Tightening torque: 8 Nm	<b>AGMZO-REB-10</b> Mounting surface layout 6264-06-09-1-97 Valve size ISO 6264: 10 Fastening bolts: n°4 M12x35 class:12.9, wrench 10 mm Tightening torque: 125 Nm
<b>AGMZO-REB-20</b> Mounting surface layout 6264-08-13-1-97 Valve size ISO 6264: 20 Fastening bolts: n°4 M16x50 class:12.9, wrench 14 mm Tightening torque: 300 Nm	<b>AGMZO-REB-32</b> Mounting surface layout 6264-10-17-1-97 Valve size ISO 6264: 32 Fastening bolts: n°4 M20x60 class:12.9, wrench 17 mm Tightening torque: 600 Nm
<b>AGRCZO-REB-10</b> Mounting surface layout 5781-06-07-0-00 Valve size ISO 5781: 10 Fastening bolts: n°4 M10x45 class:12.9, wrench 8 mm Tightening torque: 70 Nm	<b>AGRCZO-REB-20</b> Mounting surface layout 5781-08-10-0-00 Valve size ISO 5781: 20 Fastening bolts: n°4 M10x45 class:12.9, wrench 8 mm Tightening torque: 70 Nm

**STEP 2 ELECTRICAL**

This section considers the different valves options, illustrating the multiple variants of the available electrical connections. The electrical connections have to be wired according to the selected valve code

**2.1 MAIN CONNECTOR - only for NP**

- Remove main connector cap P2
- Select main connector according to valve code and proceed with wirings operations
- Connect the valve to the system

**WARNING:** remove power supply before any electrical or wiring operations

**WARNING:** a safety fuse is required in series to driver power supply - 2,5 A time lag fuse

Standard		/Z option	
A V+	(power supply 24Voc)	1 V+	(power supply 24Voc)
B V0	(power supply 0Voc)	2 V0	(power supply 0Voc)
C AGND		3 ENABLE	(input 24Voc)
D P_INPUT+	(0 ÷ 10Voc / 4 ÷ 20mA)	4 P_INPUT+	(0 ÷ 10Voc / 4 ÷ 20mA)
E INPUT-		5 INPUT-	
F P_MONITOR	(0 ÷ 10Voc / 4 ÷ 20mA)	6 P_MONITOR	(0 ÷ 10Voc / 4 ÷ 20mA)
G EARTH		7 NC	
		8 NC	
		9 VL+	(logic power supply 24Voc)
		10 VL0	(logic power supply 0Voc)
		11 FAULT	(output 24Voc)
		PE	EARTH

/Q option	
A V+	(power supply 24Voc)
B V0	(power supply 0Voc)
C ENABLE	(input 24Voc)
D P_INPUT+	(0 ÷ 10Voc / 4 ÷ 20mA)
E INPUT-	
F P_MONITOR	(0 ÷ 10Voc / 4 ÷ 20mA)
G EARTH	

**ELECTRICAL WIRING EXAMPLES - only for NP**

**MAIN CONNECTOR - VOLTAGE**

REFERENCE INPUT - DIFFERENTIAL MODE

0÷10 V<sub>oc</sub> Ref. P ⊕ Ref. P ⊖

main connector pin-out: std /Q /Z (pins D, E, C, B, 10)

valve internal circuit: P\_INPUT+ 50K INPUT- 50K AGND / V0 / VL0

REFERENCE INPUT - COMMON MODE

0÷10 V<sub>oc</sub> Ref. P ⊕ ⊥ (0 V)

main connector pin-out: std /Q /Z (pins D, E, C, B, 10)

valve internal circuit: P\_INPUT+ 50K INPUT- 50K AGND / V0 / VL0

**MONITOR OUTPUT**

0÷10 V<sub>oc</sub> Mon. P ⊕ ⊥ (0 V)

main connector pin-out: std /Q /Z (pins F, C, B, 10)

valve internal circuit: P\_MONITOR AGND / V0 / VL0

**MAIN CONNECTOR - CURRENT**

REFERENCE INPUT - DIFFERENTIAL MODE

4÷20 mA Ref. P ⊕ Ref. P ⊖

main connector pin-out: std /Q /Z (pins D, E, C, B, 10)

valve internal circuit: P\_INPUT+ INPUT- Rsh = 500 ohm

REFERENCE INPUT - COMMON MODE

4÷20 mA Ref. P ⊕ ⊥ (0 V)

main connector pin-out: std /Q /Z (pins D, E, C, B, 10)

valve internal circuit: P\_INPUT+ INPUT- AGND / V0 / VL0 Rmax = 500 ohm

**MONITOR OUTPUT**

4÷20 mA Mon. P ⊕ ⊥ (0 V)

main connector pin-out: std /Q /Z (pins F, C, B, 10)

valve internal circuit: P\_MONITOR AGND / V0 / VL0 Rmax = 500 ohm

**2.2 IO-Link CONNECTOR - only for IL**

- Remove IO-Link connector caps P3
- Proceed with wirings operations
- Connect the valve to the IO-Link network of the system

**WARNING:** remove power supply before any electrical or wiring operations

**WARNING:** a safety fuse is required in series to driver power supply - 2,5 A time lag fuse


1 L+	(power supply 24Voc - IO-Link)
2 P24	(power supply 24Voc - others) (1)
3 L-	(power supply 0Voc - IO-Link)
4 CQ	IO-Link data-line
5 N24	(power supply 0Voc - others) (1)

(1) max power consumption 50 W; for master ports class A connect P24/N24 to an external power supply


M12 Coding A - 5 pin Valve port class B Cable diameter 6 ÷ 8 mm

ZM-5PF (metallic) 5 PIN IO-Link CONNECTOR

**STEP 3 HYDRAULICS**

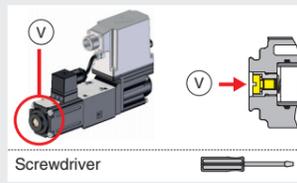

- Air bleeding:**
- release 2 or 3 turns the air bleed screw **V**
  - cycle the valve at low pressure until the oil leaking from the **V** port is exempted from air bubbles
  - lock the air bleed screw **V**

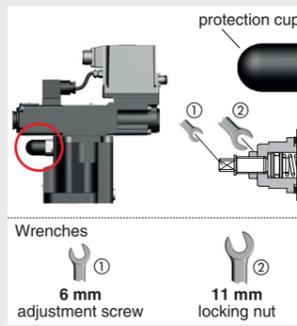

- Mechanical pressure limiter setting** – only **AGMZO** and **AGRCZO** with /P option  
For safety reasons the factory setting of the mechanical pilot relief valve is fully unloaded (min pressure).  
At the first commissioning it must be set at a value lightly higher than the max pressure regulated with the proportional control, proceeding as follow:
- apply the max reference input signal to the valve's driver. The system pressure will not increase until the mechanical pressure limiter remains unloaded
  - release the locknut ②, turn clockwise the adjustment screw ① until the system pressure will increase up to a stable value corresponding to the pressure set-point at max reference input signal
  - turn clockwise the adjustment screw ① of additional 1 or 2 turns to ensure that the mechanical pressure limiter remains closed during the proportional valve working, then tighten the locknut ②

Consult tech table **FS900** for general guidelines about component's commissioning

**WARNING:** To avoid overheating and possible damage of the electronic driver, the valves must be never energized without hydraulic supply to the valve. In case of prolonged pauses of the valve operation during the machine cycle, it is always advisable to switch off or disable the driver (option /Q or /Z)


**STEP 4 PC SOFTWARE**

**REMARK** proportional valves with on-board electronics are factory preset with default parameter and ready to use after piping and electrical connections. **Play with parameters is optional, not mandatory!**

**4.1 CONNECTION**

- 1** In order to access valve parameterization:
- Install E-SW-SETUP software on PC
  - Insert main connector or IO-Link connector to the valve and power on with **24Vdc**


- 2** Remove USB plastic protection cap **P4** and connect valve to the PC as show below via Bluetooth (adapter only) or USB (cable and isolator adapter)

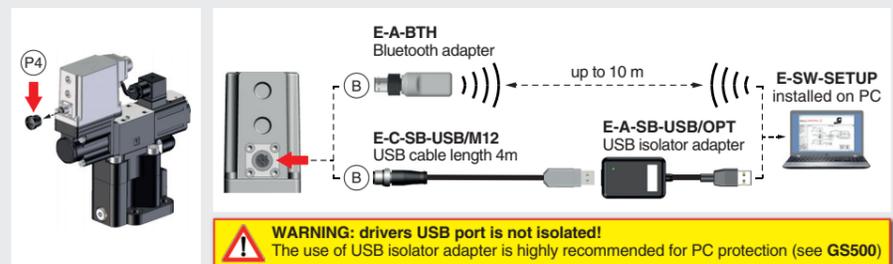

**WARNING:** drivers USB port is not isolated!  
The use of USB isolator adapter is highly recommended for PC protection (see **GS500**)

- 3** Launch the PC software using E-SW-SETUP icon:
- **PC software does NOT detect valid connection** communication is not established, please follow wizard procedure **4**
  - **PC software detects valid connection** communication automatically established - valve is **ON-LINE** see **5**


- 4** In **ON-LINE - Wizard** press button:
- a** : **WIRELESS CONNECTION**  
Wizard procedure for connection via Bluetooth
  - b** : **CABLE CONNECTION**  
Wizard procedure for connection via USB cable

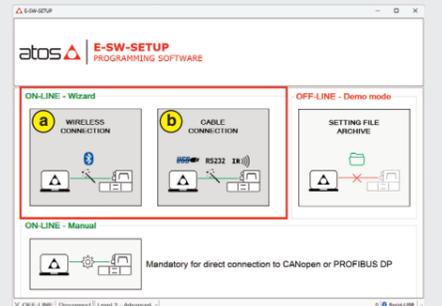


**NOTE:** for more info about E-A-BTH Bluetooth adapter, please refer to **STARTUP BLUETOOTH** guide

**REMARK:** once removed the E-A-BTH Bluetooth adapter or E-C-SB-USB/M12 USB cable, screw the plastic protection cap **P4** applying the correct tightening torque, in order to preserve valve's IP protection characteristics

- 5** Communication established, valve is **ON-LINE** and it is possible change parameters

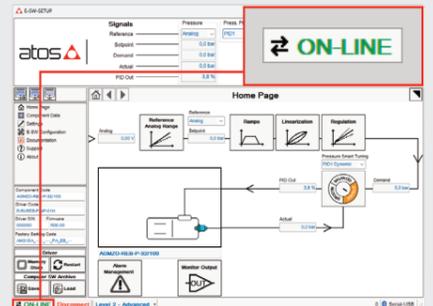

**4.2 CONFIGURATION**

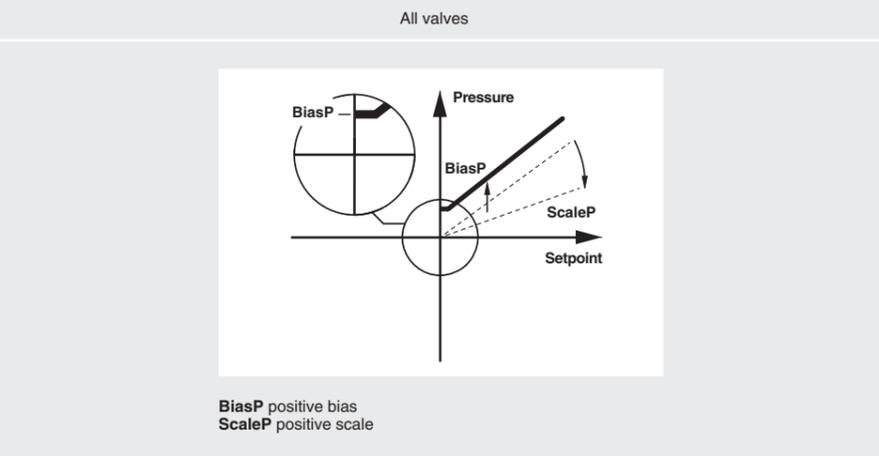


- BIAS AND SCALE**
- Bias setting:** supply the input signal equal to 0 bar
- **relief valves:** increase the Bias until the pressure starts to increase, then lightly reduce the Bias just to bring back the pressure lightly over the minimum regulated value
  - **reducing valves:** increase the Bias until is reached the minimum desired value of starting pressure
- Scale setting:** supply the max input signal; adjust the Scale to obtain the max regulated pressure

- RAMPS**
- Ramps setting:** select the required ramp configuration and adjust the ramp time to optimize the pressure response according to the system characteristics
- No Ramp** : no ramps selected  
**Single Ramp** : setup **Ramp 1**  
**Double Ramp** : setup **Ramp 1** and **2**

**WIZARD REFERENCE - E-SW-SETUP - only for NP**

Reference input signal is factory preset according to selected valve code, defaults are 0 ÷ 10 Vdc for standard and 4 ÷ 20 mA for /I option. Input signal can be reconfigured via PC software selecting between voltage and current, browsing to **Reference Analog Range** page:

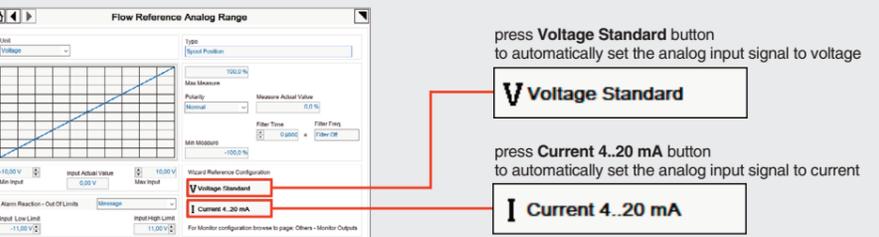


**REMARK:** **Voltage Standard** or **Current 4..20 mA** buttons do not act on Monitor output signal configuration!  
For Monitor output signal configuration browse to page **Others - Monitor Output**

**4.3 SMART TUNING - E-SW-SETUP**

Smart tuning allows to adjust the valve dynamic response in order to match different performance requirements.

The valve is provided with 3 factory setting for the pressure control:

- dynamic** fast response time for best dynamic performances (default factory setting)
- balanced** average response time suitable for major applications
- smooth** attenuated response time for slow regulation without overshoots

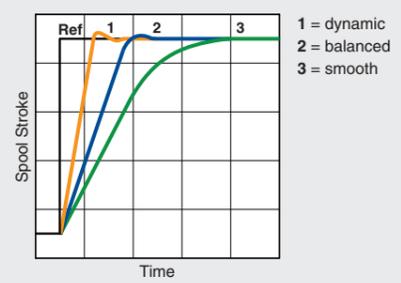

**4.4 STORE**

- Parameters modifications will be stored into driver permanent memory:
- press **Memory Store** button to access **Driver - Memory Save** window
  - press **Save User Set** button to store **Valve Parameters**

**WARNING:** during valve parameters storing operations, the driver automatically shuts down the solenoid power supply for a short time. Do not perform any storing commands while the system is working.

**4.5 BACK UP**

- Parameter modifications will be saved into PC memory:
- press **Save** button to access **Computer SW Archive - Setting Files** page, **Setting File Name** pop-up appears
  - input a valid name into **Description** field and press **Ok** button

**STEP 5 MOBILE APP**


**ATOS CONNECT** for smartphones and tablets is a free downloadable app which allows quick access to valve main functional parameters and configuration via Bluetooth, thus avoiding physical cable connection and significantly reducing commissioning times.

**ATOS CONNECT** app requirements:

- iOS 14 / Android 9
- Bluetooth Low Energy (BLE), version 4.2 or higher
- Atos digital valves/drivers equipped with E-A-BTH Bluetooth adapter or with built-in Bluetooth

**HINT ! - Wizard objects dictionary - only for IL**

Press **CTRL + H** on the PC keyboard to open the context help form  
Move arrow on parameter (e.g. **Ramp Type**) to display the objects dictionary information to access the parameter via IO-Link  
If present **List**, press **→** to display values accepted by the parameter

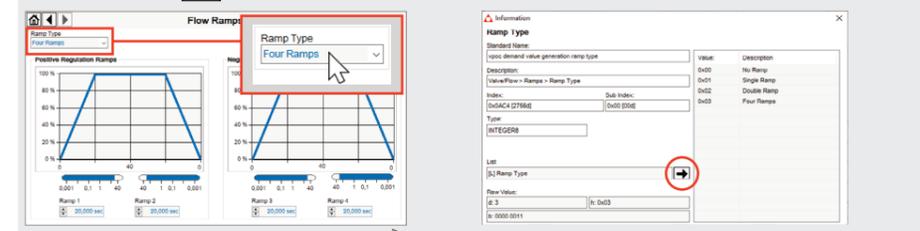

**NOTE:** alternatively right click on any parameter

**TROUBLESHOOTING**

- Valve vibration or noise**
- presence of air in the solenoid; perform air bleeding procedure – see **STEP 3**
- The valve does not follow the reference signal**
- valve is powered off, verify presence of 24 Vdc power supply
  - valve is disabled, verify presence of 24 Vdc on enable pin - only for /Q and /Z options
  - the mechanical pressure limiter interferes with the regulation (AGMZO and AGRCZO with /P option) – check the pilot relief valve setting
  - spool sticking (RZMO-030 and RZGO-033) – contact Atos service center
  - wrong pilot/drain configuration (AGMZO) – check if the pilot/drain configuration of the valve corresponds to the effective system layout
- Pressure instability or vibration**
- select **PID4** to operate the valve in open loop:
    - if the instability still persists, check eventual anomalies in the hydraulic circuit as the presence of air
    - if the instability disappears, select an alternative configuration within PID selection 1, 2 or 3 which better matches the application requirements
    - if no one of the above selection fulfills the application, tune P - I - D parameters at E-SW-SETUP software to obtain the desired dynamic response
- PC software parameters modifications are lost when valve is switched off**
- parameter store operation was not performed, check store procedure – see **STEP 4**, section 4.4
- PC software parameters modifications have no effect on the valve**
- valve is **OFF LINE**, check connection procedure – see **STEP 4**, section 4.1
- After the modifications of PC software parameters the valve does not work properly**
- restore valve factory parameters using 'Load Factory Set' button, located in 'Driver - Memory Save' window:
    - during restore, the current to the solenoid(s) will be temporarily switched to off!
    - factory parameters will be applied at next driver restart or after power off-on sequence!