



# **XB570L**

# CONTENTS

1. PLEASE READ BEFORE USING THIS MANUAL .....	2
2. SAFETY PRECAUTIONS .....	2
3. GENERAL FEATURES .....	2
4. MOUNTING & INSTALLATION .....	3
5. ELECTRICAL CONNECTIONS .....	3
6. CONNECTIONS .....	3
7. FRONTAL PANEL .....	3
8. QUICK START .....	4
9. HOW TO SELECT A CYCLE .....	8
10. PARAMETERS .....	9
11. HOW A CYCLE IS DONE .....	12
12. INSTALLATION AND MOUNTING .....	14
13. XB07PR - PRINTER (OPTIONAL) .....	15
14. ELECTRICAL CONNECTIONS .....	16
15. TTL SERIAL LINE .....	17
16. USE OF THE PROGRAMMING "HOT KEY " .....	17
17. ALARM SIGNALS .....	17
18. TECHNICAL DATA .....	18
19. STANDARD VALUE OF THE CYCLES .....	18
20. STANDARD VALUES OF THE PARAMETERS .....	19

## 1. PLEASE READ BEFORE USING THIS MANUAL

- This manual is part of the product and should be kept near the instrument for easy and quick reference.
- The instrument shall not be used for purposes different from those described hereunder. It cannot be used as a safety device.
- Check the application limits before proceeding.
- Dixell Srl reserves the right to change the composition of its products, even without notice, ensuring the same and unchanged functionality.

## 2. SAFETY PRECAUTIONS

- Check the supply voltage is correct before connecting the instrument.
- Do not expose to water or moisture: use the controller only within the operating limits avoiding sudden temperature changes with high atmospheric humidity to prevent formation of condensation
- Warning: disconnect all electrical connections before any kind of maintenance.
- Fit the probe where it is not accessible by the End User. The instrument must not be opened.
- In case of failure or faulty operation send the instrument back to the distributor or to "Dixell S.r.l." (see address) with a detailed description of the fault.
- Consider the maximum current which can be applied to each relay (see Technical Data).
- Ensure that the wires for probes, loads and the power supply are separated and far enough from each other, without crossing or intertwining.
- In case of applications in industrial environments, the use of mains filters (our mod. FT1) in parallel with inductive loads could be useful.

## 3. GENERAL FEATURES

The series XB has been created for fast chilling or freezing goods according to international food safety standards.

There are FOUR types of cycles:

- The CYCLES: Cy1, Cy2, Cy3, Cy4 are pre-set according to the most common cycles used in food - safety applications; the user can select one of them according to his own requirements and modify it as he wants.
- Any cycle can be manually terminated before the normal.
- Any cycle can use the insert probes (up to 3), they measures the internal temperature of the product.
- During the Cycle there are no defrosts and the fans are always on, a defrost cycle can be done before any freezing cycle.
- The cycle is divided up to 3 phases completely configurable by the user.

- Each instrument is provided with an output for remote display XR REP, which shows the temperature of cabinets or goods.
- The XB570L controller is provided with internal real time clock and can be connected to the XB07PR printer. This means that a report, which includes all the main features of cycle, can be printed: start and end of the cycle, length of the cycle, logging of the temperature of the cabinet and goods.

#### 4. MOUNTING & INSTALLATION

Model XB570L is a controller for panel mounting: the cut out dimensions are 150x31 mm and it has to be fixed with screws. The ambient operating temperature range is from 0.0 to 60°C. Avoid locations subject to heavy vibration, corrosive gases or excessive dirt. The same warnings have to be applied to the probes. Ensure enough ventilation around the instrument.

#### 5. ELECTRICAL CONNECTIONS


The instruments are provided with a screw terminal block to connect cables with a cross section up to 2.5mm<sup>2</sup> for probes and digital input.

Spade on 6.3 mm heat-resistant wiring for supply and loads. Before connecting cables make sure the power supply complies with the instrument's requirements. Separate the input connection cables from the power supply cables, from the outputs and the power connections. **Do not exceed the maximum current allowed on each relay**, in case of heavier loads, a suitable external relay has to be used.

##### 5.1 PROBES CONNECTION

The probes shall be mounted with the bulb upwards to prevent damages due to casual liquid infiltration. It is recommended to place the thermostat probe away from air streams to correctly measure the average room temperature. Place the defrost termination probe among the evaporator fins in the coldest place, where most ice is formed, far from heaters and from the warmest place during defrost, to prevent premature defrost termination.

#### 6. CONNECTIONS

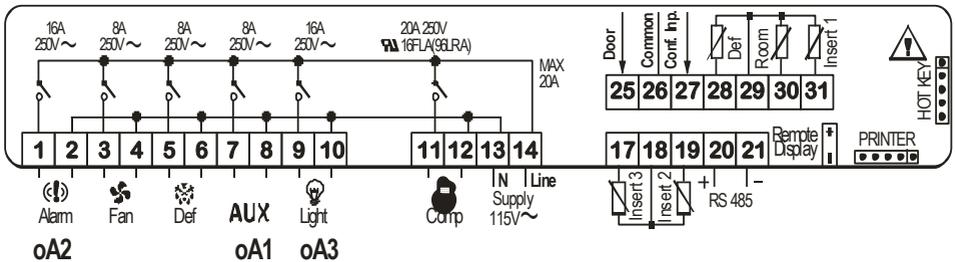

#### 7. FRONTAL PANEL



## 8. QUICK START

### 8.1 DISPLAY

The **upper display** shows the temperature of the room probe.

The **lower display** shows the temperature of the inserts probe or the count down timer. To pass to the one insert probe to the another one use the DOWN key.

<p><b>DISPLAY</b></p> <ul style="list-style-type: none"> <li>&gt; Temperature.</li> <li>&gt; Timer or insert probe</li> <li>&gt; Alarm and status icons.</li> </ul> <p>If an icon or LED is on, the correspondent function is enabled.</p> <p>If an icon or LED is flashing, the correspondent function is delayed.</p>	<p>The diagram shows a digital display with two lines. The top line shows '18.8' with '°C' and '°F' indicators, and a 'H' icon. The bottom line shows '6:55' with 'IP1', 'IP2', and 'IP3' indicators. Labels point to various icons: Fan, Defrost, Compressor, Measurement unit, Running cycle, Alarm (triangle), Auxiliary relay (lightbulb), Timer (clock), and Printer (printer icon). A red box highlights the temperature and timer area.</p>
---	--

### 8.2 KEYBOARD IN STAND-BY

#### HOW TO SELECT A CYCLE:


Push and release the (3) key till the desired cycle is selected.


**HOW TO START A CYCLE:** Push and release the START/STOP button (2). If The correspondent yellow LED is switched on..

#### HOW TO TEMPORARILY STOP THE RUNNING CYCLE.

1. Press and release the key.
2. The compressor and the fan will be stopped for the PAU time (see parameters list) and the flashing message "Stb" will be displayed.
3. To restart the cycle press and release the key, the cycle will restart from the some point at which it was interrupted.
4. In any case the cycle automatically restarts after the PAU time.

**HOW TO STOP A CYCLE:** hold pushed the START/STOP button (2) till the yellow LED will be switched off.

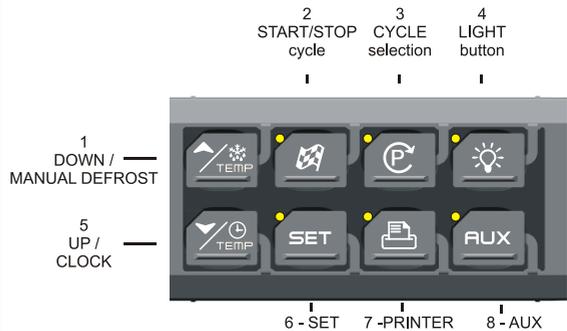
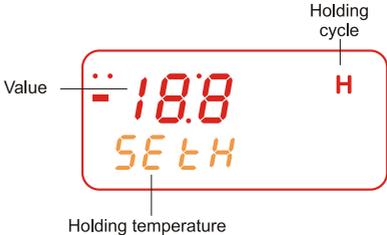
<p><b>HOW TO SET THE TIME (RTC)</b>          Hold pushed the <b>DOWN</b> key (5) till the Min label is displayed.          Use the <b>UP</b> and <b>DOWN</b> KEY to browse the parameters.</p> <ul style="list-style-type: none"> <li>- <b>TO MODIFY:</b> push the <b>SET</b> button and then the <b>UP</b> and <b>DOWN</b> keys.</li> <li>- <b>TO CONFIRM:</b> push the <b>SET</b> button.</li> </ul> <p><b>TO EXIT THE RTC MENU:</b> push both <b>SET+UP</b> keys or wait for 5 sec.</p>		<p><b>UP key:</b> browse the menu:</p> <ul style="list-style-type: none"> <li>- Min= minutes</li> <li>- Hou= hours</li> <li>- daY= day</li> <li>- Mon= month</li> <li>- YEA= year</li> <li>- tiM= US/EUROPE time</li> </ul>
<p><b>HOW DISPLAY / MODIFY THE SET POINT OF THE HOLDING PHASE</b></p> <ul style="list-style-type: none"> <li>- <b>TO DISPLAY:</b> push and release the <b>SET</b> key (6), the holding set point of the selected cycle is displayed for 5 sec.</li> <li>- <b>TO MODIFY:</b> while the set point is displayed hold pushed the <b>SET</b> key till the HdS label start flashing. Use the <b>UP</b> and <b>DOWN</b> key to modify the value..</li> </ul> <p><b>TO CONFIRM:</b> push the <b>SET</b> key to confirm the value and exit.</p>		<p>In this example the holding set point of the cycle 1 is modified.</p>
		<p>In this example the set point of the holding cycle is modified.</p>
<p><b>HOW MODIFY A CYCLE:</b></p> <ol style="list-style-type: none"> <li>1. Push the <b>C</b> key (6) for several seconds till the first parameter (CyS) is displayed.</li> <li>2. Use the <b>UP</b> and <b>DOWN</b> keys to browse the parameters.</li> <li>3. To modify a parameter push the <b>SET</b> key and use the arrow keys.</li> <li>4. Confirm the new value by pushing the <b>SET</b> key.</li> <li>5. The new value is recorded even if the programming is exited by time out.</li> </ol>		


### 8.3 KEYBOARD WHEN A CYCLE 1,2,3,4 IS RUNNING

#### DISPLAY TEMPERATURES:

The **upper** display shows the temperature of the thermostat probe  
 The **bottom** display shows the temperature of a insert probe (if enabled) or the count down timer.  
 By pushing **DOWN** key, the probes iP1, iP2, iP3 and the count-down timer are displayed in sequence.



**PHASE DISPLAY:** pushing the **UP** key the running phase is displayed.

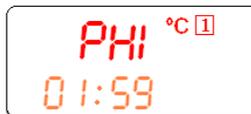

PH1= phase 1  
 PH2= phase 2  
 PH3= phase 3

#### HOW TO DISPLAY THE REGULATION SET POINTS

By pushing the SET key the following information are displayed in sequence:  
 - **rSI** = Room set point  
 - **iSI** = Stop phase set point, referred to the insert probe  
 - Back to the room temperature.



#### HOW TO MODIFY THE ROOM SET POINT

While rSI or iSI are displayed hold pushed the SET key till the rSI or iSI label starti flashing and LED near the SET key is turned on.  
 Use the arrow key to modify the value and the SET key to confirm it.



### 8.4 KEYBOARD WHEN THE HOLDING CYCLE IS RUNNING (H)

#### HOW TO DISPLAY THE HOLDING (REGULATION) SET POINT

While the holding cycle is running, (H icon lighted), push the SET key and the holding set point is displayed on the UPPER display while the **SETH** label on the bottom display

#### HOW TO MODIFY THE ROOM SET POINT

While SETH is displayed hold pushed the SET key till the SETH label starts flashing and LED near the SET key is turned on..  
 Use the arrow key to modify the value and the SET key to confirm it.

**TO CONFIRM AND EXIT:** push again the SET key




## 8.5 OTHER KEYS

**LIGHT (4):** push the LIGHT (4) key to switch the light on and off. The status of the light is monitored by the yellow LED upper the key.

**AUX (8):** push the AUX (8) key to switch the auxiliary on and off. The status of the auxiliary relay is monitored by the yellow LED upper the key.

**PRINTER / H (7):** push the PRINTER key when the keyboard is connected to the controller, to enable or disable the printer.

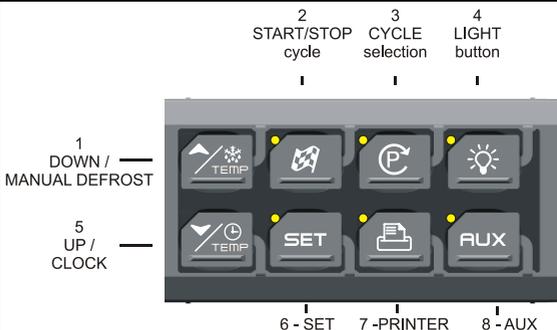

### PRINTER CONFIGURATION MENU

Push the PRINTER (7) key for few seconds to enter the printer configuration menu.

The **itP**, label is displayed, use the ARROW keys to browse the parameters:

- **To modify:** push the **SET** key and then the ARROW keys.
- **To confirm:** push the **SET** key.

**To exit the Printer menu:** push both **SET+UP** keys or wait for 5 sec.



**UP key:** browse the menu:

- **itP**=time printing interval.
- **PbP**=data to print.
- **PAr**=enabled the printing of the parameter map.
- **CyC**=enabled the printing of cycle parameters.
- **PtH**=enabled the printing during the holding phase.
- **PrS**=level Pr1 o Pr2.
- **Pnu**=number of printing.

**DOWN** key back to the previous label.

## 8.6 HOW TO START A MANUAL DEFROST.

Assure that none cycle is active or the hold mode is running.

1. Keep **UP** key pressed a few seconds.

**NOTE:** the defrost will not be done if the temperature detected by the evaporator probe is higher than EdF (stop defrost temperature) parameter.

## 8.7 OTHER FUNCTIONS OF KEYBOARD

 + 	To lock & unlock the keyboard Pon/PoF
 + 	To enter the programming mode when the controller is in stand-by Each parameter present in the Pr2 can be removed or put into "Pr1" (user level) by pressing <b>SET+DOWN</b> .
 + 	To return to the previous menu.

## 8.8 MEANING OF THE LEDS

A series of light points on the front panels is used to monitor the loads controlled by the instrument. Each LED function is described in the following table.

LED	MODE	ACTION
	<b>ON</b>	Compressor enabled
	<b>Flashing</b>	Programming Phase (flashing with LED  ) Anti-short cycle delay enabled
	<b>ON</b>	Fan enabled
	<b>Flashing</b>	Programming Phase (flashing with LED  ) Activation delay active
	<b>ON</b>	Defrost active
	<b>Flashing</b>	Drip time active
<b>1, 2, 3, 4, H</b>	<b>ON</b>	Freezing cycle 1, 2, 3, 4 or hold mode active
<b>1, 2, 3, 4, H</b>	<b>Flashing</b>	Instrument temporarily stop
	<b>ON</b>	Alarm signalling
<b>AUX, AUX2</b>	<b>ON</b>	Aux or Aux2 enabled

## 9. HOW TO SELECT A CYCLE

1. Push the  to move among the cycles C1, C2, C3, C4 and the holding cycle. The related symbol on the display will be lighted and the cycle will be selected.

**NOTE:** to pass from a cycle to another one simply push the  key when the controller is in stand –by mode.

**HOLD PHASE:** To select **H** symbol pushing the .

Cycles are pre-set with the following values:

1. <b>Cy1:</b> for fast chilling and conservation of foods (hard +soft chill).
2. <b>Cy2:</b> for chilling and fast freezing of foods (hard +soft + freezing cycle).
3. <b>Cy3:</b> for direct fast freezing (only fast freezing cycle)
4. <b>Cy4:</b> for fast freezing avoiding ice skin (hard chill + freezing cycle)
5. <b>HLD:</b> hold mode function
6. <b>dEF:</b> for starting a manual defrost

2. Now the cycle is memorised and can be activated.

### 9.1 HOW TO MODIFY A CYCLE

1. Verify that none cycle is running. If one cycle is running stop it by pushing the  key for 3 sec.
2. Push the  to move among the cycles C1, C2, C3, C4 and the holding cycle. The related symbol on the display will be lighted and the cycle will be selected
3. Hold push the  key for several seconds till the display will show the first parameter of the selected cycle (cyS) with its value.
4. Use the UP and DOWN keys to browse the parameters.
5. To modify a parameter push the SET key and use the arrow keys.
6. Confirm the new value by pushing the SET key.
7. The new value is recorded even if the programming is exited by time out.

**To exit:** wait for 30 sec or push both **SET+UP** kyes.

## 10. PARAMETERS

### REGULATION

**Hy Intervention differential for set point:** (0.1 to 12.0 res. 0.1°C or 1°F) always positive. Compressor cut-IN is **SET+HY**. Compressor cut-OUT is when the temperature reaches the set point.

**AC Anti-short cycle delay:** (0 to 30 min) minimum interval between the compressor stop and the following restart.

**PAU Time of stand by:** (0 to 60 min) after this time the controller restart the cycle.

**PFt Maximum acceptable duration of power failure:** (0 to 250 min) if power failure duration is less than PFt, the cycle restarts from the same point at which it was stopped otherwise the cycle restarts from the beginning of the current phase.

**Con Compressor ON time with faulty probe:** (0 to 255 min) time during which the compressor is active in case of faulty thermostat probe. With **CO<sub>n</sub>=0** compressor is always OFF.

**CoF Compressor OFF time with faulty probe:** (0 to 255 min) time during which the compressor is off in case of faulty thermostat probe. With **CoF=0** compressor is always active.

### PROBES

**rPOThermostat probe calibration:** (-12.0 to 12.0, res. 0.1°C or 1°F).

**EPP Evaporator probe presence (not present in the XB350C):** (no / YES) **no:** not present (timed defrost); **YES:** present (end defrost).

**EPO Evaporator probe calibration (not present in the XB350C):** (-12.0 to 12.0, res. 0.1°C or 1°F).

**i1P Insert probe 1 presence:** (no / YES) **no:** not present; **YES:** present.

**i1o Insert probe 1 calibration:** (-12.0 to 12.0, res. 0.1°C or 1°F).

**i2P Insert probe 2 presence:** (no / YES) **no:** not present; **YES:** present.

**i2o Insert probe 2 calibration:** (-12.0 to 12.0, res. 0.1°C or 1°F).

**i3P Insert probe 3 presence:** (no / YES) **no:** not present; **YES:** present.

**i3o Insert probe 3 calibration:** (-12.0 to 12.0, res. 0.1°C or 1°F).

**rEM End cycle probe selection:** (iPt; rP) it sets which probe stops the cycle, thermostat probe or insert probe:

**iPt**=insert probe;

**rPt**=thermostat probe.

**NOTE: with rEM = rPt when the cycles are done by temperature, the rSi values are used as stop of the cycle.**

### DISPLAY AND MEASUREMENT UNIT

**CF Temperature measurement unit:** °C=Celsius; °F=Fahrenheit.

**rES Resolution (for °C):** **in**=integer; **de**=with decimal point.

**Lod Upper display visualization:** select which probe is shown by the upper display:

**rP**=Thermostat probe

**EP**=Evaporator probe

**rEd Remote display, X-REP, visualization:** select which probe is displayed by the X-REP:

**rP**=Thermostat probe; **EP**=Evaporator probe; **tiM**=cycle count down; **i1P**=insert probe 1; **i2P**=insert probe 2; **i3P**=insert probe 3.

### DIGITAL INPUTS

**d1P Door switch input polarity (25-26):** (OP; CL) select if the digital input is activated by opening or closing the contact. **OP**= opening; **CL**=closing.

**odC Compressor and fan status when open door:**

**no**=normal;

**FAn**=Fan OFF;

**CPr**=Compressor(s) OFF;

**F\_C**=Compressor(s) and fan OFF.

**doA Open door alarm delay:** (0 to 254min, 255=nu) delay between the detection of the open door condition and its alarm signalling: the flashing message "dA" is displayed. If **doA=nu** the door alarm will be not signalled.

**dLc Stop count down of the running cycle with door open:** **Y**=count down is stopped with door opening; **n**=count down goes on with door open.

**rrd Regulation restart with door open alarm:** Y=count down and regulation restart when door open alarm is signalled; n=compressor and fans stay according to the **odC** parameter when door open alarm is signalled.

**d2F Second digital input configuration (26-27):** (EAL; bAL) **EAL**=external alarm; **bAL**=serious alarm, regulation is stopped.;

**d2P: Configurable digital input polarity (26-27):** (OP; CL) select if the digital input is activated by opening or closing the contact. **OP**=opening; **CL**=closing.

**did Time delay for digital input alarm:** (0 to 255 min) if **d2F=EAL** or **bAL** (external alarms), **did** parameter defines the time delay between the detection and the successive signalling of the alarm.

#### AUXILIARY RELAY CONFIGURATION

**oA1 First auxiliary relay configuration (7-8):**

**ALL**=alarm; **Lig**=light; **AuS**=second thermostat; **tMr**=auxiliary relay enabled by keyboard; **C2**=second compressor: it is always switched on during the Cycles while depends on the 2CH parameter during the holding phase.

**oA2 First auxiliary relay configuration (1-2):**

**ALL**=alarm; **Lig**=light; **AuS**=second thermostat; **tMr**=auxiliary relay enabled by keyboard; **C2**=second compressor it is always switched on during the Cycles while depends on the 2CH parameter during the holding phase.

**oA3 First auxiliary relay configuration (9-10)**

**ALL**=alarm; **Lig**=light; **AuS**=second thermostat; **tMr**=auxiliary relay enabled by keyboard; **C2**=second compressor: it is always switched on during the Cycles while depends on the 2CH parameter during the holding phase.

#### SECOND RELAY MANAGEMENT

**2CH Compressors setting during the holding phase (used only if one OAi =C2):**

The second compressor is always switched on during the phases, during the holding depends on this parameter.

The **2CH** sets which compressor is used during the holding phase.

Second compressor operates on **SET+OAS**. (SET is the value loaded during the holding phase of each cycle). It starts oAt min after the first compressor.

The following table shows how it works:

	Holding
2CH =C1	C1 on
2CH =C2	C2 on
2CH =1C2	C1 on; C2 On

**OAt Second compressor switching on delay:** (0 to 255 min) time delay between the switching on of the first and second compressor.

**OAS Set point for second compressor** (-50 to 50, res.1°C or 1°F) this set point is a differential add to the set point of the first compressor.

**ES:**

**OAS=0** the set point of the second compressor s the same set point of the first compressor.

**OAS=5** the set point of the second compressor is SET (of first compressor) + 5;

**OAS=-5** the set point of the second compressor is SET (of first compressor) - 5.

**OAH Differential for second compressor:** (-12.0 to 12.0, res.0.1°C or 1°F, always≠0) second compressor cut IN is SETH+OAS+OAH. Second compressor cut out is when the temperature SETH+OAS.

**OAi Probe selection for the second compressor:** rP=thermostat probe; EP=evaporator probe; tIm=cycle count down; i1P=insert probe 1; i2P=insert probe 2; i3P=insert probe 3.

#### AUXILIARY RELAY MANAGEMENT

**OSt AUX output timer:** (0 to 255 min) time in which the AUX output stays ON. It is used when **oA1** or **oA2** or **oA3=tMr**. With **oAt=0** the AUX relay is switched on and off only manually.

**OSS Set point for AUX output, used when oA1 or oA2 or oA3=AUS:** (-50 to 50, res.1°C or 1°F).

**OSH Differential for AUX output:** (-12.0 to 12.0, res. 0.1°C or 1°F, always≠0) intervention differential for the set point of the AUX output, with OAH<0 the action is for heating, with OAH>0 it is for cooling.

**COOLING (OSH>0):** AUX output cut IN is **OSS+OAH**. Second compressor cut out is when the temperature **SETH+OAS**.

**HEATING (OSH<0):** second compressor cut IN is **OSS-OAH**. Second compressor cut out is when the temperature **OSS**.

**OSI Probe selection for the second compressor:** **rP**=thermostat probe; **EP**=evaporator probe; **tiM**=cycle count down; **i1P**=insert probe 1; **i2P**=insert probe 2; **i3P**=insert probe 3.

## DEFROST

**tdF Defrost type (not present in the XB350C):** **rE**=electrical heater; **in**=hot gas.

**idF Interval between defrost cycles:** (0.1 to 24h00min, res. 10 min) determines the time interval between the beginnings of two defrost cycles.

**dtE Defrost termination temperature:** (-50 to 50; res. 1°C or 1°F) sets the temperature measured by the evaporator probe, which terminates the defrost. Used only if **EPP=YES**.

**MdF Maximum length for defrost:** (0 to 255 min) when **EPP=no** (timed defrost) it sets the defrost duration, when **EPP=YES** (defrost termination based on temperature) it sets the maximum length for defrost. If **MdF=0** the defrost is disabled.

**dFd Temperature displayed during defrost:** (rt; it; SEt; dEF) **rt**=real temperature; **it**=temperature at the start of defrost; **SEt**=set point; **dEF**="dEF" message.

**Fdt Drip time:** (0 to 60 min) time intervals between reaching defrost termination temperature and the restoring of the controllers' normal operation. This time allows the evaporator to eliminate water drops that might have formed during defrost.

**dAd Defrost display time out:** (0 to 120 min) sets the maximum time between the end of defrost and the restarting of the real room temperature display.

## FANS

**FnC Fans operating mode during the holding phase:**

**o-n**=continuous mode, OFF during defrost;

**C1n**=runs in parallel with the first compressor, OFF during defrost;

**C2n**=runs in parallel with the second compressor, OFF during defrost;

**Cn**=runs in parallel with compressors, OFF during defrost;

**o-Y**=continuous mode, on during defrost;

**C1y**=runs in parallel with the first compressor, on during defrost;

**C2y**=runs in parallel with the second compressor, on during defrost;

**Cy**=runs in parallel with compressors, on during defrost;

**FSt Fan stop temperature:** (-50 to 50, res. 1°C or 1°F) it is used only if the **EPP=YES**. If the temperature, detected by the evaporator probe is above **FSt** fans are stopped. It serves to avoid blowing warm air in the room.

**AFH Differential for the stop temperature and for the alarm:** (0.1 to 25.0°C, res. 0.1°C or 1°F) fans carry on working when the temperature reaches the **FSt-AFH** value, the temperature alarm recovers when the temperature is **AFH** degrees below the alarm set.

**Fnd Fan delay after defrost:** (0 to 255 min) the time intervals between ends of defrost and evaporator fans start.

## TEMPERATURE ALARMS

**ALU MAXIMUM temperature alarm (it is used only during the holding phase):** (1.0 to 50.0, res. 0.1°C or 1°F) when the **SET+ALU** temperature is reached the alarm is enabled, (possibly after the **ALd** delay time).

**ALL Minimum temperature alarm (it is used only during the holding phase):** (1.0 to 50.0, res. 0.1°C or 1°F) when the **SET-ALL** temperature is reached the alarm is enabled, (possibly after the **ALd** delay time).

**ALd Temperature alarm delay (it is used only during the holding phase):** (0 to 255 min) time interval between the detection of an alarm condition and alarm signalling.

**EdA Temperature alarm delay at the end of a defrost (it is used only during the holding phase):** (0 to 255 min) time interval between the detection of the temperature alarm condition at the end of defrost and alarm signalling.

**tbA Silencing alarm relay:** **Y**=silencing buzzer and alarm relay; **n**=only buzzer silencing.

## CYCLE LOG

**tCy** Duration of the last cycle (read only).

**tp1** Duration of first phase of the last cycle (read only).

**tp2** Duration of second phase of the last cycle (read only).

**tp3** Duration of third phase of the last cycle (read only).

## OTHER

**Adr Address for RS485:** 1 to 247.

**bUt Buzzer activation at the end of the cycle:** (0 to 60 sec; with 0 the buzzer is on till any key will be pushed).

**tPb Kind of probe:** it sets the kind of probe used. **ntC=NTC**, **PtC=PTC**.

**rEL Release code (read only).**

**Ptb Parameter code (read only).**

### 11. HOW A CYCLE IS DONE.

1. Every programmable cycle Cy1, Cy2, Cy3 or Cy4 can be divided into up to 3 phases usually called:
  - **hard chill**
  - **soft chill**
  - **freezing cycle**
2. For each phase there are 3 parameters:

**iS1 (iS2, iS3):** set point related to the insert probes that stops the current phase.  
**rS1 (rS2, rS3):** set point of the room temperature for each phase.  
**Pd1 (Pd2, Pd3):** the maximum duration time for each phase.  
**Hds:** set point of the hold phase at the end of the whole cycle.

There are also 3 parameters: **CYS** to decide the kind of cycle, by temperature or by time, and other two related to the defrost. These are **dbC** (defrost before cycle) and **dbH** (defrost before holding, at the end of the cycle).

#### 11.1 CONFIGURABLE CYCLE PARAMETERS

**CYS Cycle setting:** **tEP**=by temperature. The cycle is done according to the **rEM** parameter. **tim**=timed cycle, based on the Pd1, Pd2, Pd3 parameters.

**dbc Defrost before the cycle:** n; Y.

**iS1 Insert Probe Set point:** (-50 to 50, res. 1°C or 1°F) when the temperature measured by the three insert probes reaches this value the first phase is ended.

**rS1 Room probe Set point for the first phase:** (-50 to 50, res. 1°C or 1°F) it prevents temperature from reaching a too low value during the hard cycle.

**Pd1 Maximum time for first phase:** OFF to 4h00min, res. 10 min.

**iS2 Insert probe set point:** (-50 to 50, res. 1°C or 1°F) when the temperature measured by the three insert probes reaches this value the second phase is ended.

**rS2 Room probe Set point:** (-50 to 50, res. 1°C or 1°F) for the second phase: it prevents temperature from reaching a too low value during the second phase.

**Pd2 Maximum time for second phase:** OFF to 4h00min, res. 10 min.

**iS3 Insert Probe Set point:** (-50 to 50, res. 1°C or 1°F) to stop the third (and last) phase: when the temperature measured by the three insert probes reaches this value the third phase is ended.

**rS3 Room probe Set point:** (-50 to 50, res. 1°C or 1°F) for the third (and last) phase: it prevents temperature from reaching a too low value during the third (and last) phase.

**Pd3 Maximum time for the third phase:** OFF to 4h00min, res. 10 min.

**dbH Defrost before the hold phase:** n; Y.

**HdS Set point of the holding phase:** (-50 to 50, res. 1°C or 1°F) with "OFF" the hold phase is disabled.


**IMPORTANT NOTE:** If the duration time of a phase is set at the OFF value, the corresponding phase is disabled. For example, if **Pd3=OFF** the third phase of the cycle is not active.

#### 11.2 HOW TO USE THE INSERT PROBES

By means the insert probe, the internal temperature of products can be checked. This measure is used to end the various phase of the cycle. A special internal function detect if the inset probe is not used, in this case the cycle is made by time.

## 11.3 EXAMPLE OF A BLAST CHILLER CYCLE

The following drawing explains how a Blast Chiller cycle can be done.

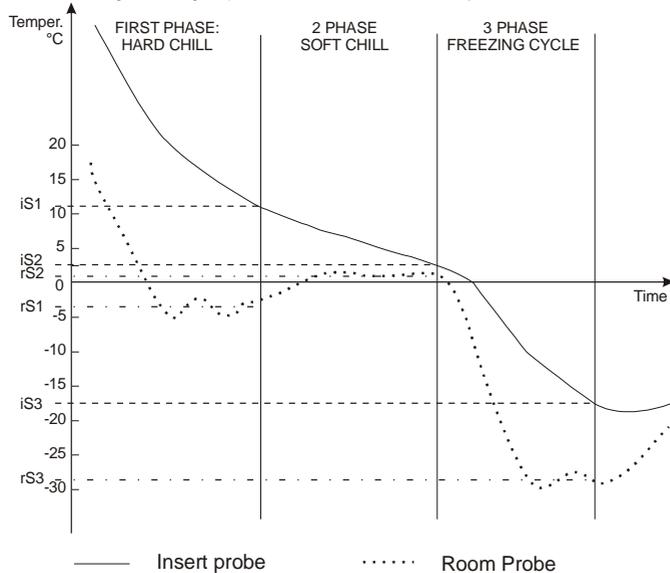

### 11.3.1 First phase: “Hard chill”.

It is normally used to fast chill hot foods. E.g. from 80°C / 170°F to 20°C / 70°F

During “Hard Chill”, both compressor and fan are always on until the **rS1** temperature is reached. At this point compressor is turned on end off so as to keep the temperature of the room at the **rS1** value. “Hard Chill” ends when the temperature measured by the 3 insert probes reach the **iS1** value.

### 11.3.2 Second phase: “Soft chill”.

The **Soft Chill** starts when the Hard Chill ends. It is used to prevent thin layer of ice from forming on the product. The **Soft Chill** lasts until the temperature measured by the 3 insert probes reach the set point **iS2** (usually 4 or 5°C).

During Soft Chill the temperature of the room is regulated by the ambient probe with the set point **rS2** (normally at 0 or 1 °C / 32 or 34°F). When the box temperature reaches the **rS2** value compressor is turned on end off so as to keep the temperature of the box at this value.

### 11.3.3 Third phase: “Freezing cycle”.

Freezing Cycle: used to fast freeze foods.

The Freezing Cycle starts when the Soft Chill ends. During the “Freezing Cycle” both compressor and fan are always on until the **rS3** temperature is reached. At this point compressor and fans are turned on end off so as to keep the temperature of the room at the **rS3** value (normally some degrees below **iS3**). Freezing Cycle ends when the temperature measured by the 3 insert probes reach the **iS3** value (normally -18°C / 0°F), in any case it ends when the maximum time **Pd1 + Pd2 + Pd3** has expired.

### 11.3.4 End of the Blast Chill cycle and starting of the Hold Mode.

When one of the three insert probes reaches the **iS3** value the values End followed by the i1P or i2P or i3P are shown on the display.

Cycle ends when all the probes have reached the **iS3** value. A signal is generated: buzzer and alarm relay is turned ON, the display shows the message “End” alternating with the room temperature.

The alarm automatically stops after the “but” time or by pressing any keys.

At the end of the cycle the controller can start the “Hold mode” keeping the room temperature at the value set in HdS parameter.

If HdS = OFF, the machine is turned OFF.


**NOTE1:** with **dbH = yES** a defrost is done before the holding phase.

**NOTE2:** If the end cycle temperature iS3 is not reached in the maximum time Pd1+Pd2+Pd3 the instrument keep on working, but the alarm message “OCF” is given.


## 12. INSTALLATION AND MOUNTING

Instruments **XB570L** shall be mounted on vertical panel, in a 150x31 mm hole, and fixed using two screws  $\varnothing$  3 x 2mm. To obtain an IP65 protection grade use the front panel rubber gasket (mod. RG-L). The temperature range allowed for correct operation is 0 to 60°C. Avoid places subject to strong vibrations, corrosive gases, excessive dirt or humidity. The same recommendations apply to probes. Let the air circulate by the cooling holes.

### 12.1 CUT OUT

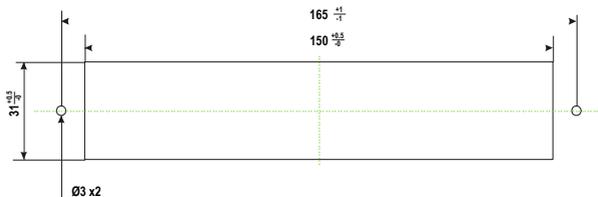


### 12.2 MOUNTING

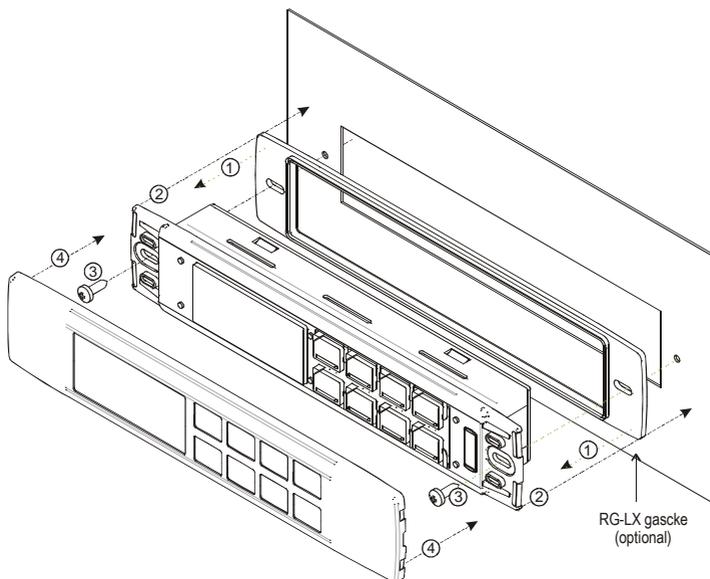


### 13. XB07PR - PRINTER (OPTIONAL)

The XB570L is designed to work with the XB07PR.  
The XB07PR kit is composed by:


1. Printer
2. Power adapter
3. Connecting cables

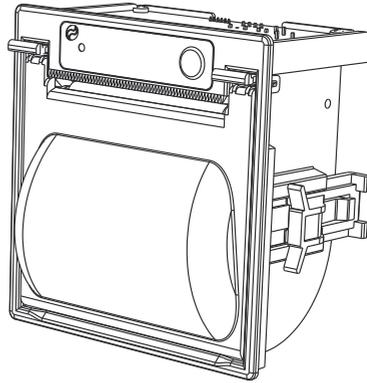


#### 13.1 PRINTER DIMENSIONS

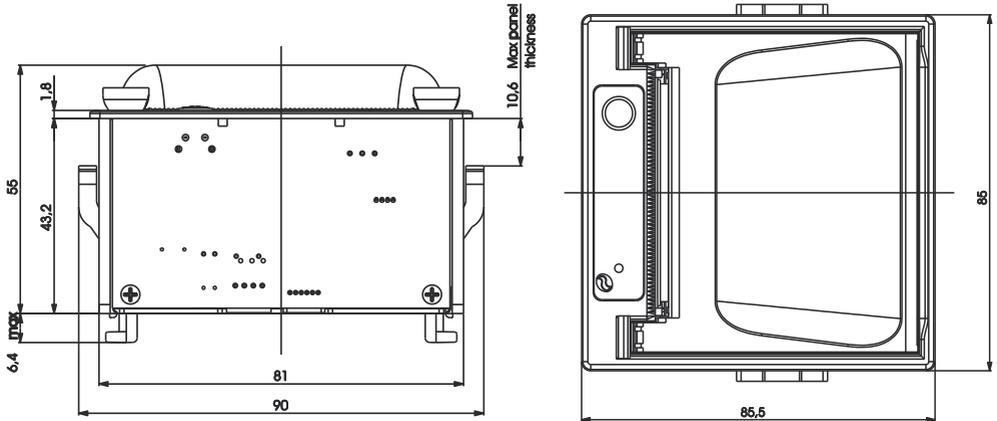

## 13.2 PRINTER MOUNTING

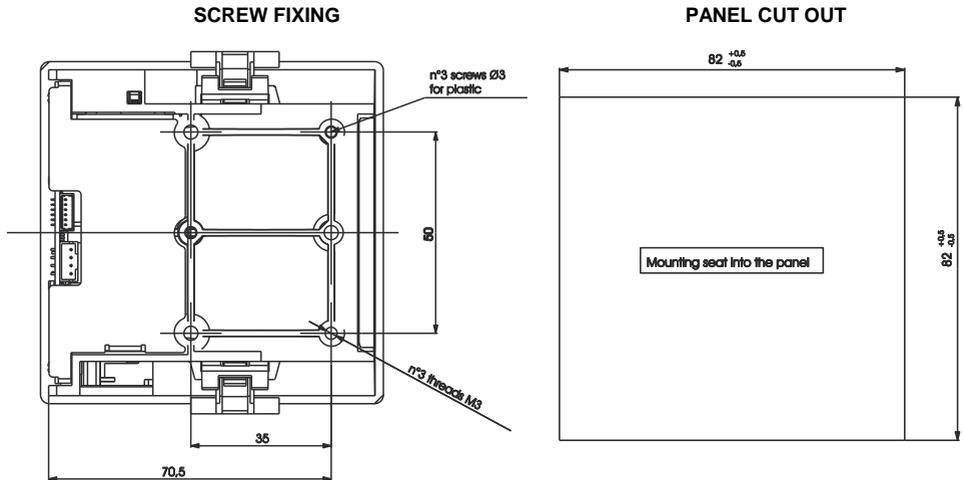

## 13.3 CONNECTION TO THE XB570L – XB07PR

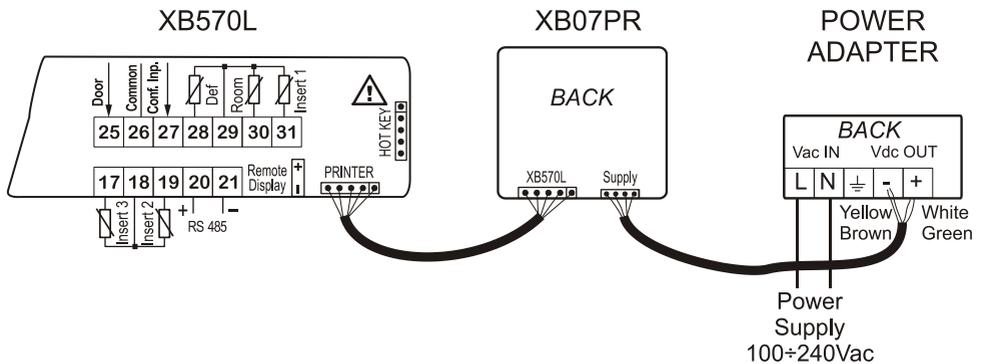

## 14. ELECTRICAL CONNECTIONS

The instruments are provided with screw terminal block to connect cables with a cross section up to 2.5mm<sup>2</sup> for the digital and analogue inputs. Relays and power supply have a Faston connection (6.3mm). Heat-resistant cables have to be used. Before connecting cables make sure the power supply complies with the instrument's requirements. Separate the probe cables from the power supply cables, from the outputs and the power connections. Do not exceed the maximum current allowed on each relay, in case of heavier loads use a suitable external relay.

**N.B. Maximum current allowed for all the loads is 20A.**

### 14.1 PROBE CONNECTIONS

The probes shall be mounted with the bulb upwards to prevent damages due to casual liquid infiltration. It is recommended to place the thermostat probe away from air streams to correctly measure the average room temperature.

## 15. TTL SERIAL LINE

The TTL connector allows, by means of the external module TTL/RS485, to connect the unit to a network line **ModBUS-RTU** compatible as the Dixell monitoring system.

The same TTL connector is used to upload and download the parameter list of the “**HOT KEY**”.

## 16. USE OF THE PROGRAMMING “HOT KEY “

The Wing units can **UPLOAD** or **DOWNLOAD** the parameter list from its own E2 internal memory to the “**Hot Key**” and vice-versa.

### 16.1 DOWNLOAD (FROM THE “HOT KEY” TO THE INSTRUMENT)

1. Turn **OFF** the instrument by means of the **ON/OFF** key, remove the TTL serial cable if present, insert the “**Hot Key**” and then turn the Wing **ON**.
2. Automatically the parameter list of the “**Hot Key**” is downloaded into the Wing memory, the “**DoL**” message is blinking. After 10 seconds the instrument will restart working with the new parameters.
3. Turn **OFF** the instrument, remove the “**Hot Key**”, plug in the TTL serial cable and then turn it **ON** again.

At the end of the data transfer phase the instrument displays the following messages:

- **End** for right programming. The instrument starts regularly with the new programming.
- **Err** for failed programming. In this case turn the unit off and then on if you want to restart the download again or remove the “**Hot key**” to abort the operation.

### 16.2 UPLOAD (FROM THE INSTRUMENT TO THE “HOT KEY”)

1. Turn **OFF** the instrument by means of the **ON/OFF** key and remove the TTL serial cable if present; then turn it **ON** again.
2. When the unit is **ON**, insert the “**Hot Key**” and push the **UP** key; the “**UPL**” message will appear.
3. Push **SET** key to start the **UPLOAD**; the “**UPL**” message will start blinking.
4. Turn **OFF** the instrument, remove the “**Hot Key**”, plug in the TTL serial cable and then turn it **ON** again.

At the end of the data transfer phase the instrument displays the following messages:

- **End** for right programming. The instrument starts regularly with the new programming.
- **Err** for failed programming. In this case turn the unit off and then on if you want to restart the download again or remove the “**Hot key**” to abort the operation.

## 17. ALARM SIGNALS

Mess.	Cause	Outputs
<b>EE</b>	Data or memory failure	Alarm output ON. Other outputs unchanged
<b>rPF</b>	Thermostat Probe failure	Alarm output ON. Compressor output according to parameters <b>Con</b> and <b>CoF</b>
<b>EPF</b>	Evaporator Probe failure	Alarm output ON. Defrost termination is timed. No temperature control on fans.
<b>i1P i2P i3P</b>	Insert probe 1, 2, 3, failure	Alarm output ON. Other outputs unchanged. The cycle is made by time
<b>rtC</b>	Real Time Clock data lost	Alarm output ON. Other outputs unchanged.
<b>rtF</b>	Real Time Clock failure	Alarm output ON. Other outputs unchanged. The date and the duration of the cycle are not available.
<b>HA</b>	Maximum temperature alarm	Alarm output ON. Other outputs unchanged.
<b>LA</b>	Minimum temperature alarm	Alarm output ON. Other outputs unchanged.
<b>FF</b>	Fast freezing interrupted by short power failure	Alarm output ON. The freezing cycle restart from the same point at which was interrupted.
<b>PFA</b>	Fast freezing interrupted by long power failure	Alarm output ON. The freezing cycle restart from the current phase.
<b>OCF</b>	Max duration of the cycle is expired	Alarm output ON. Other outputs unchanged. In any case the cycle ends when the final temperature is reached
<b>EA</b>	External alarm	Alarm output ON. Other outputs unchanged.
<b>CA</b>	Serious external alarm	Alarm output ON. Other outputs OFF.
<b>dA</b>	Door open alarm	Alarm output ON. Other outputs unchanged.

## 18. TECHNICAL DATA

**Housing:** self extinguishing ABS

**Case:** frontal 185x38 mm; depth 70mm

**Mounting:** panel mounting in a 150x31mm panel cut-out

**Frontal protection:** IP65

**Connections:** screw terminal block  $\leq 2.5\text{mm}^2$  wiring

**Power supply:** 230Vac,  $\pm 10\%$

**Power absorption:** 5VA max

**Display:** dual display

**Inputs:** 5 PTC or NTC probes

**Relay outputs:**

**Compressor:** relay SPST 20(8)A or 8(3) A, 250Vac

**Defrost:** relay 8(3)A, 250Vac

**Fans:** relay SPST 8(3)A, 250Vac

**Light:** relay SPST 16(6)A, 250Vac

**Aux1:** relay SPST 8(3)A, 250Vac

**Aux2:** relay SPST 16(6)A, 250Vac

**Serial output:** RS232 serial output for XB07PR printer connection

**Serial output:** TTL serial output for monitoring system (MODBUS-RTU) protocol

**Data storing:** on the non-volatile memory (EEPROM)

**Data storage:** non-volatile memory (EEPROM)

**Kinf of action:** 1B

**Pollution degree:** normal

**Software class:** A

**Operating temperature:** 0 to 60°C (32 to 140°F)

**Storage temperature:** -30 to 85°C (-22 to 185°F)

**Relative humidity:** 20 to 85% (no condensing)

**Measuring range:** -55 to 50°C (-67 to 122°F)

**NTC probe:** -40 to 110°C (-40 to 230°F)

**PTC probe:** -50 to 150°C (-55 to 302°F)

**Resolution:** 0.1°C or 1°F (selectable).

**Accuracy of the controller at 25°C:**  $\pm 0.3^\circ\text{C} \pm 1$  digit

## 19. STANDARD VALUE OF THE CYCLES.

**Cy1: for fast chilling and conservation of foods at positive temperature**

<b>CyS</b> = tEP	<b>iS2</b> = 5°C (41°F)	<b>Pd3</b> = OFF
<b>dbC</b> = no	<b>rS2</b> = -2°C (28°F)	<b>dbH</b> = yes
<b>iS1</b> = 20°C (68°F)	<b>Pd2</b> = 2.0 h	<b>HdS</b> = 3°C (37°F)
<b>rS1</b> = -10°C (14°F)	<b>iS3</b> = 3°C (37°F)	
<b>Pd1</b> = 2.0 h	<b>rS3</b> = -2°C (28°F)	

**Cy2: for chilling and fast freezing of foods with holding**

<b>CyS</b> = tEP	<b>iS2</b> = 5°C (41°F)	<b>Pd3</b> = 2.0 h
<b>dbC</b> = no	<b>rS2</b> = -2°C (28°F)	<b>dbH</b> = YES
<b>iS1</b> = 10°C (50°F)	<b>Pd2</b> = 2.0 h	<b>HdS</b> = -18°C (0°F)
<b>rS1</b> = -10°C (14°F)	<b>iS3</b> = -18°C (0°F)	
<b>Pd1</b> = 2.0 h	<b>rS3</b> = -30°C (-22°F)	

**Cy3: direct fast freezing with holding**

<b>CyS</b> = tEP	<b>iS2</b> = -18°C (0°F)	<b>Pd3</b> = OFF
<b>dbC</b> = no	<b>rS2</b> = -30°C (-22°F)	<b>dbH</b> = yes
<b>iS1</b> = -18°C (0°F)	<b>Pd2</b> = OFF	<b>HdS</b> = -18°C (0°F)
<b>rS1</b> = -30°C (-22°F)	<b>iS3</b> = -18°C (0°F)	
<b>Pd1</b> = 4.0	<b>rS3</b> = -30°C (-22°F)	

<b>Cy4: direct fast freezing without holding</b>		
<b>CyS</b> = tEP	<b>iS2</b> =-18°C (0°F)	<b>Pd3</b> = OFF
<b>dbC</b> = no	<b>rS2</b> =-30°C (-22°F)	<b>dbH</b> = no
<b>iS1</b> =-18°C (0°F)	<b>Pd2</b> =OFF	<b>HdS</b> = OFF
<b>rS1</b> =-30°C (-22°F)	<b>iS3</b> =-18°C (0°F)	
<b>Pd1</b> = 4.0	<b>rS3</b> =-30°C (-22°F)	

## 20. STANDARD VALUES OF THE PARAMETERS.

Lab	Description	Values	Level
<b>Set</b>	Set point	3.0	- - -
<b>Hy</b>	differential	2.0	Pr1
<b>AC</b>	Anti-short cycle delay	1	Pr2
<b>PAU</b>	Time of stand by	0	Pr2
<b>PFt</b>	Maximum acceptable duration of power failure	15	Pr2
<b>Con</b>	Compressor ON time with faulty probe	15	Pr2
<b>COF</b>	Compressor OFF time with faulty probe	10	Pr2
<b>rPO</b>	Thermostat probe calibration	0.0	Pr2
<b>EPP</b>	Evaporator probe presence	YES	Pr2
<b>EPO</b>	Evaporator probe calibration	0.0	Pr2
<b>i1P</b>	Insert probe 1 presence	YES	Pr2
<b>i1o</b>	Insert probe 1 calibration	0.0	Pr2
<b>i2P</b>	Insert probe 2 presence	n	Pr2
<b>i2o</b>	Insert probe 2 calibration	0	Pr2
<b>i3P</b>	Insert probe 3 presence	n	Pr2
<b>i3o</b>	Insert probe 3 calibration	0	Pr2
<b>rEM</b>	Probe selection to stop chilling cycle	iPt	Pr2
<b>CF</b>	Temperature measurement unit	°C	Pr2
<b>rES</b>	Resolution (for °C):	dE	Pr2
<b>Lod</b>	Local display	rP	Pr2
<b>rEd</b>	Remote display	rP	Pr2
<b>d1P</b>	Door switch polarity	cL	Pr2
<b>Odc</b>	Open door control	F-C	Pr2
<b>dOA</b>	Open door alarm delay	5	Pr2
<b>dLc</b>	Stop count down of running cycle	y	Pr2
<b>rrd</b>	Regulation restart after door open alarm	Y	Pr2
<b>d2F</b>	Second digital input function	EAL	Pr2
<b>d2P</b>	Second digital input polarity	cL	Pr2
<b>did</b>	Time delay for digital input alarm	5	Pr2
<b>oA1</b>	First configurable relay function	tMr	Pr2
<b>oA2</b>	Second configurable relay function	ALL	Pr2
<b>oA3</b>	Third configurable relay function	Lig	Pr2
<b>2CH</b>	Compressor setting during the holding	C1	Pr2
<b>OAt</b>	Second compressor switching on delay	3	Pr2
<b>OAS</b>	Set point for second compressor	0	Pr2
<b>OAH</b>	Differential for second compressor	2.0	Pr2
<b>OAi</b>	Probe selection for second compressor	rP	Pr2
<b>OSt</b>	Auxiliary output timer	0	Pr2
<b>OSS</b>	Set point for auxiliary output	0	Pr2
<b>OSH</b>	Differential for auxiliary output	2.0	Pr2
<b>OSi</b>	Probe selection for auxiliary output	rP	Pr2
<b>tdF</b>	Defrost type	rE	Pr2
<b>idF</b>	Interval between defrost cycles	6.0	Pr2
<b>dtE</b>	Defrost termination temperature	8	Pr2
<b>MdF</b>	Maximum length for defrost	20	Pr2
<b>dFd</b>	Temperature displayed during defrost	rt	Pr2
<b>Fdt</b>	Drip time	0	Pr2
<b>dAd</b>	Defrost display time out	20	Pr2
<b>FnC</b>	Fan operating mode	c_n	Pr2

Lab	Description	Values	Level
<b>FSt</b>	Fan stop temperature	30	Pr2
<b>AFH</b>	Differential for the stop temperature and for the alarm	2.0	Pr2
<b>Fnd</b>	Fan delay after defrost	2	Pr2
<b>ALU</b>	MAXIMUM temperature alarm	30	Pr2
<b>ALL</b>	Minimum temperature alarm	30	Pr2
<b>ALd</b>	Temperature alarm delay	15	Pr2
<b>EdA</b>	Alarm delay after defrost	30	Pr2
<b>tbA</b>	Silencing alarm relay	YES	Pr2
<b>tCy</b>	Duration of last cycle	---	Pr1
<b>tP1</b>	Duration of first phase of the last cycle	---	Pr1
<b>tP2</b>	Duration of second phase of the last cycle	---	Pr1
<b>tP3</b>	Duration of third phase of the last cycle	---	Pr1
<b>Adr</b>	Address for RS485:	1	Pr2
<b>bUt</b>	Buzzer activation at the end of the cycle	30	Pr2
<b>tPb</b>	Type of probe	ntc	Pr2
<b>rEL</b>	Release code (readable only)	2.0	Pr2
<b>Ptb</b>	Parameter code (readable only)		Pr2

	
<p><b>Dixell S.r.l.</b> - Z.I. Via dell'Industria, 27 - 32010 Pieve d'Alpago (BL) ITALY  Tel. +39.0437.9833 r.a. - Fax +39.0437.989313 - EmersonClimate.com/Dixell - dixell@emerson.com</p>	